
# Child Life

Playsets

PG202

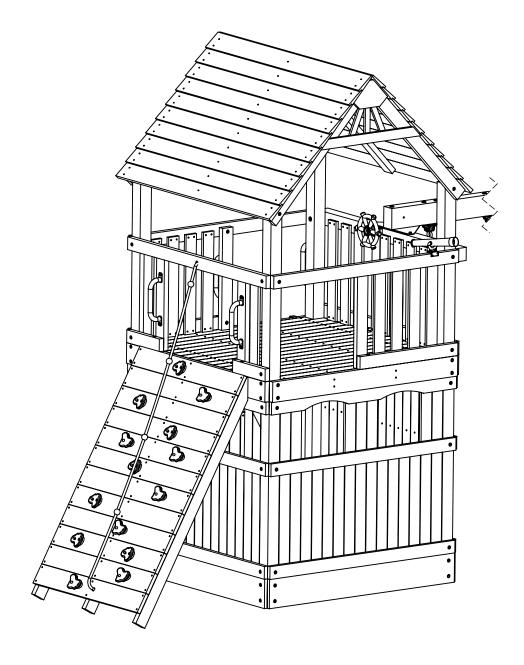

PA-MA-0005-03

### STANDARD PARTS LIST

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	PG-54-0006	Picnic Table Board Long	2
2	PG-54-0012	Enclosure Window Front	2
3	PG-54-0013	Enclosure Door Front	1
4	PG-54-0014 Enclosure Rail Opened		2
5	PG-54-0016 Enclosure Rail		7
6	PG-14-0010	28 1/2" Enclosure Slat	20
7	PG-14-0013	43 3/4" Enclosure Slat	34
8	PG-54-0015 Enclosure Rail Short		2
9	PG-HW-S003 #8 X 1.5" FLAT HEAD WOOD SCREW		250
10	PG-HW-S004	#8X2" FLAT HEAD WOOD SCREW	10
11	PG-HW-L003	5/16" X 2.5" LAG SCREW	24
12	PG-HW-W003	5/16" FLAT WASHER	24
13	PG-HW-M001	Bracket	1
14	PG-HW-S001	#10 X 1" ROUND HEAD SCREW	4
15	PG-HW-W001 #10 FLAT WASHER		4

### PARTS USED INCLUDED WITH BASE SET

FOR EASE OF IDENTIFYING PARTS RE-LABEL PARTS FROM THE BASE SET AS SHOWN BELOW. IN THE FOLLOWING INSTRUCTIONS PARTS WILL BE REFERRED TO AS THE "NEW #".

OLD#	NEW#	PART#	DESCRIPTION	QTY.
24 55 23 08 53 47	1 10 PART # PART # PART #	PG-54-0006 PG-HW-S004 PG-54-0005 PG-24-0002 PG-HW-L004 PG-HW-W003	Picnic Table Board Long #8X2" Flat Head Wood Screw Picnic Table Board Short Safety Rail 5/16" x 3" Lag Screw 5/16" Flat Washer	13 75 2 3 4 4

 
## HARDWARE IDENTIFICATION

### NOTE TO INSTALLER

You must assemble this product in accordance with these Assembly Instructions.

After assembly is complete, please give this Owner's Manual to the owner of the play system.


### Measurement taken from bottom of bolt head to the bottom of bolt



 PG-HW-L003 5/16" X 2.5" LAG SCREW QTY (24)








#14 PG-HW-S001 #10 X 1" ROUND HEAD SCREW QTY (4)




#12 PG-HW-W003 5/16" FLAT WASHER QTY (24)




#15 PG-HW-W001 #10 FLAT WASHER QTY (4)

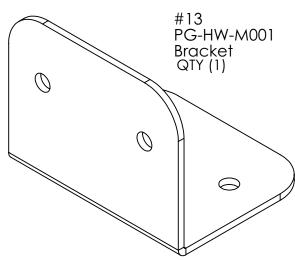


### PARTSIDENTIFICATION

 


#1 PG-54-0006 Picnic Table Board Long QTY (2)

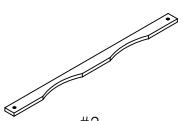


#2 PG-54-0012 Enclosure Window Front QTY (2)

 


PG-54-0013
Enclosure Door Front
QTY (1)

 

#4 PG-54-0014 Enclosure Rail Opened QTY (2)

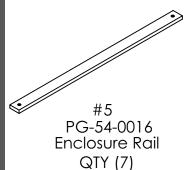

#6 PG-14-0010 28 1/2" Enclosure Slat QTY (20)

 


#7 PG-14-0013 43 3/4" Enclosure Slat QTY (34)



#8 PG-54-0015 Enclosure Rail Short QTY (2)

### INSTALL FLOOR SUPPORT

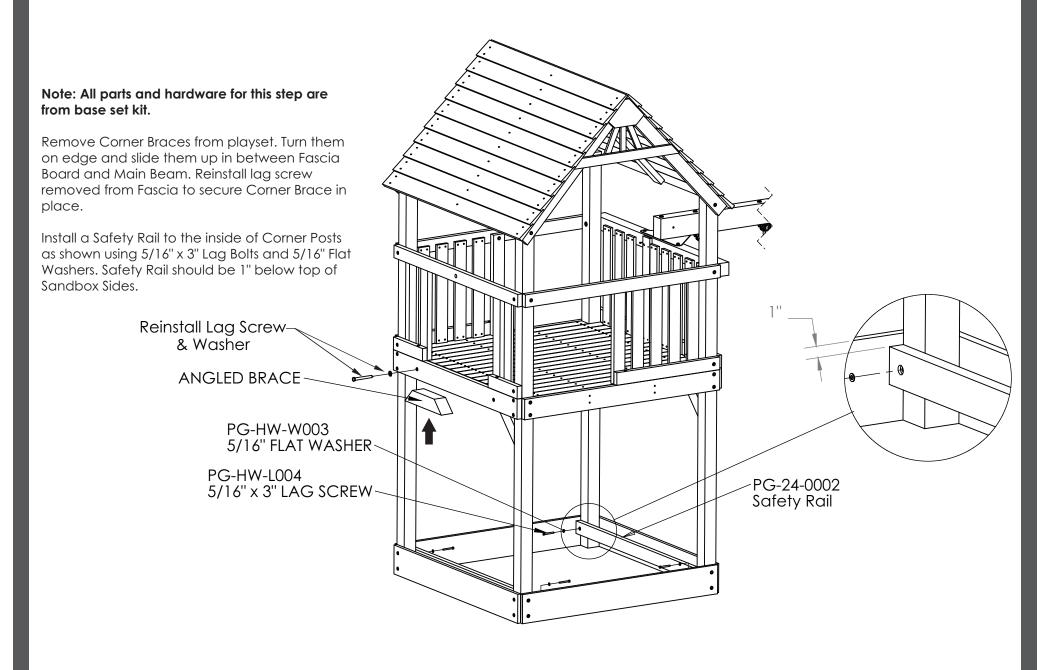


### INSTALL FLOOR

Note: All parts for this step are from base set kit except 2 Long Picnic Table Boards #1.

Layout and evenly space 2 Short Picnic Table Boards in between corner posts as shown. Secure using 4 #8 x 2" Flat Head Screws.


Center a Safety Rail under Short Picnic Table Boards as shown and secure using 2 #8 x 2" Flat Head Screws.

Layout and evenly space 15 Long Picnic Table Boards and secure using 75 #8 x 2" Flat Head Screws.

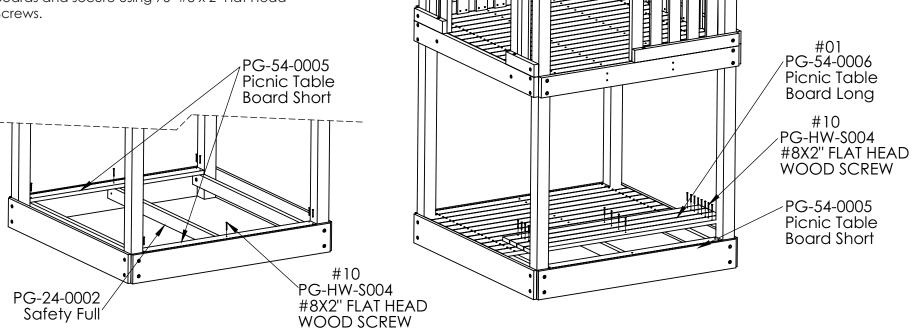


### INSTALL ENCLOSURE RAILS

Secure Enclosure Rails #4, #5 and #8 to Corner Posts using Hardware # 11 and #12. Note Swing Beam side in relation to Enclosure Rail #5.

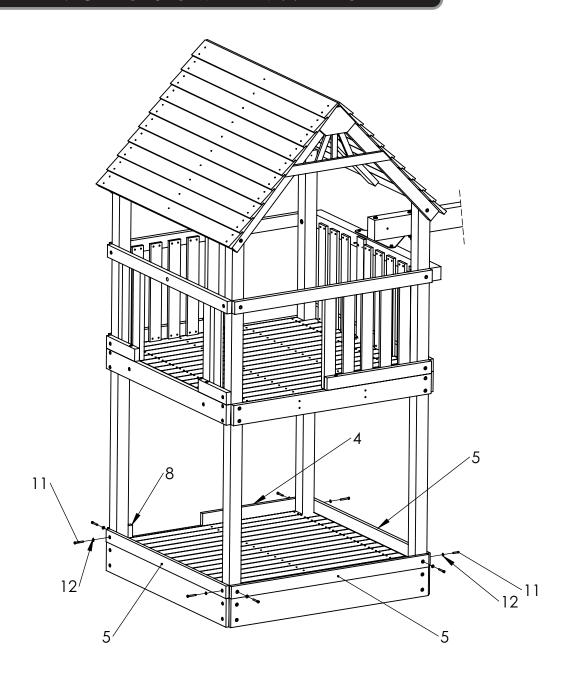

### INSTALL WINDOW & DOOR FRONT

Secure Window Front #2, Door Front #3 and Enclosure Rail #5 to Corner Posts using Hardware # 13 and #12. Note Swing Beam side in relation to Enclosure Rail #5 and Door Front #3.

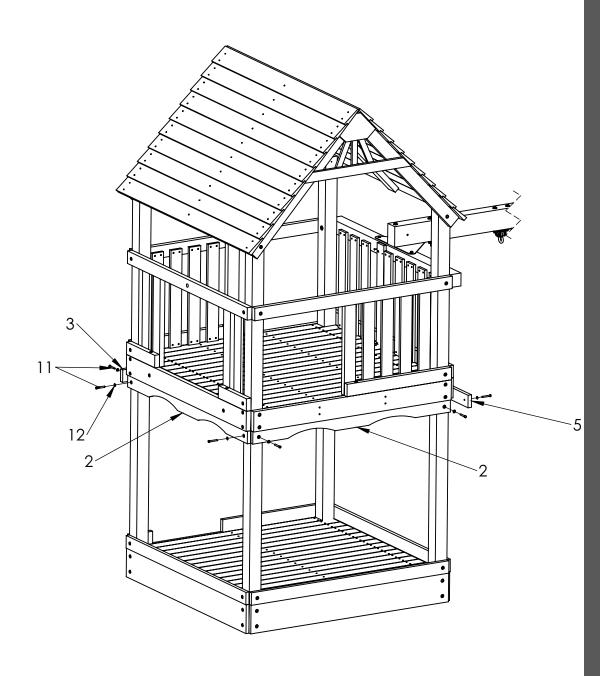

### DOOR OPENING


Secure 43 3/4" Enclosure Slat #7 to Door Front #3 at top and Enclosure Rail #4 at bottom using Hardware #9.

Note: Door opening should be 24" at top and bottom.


Make sure Enclosure Rail #4 is flush with front of sandbox side and attach Bracket #13 as shown with hardware #15 and #14. 13 NOTE: This hole goes towards the top of part.

### INSTALL ENCLOSURE RAILS

Attach Enclosure Rails #4, #5 and #8 to Corner Posts as shown using Hardware # 11, #12 and #9. Top of Enclosure Rails should be 26 1/4" from top of previously installed Enclosure Rails.

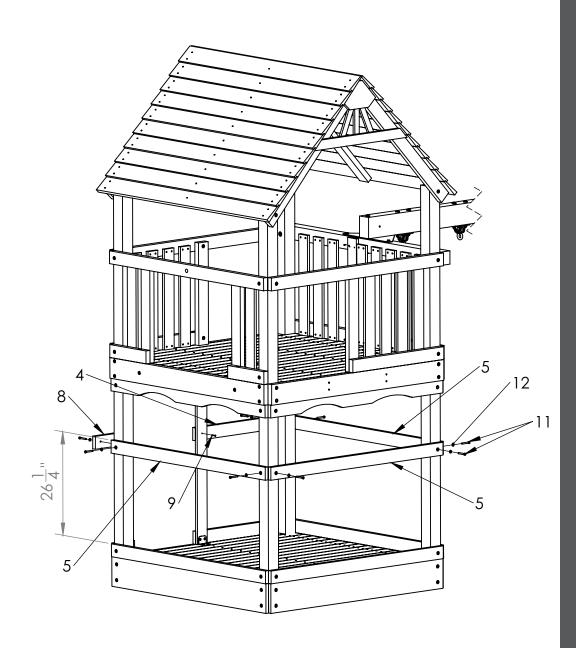


### ENCLOSEBACK

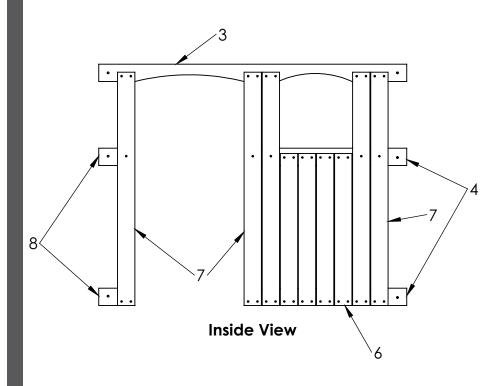


HINT: TO ACHIEVE PROPER SPACING STAND BOARDS UP BEFORE SECURING ANY BOARDS, AND TACK IN PLACE BY STARTING ONE TOP SCREW IN EACH BOARD AS SHOWN.


Secure Enclosure Slats #6 and #7 from inside set to enclose the back of the playset as shown using hardware #9.

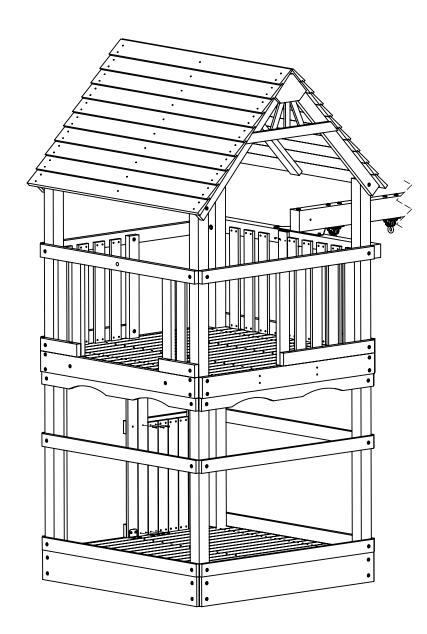


### ENCLOSE SWING BEAM SIDE

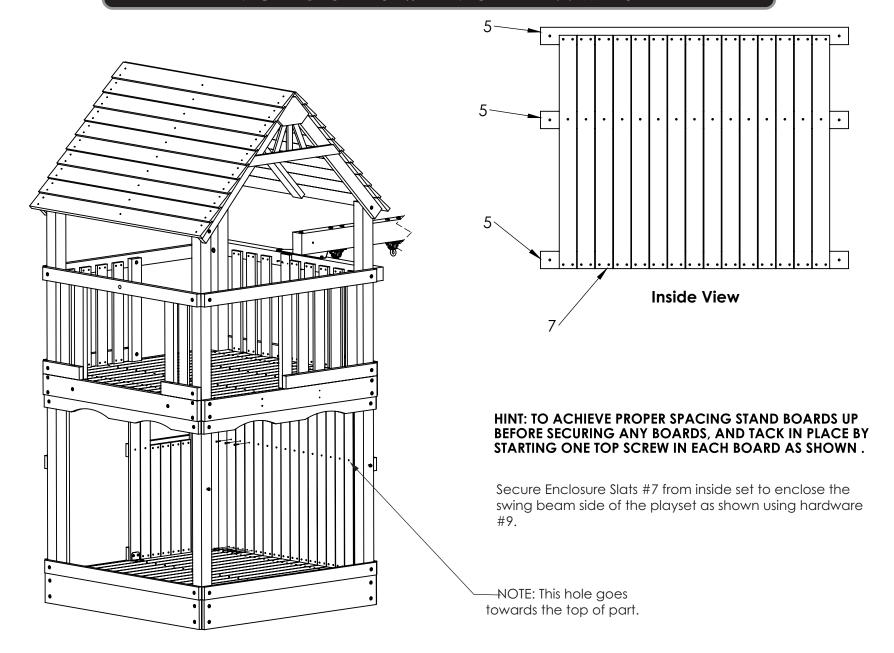


### ENCLOSEFRONT

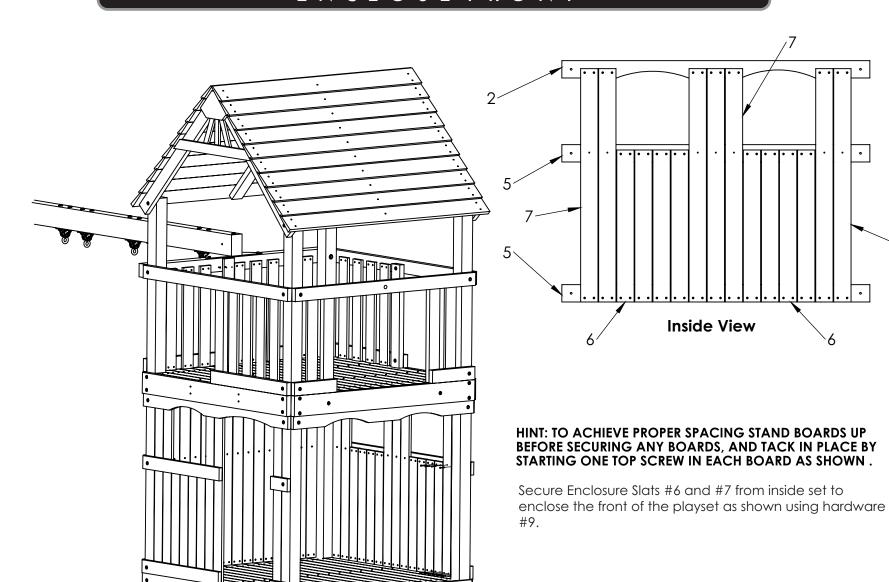

### ENCLOSE SIDE

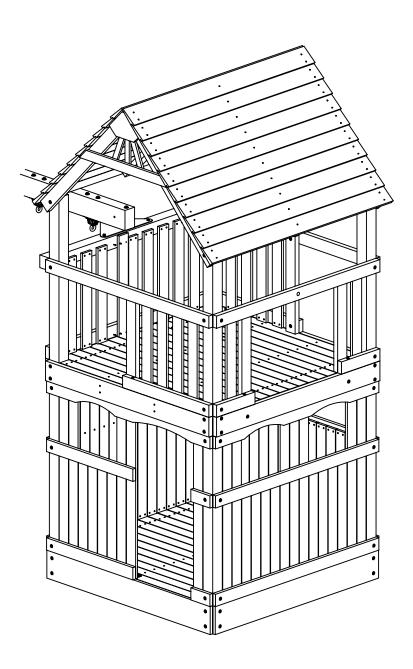

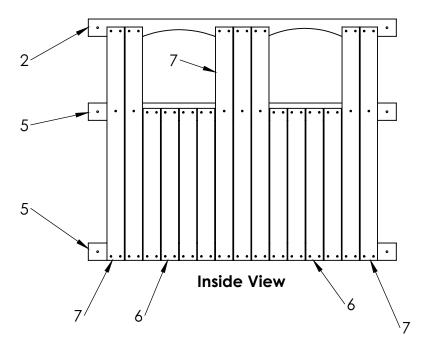

Secure Enclosure Slats #6 and #7 from inside set to enclose the side of the playset as shown using hardware #9.

## Child Life® Playsets

Limited Two and Ten Year Warranties

Subject to proper installation and normal residential use, Escalade Sports warrants, subject to the limitations stated below, to the original retail purchaser, all chain, seats, swing hangers, hardware, metal braces and accessories to be free from defects in material and workmanship for a period of two years from date of purchase. In addition, Escalade Sports warrants all ropes for a period of one year. Cracks in non-functional plastic components are not considered defects in materials and workmanship if they do not affect the functionality of the playset. Merchandise covered under this limited two-year warranty will, at our option, be repaired or replaced, excluding any freight or labor fees that may be required.

In addition, for a period of ten years, which the original purchaser owns the playset, Escalade Sports warrants, to the original retail purchaser, all wooden components against structural failure due to corrosion, wood rot, or insect infestation. Seasonal checks and surface cracks, knotholes and knots, natural characteristics of all wooden play equipment, not resulting in structural failure, are not covered under this warranty.

Components covered under this limited ten year warranty will be replaced free of charge excluding freight and labor fees.

Non-residential use of the playset is prohibited and voids the warranty as the playsets are designed for residential use only.

Escalade Sports reserves the right to examine photographs and/or physical evidence of merchandise claimed to be defective, and to recover said merchandise, prior to disposition of warranty claims. Merchandise returned to our factory for examination or recovery must be shipped freight prepaid, unless a Return Authorization Number is issued.

No warranty is offered on equipment subjected to abuse, negligence, improper installation, vandalism, acts of God, unauthorized alteration or attachment to equipment other than our own, or improper use, service or repair by customer or any third party. Escalade Sports assumes no responsibility for incidental or consequential damages which may arise from the purchase or use of our equipment. Please supervise your children's play activity and maintain your play equipment periodically.

THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR USE. OASIS PLAYSETS DOES NOT ASSUME, OR AUTHORIZE ANY PERSON TO ASSUME FOR US, ANY OTHER LIABILITY IN CONNECTION WITH THE SALE OF OUR PRODUCTS.

For warranty service, contact:

Childlife Playsets Escalade Sports P.O. Box 889 Evansville, IN 47706 1-800-GO-SWING

Or E-Mail us at: playgroundcs@escaladesports.com