


# **MADERA** C.KING/E.KING BED



ASSE					
BOX#1  A. HEADBOARD	1 P	00		HARDWARE PACKE	D IN BOX#2
L. HEAD RAIL M. RIGHT WING	1 P	1 PC 1 PC	1	ALLEN BOLT(5/16"x1")	<b>Omm</b>
N. LEFT WING	1 P	C	2	ALLEN BOLT(5/16"x2")	© Diminima
* * * * * * *	0 0		3	ALLEN BOLT(5/16"x3")	
A	L		4	THREADED BOLT(5/16"x4-1/4")	
	0 0		5	FLAT WASHER(5/16")	
M	N		6	LOCK WASHER(5/16")	
BOX#2		1.00	7	ALLEN KEY(5/16"x4")	
B. RIGHT SIDE RAIL C. LEFT SIDE RAIL D. FOOTBOARD		1 PC 1 PC 1 PC	8	WRENCH(5/16"x1/2")	
E. SLAT F. CENTER SLAT SUPPORT		39 PCS 2 PCS	9	DOWEL(3/8"x1-1/2")	
G. SIDE RAIL SLAT CLIP H. CENTER SUPPORT SLAT J. HEADBOARD/FOOTBO	CLIP 2	26 PCS 26 PCS 4 PCS	10	MENDING PLATE	0 0
K. SLAT SUPPORT LEG		4 PCS	11	HEX NUT(5/16"x12MM)	

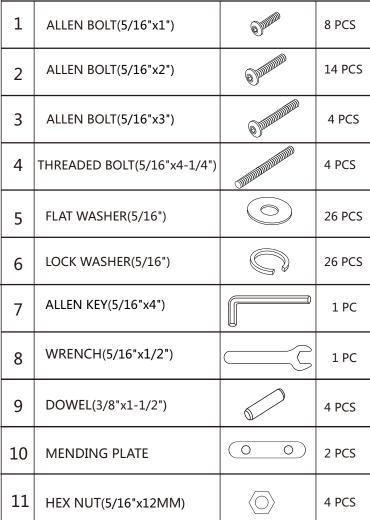

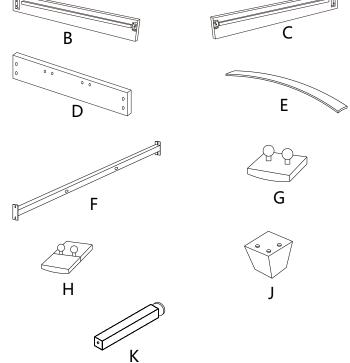


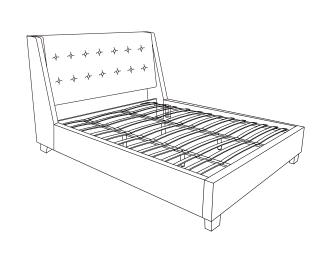



UPDATED:JUNE 20TH, 2022






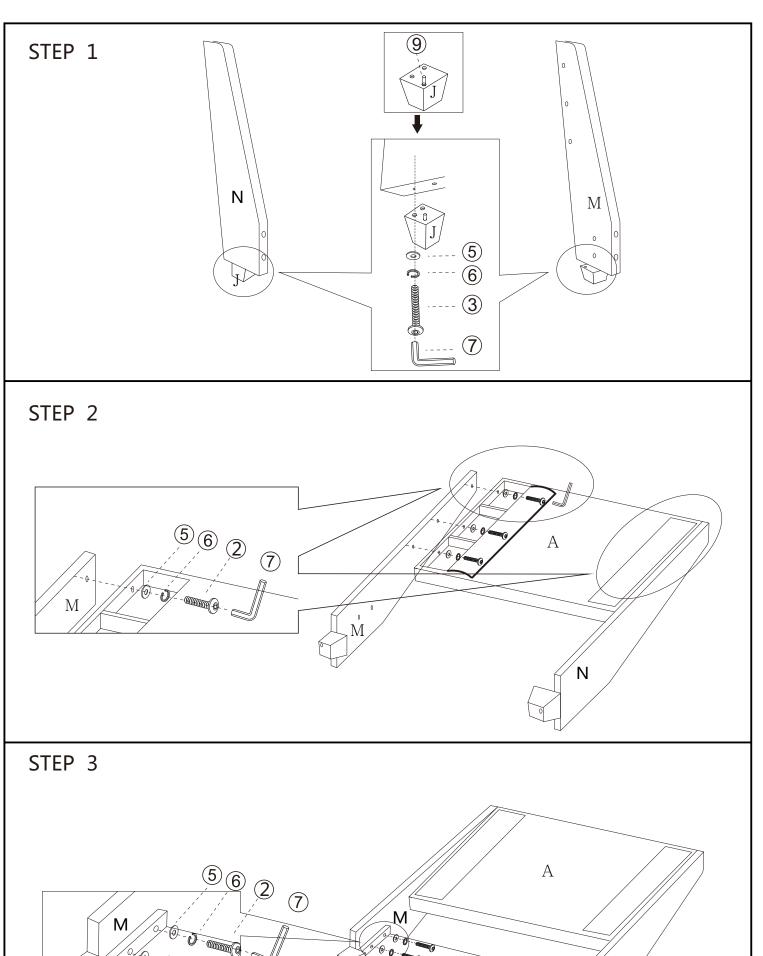


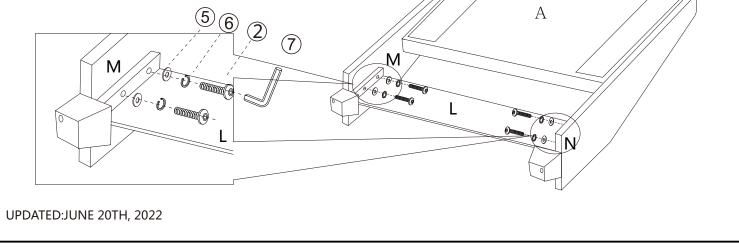


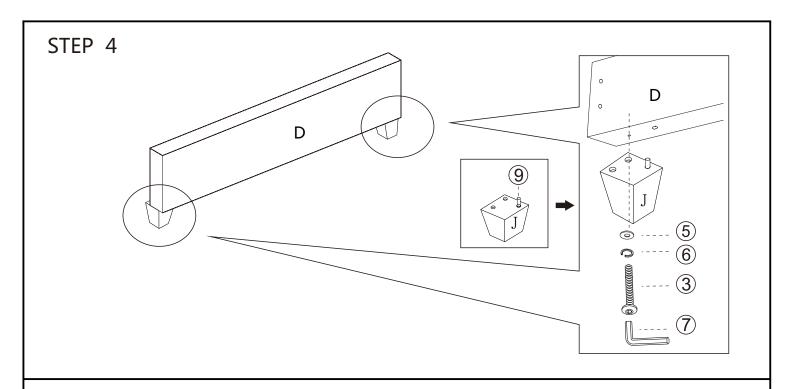

### STEP 5

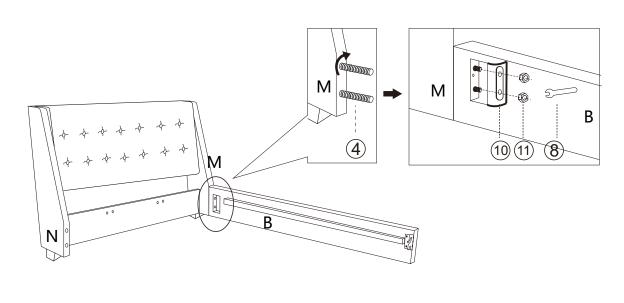

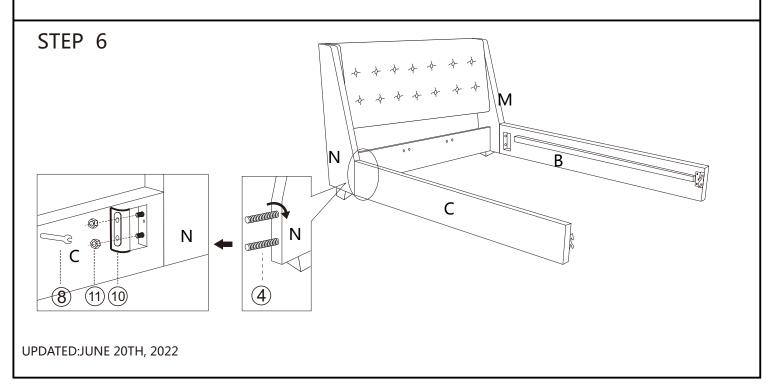


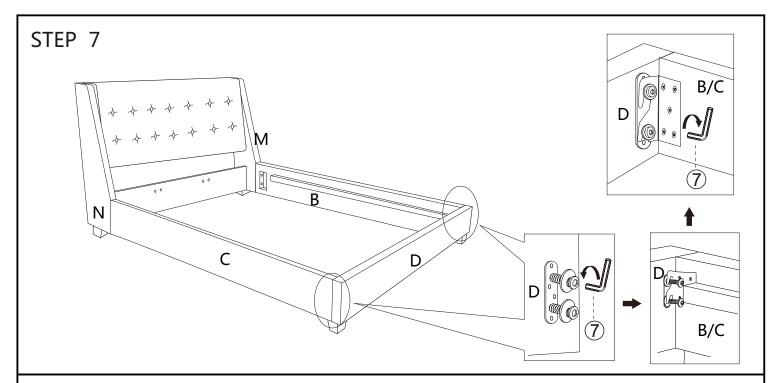





#### **STOP**


- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 8, 9, 10,& 11 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 8.

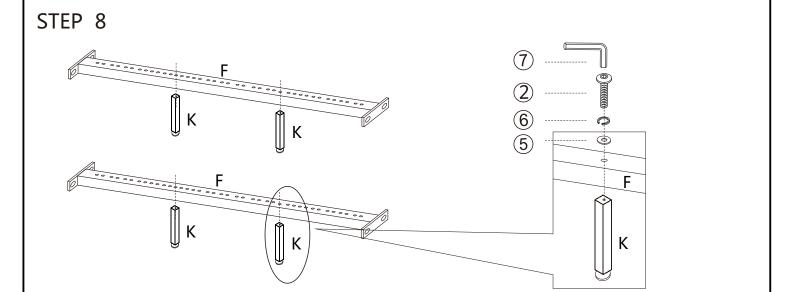

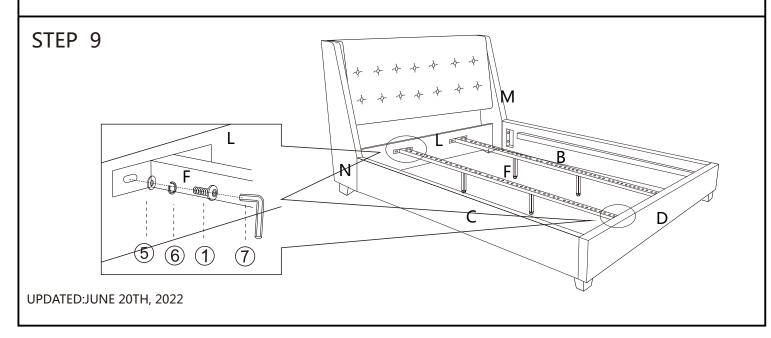

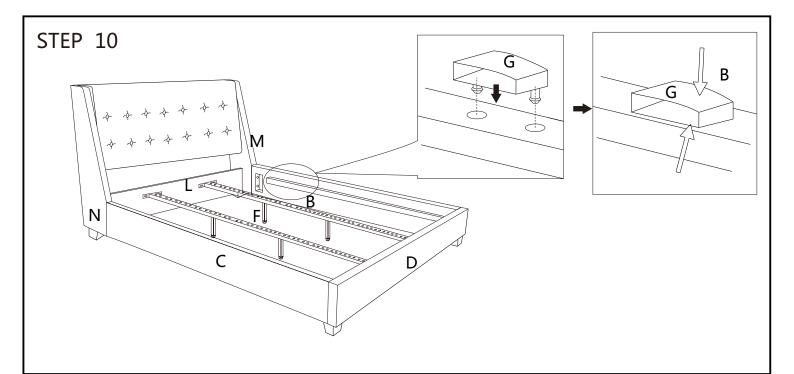

#### STEP 11

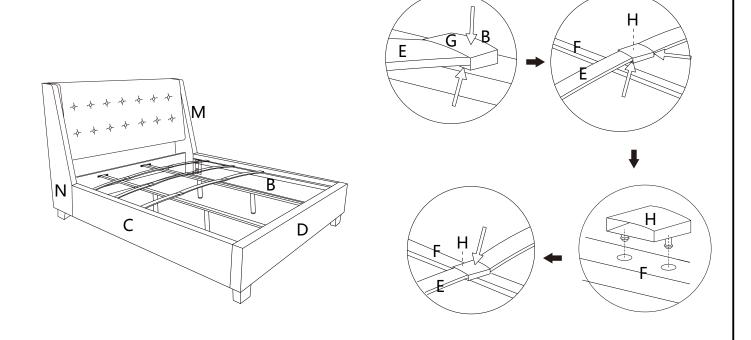

## INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each leg support (K).

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each leg support is applying equal, upward pressure on the bed support slat.



#### MAINTENANCE INSTRUCTIONS:

- Remove box spring and mattress before moving your bed.
- Lift your bed when moving it.
   Dragging can damage the leg support.
- Readjust levelers after moving your bed.

## MADERA C.KING/E.KING BED ASSEMBLY INSTRUCTIONS



APPENDIX A:ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.

PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.



#### **WARNING!**


SIDE RAIL CLEATS ARE HELD IN PLACE USING PHILLIPS HEAD SCREWS. ONCE THEY ARE REMOVED THE USER WILL NOT BE ABLE TO SAFELY RE-INSTALL THE SIDE RAIL CLEATS FOR FUTURE USE WITH A STANDARD BOX SPRING OR FOUNDATION.

#### THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

E. SLAT	39 PCS
F. CENTER SLAT SUPPORT	2 PCS
G. SIDE RAIL SLAT CLIP	26 PCS
H. CENTER SUPPORT SLAT CLIP	26 PCS
K. SLAT SUPPORT LEG	4 PCS

#### STEP 1:

USE A PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED) TO UNSCREW THE PHILLIPS SCREWS AND REMOVE THE PRE-ASSEMBLED SIDE RAIL CLEATS.

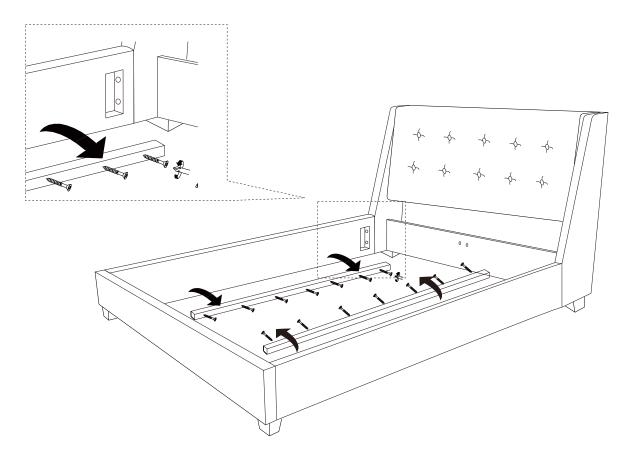

UPDATED:JUNE 20TH, 2022