 


General Assembly Guidelines

 
- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are: wood dowels, screws and bolts.
- V. The provided glue is to secure wood dowels in place. When first inserting dowels, locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately.




In future assembly steps when dowels are necessary to attach assembly parts together, place a small amount of glue on the end of the dowel before attaching parts together. Wipe away excess glue immediately.




VI. A Phillips head screwdriver is required for the assembly of this product .



 VII. Power tools should not be used to assemble this product.




VIII. Drill may be needed for securing product to wall.

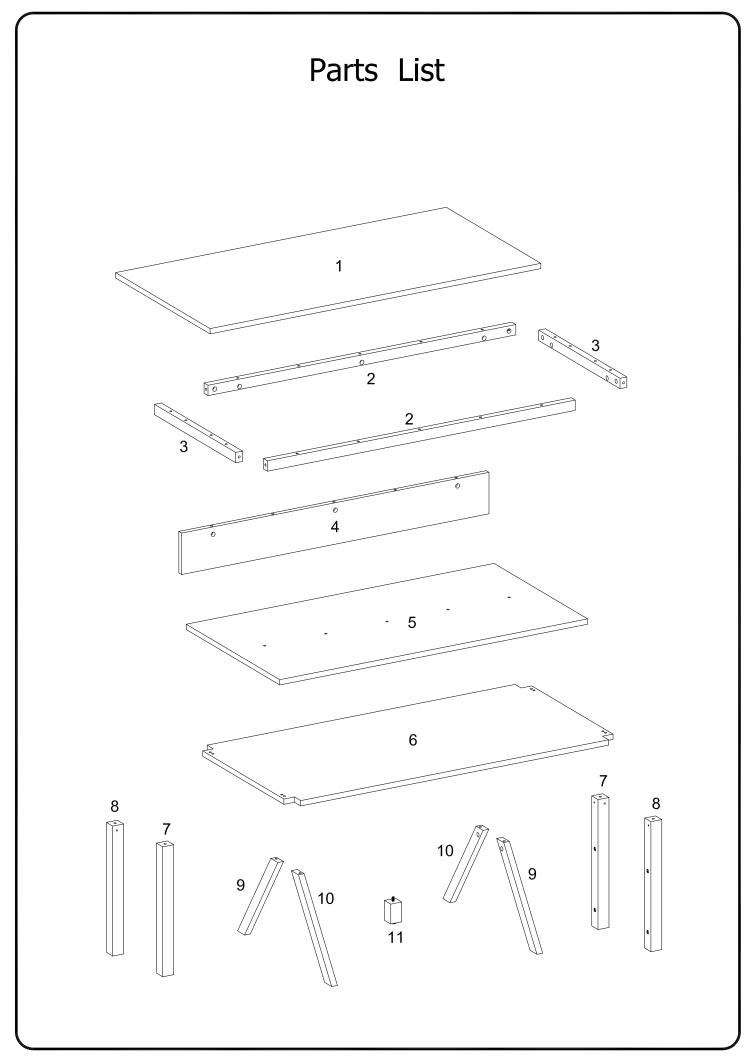

Copyright © 2020, by Walker Edison Furniture Co., LLC. All rights reserved.


Hardware List


А		Ø8x30mm	Wooden dowel	20	pcs
В		Ø15x11mm	Cam lock	25	pcs
С		Ø6x35mm	Cam bolt	25	pcs
D		Ø6x50mm	Screw	7	pcs
Е		M 4	Hex Key	1	рс
F	and the second s	M6x15mm	Bolt	16	pcs
G	\bigcirc	Ø30mm	Sticker	25	pcs
Н	ØØ		Connecting iron sheet	8	pcs
J			Glue tube	1	рс

 


Philips head screwdriver required for assembly (not included)

The hardware quantities listed above are required for proper assembly. Some extra hardware may also have been included.

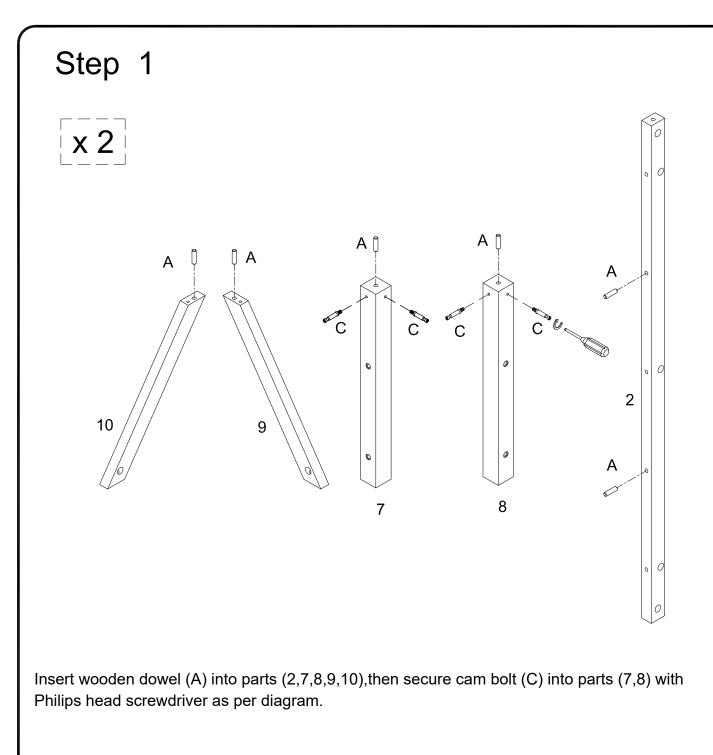

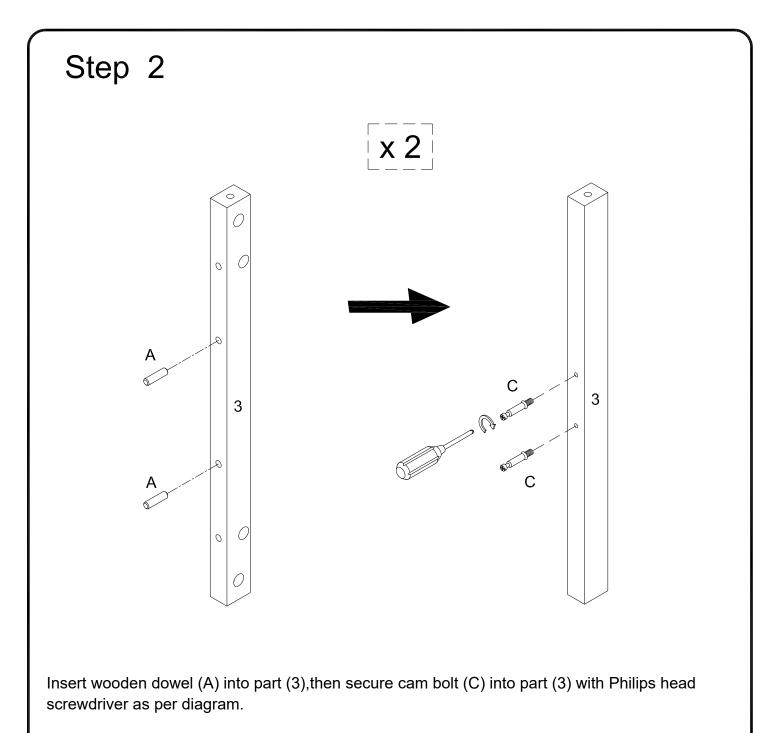

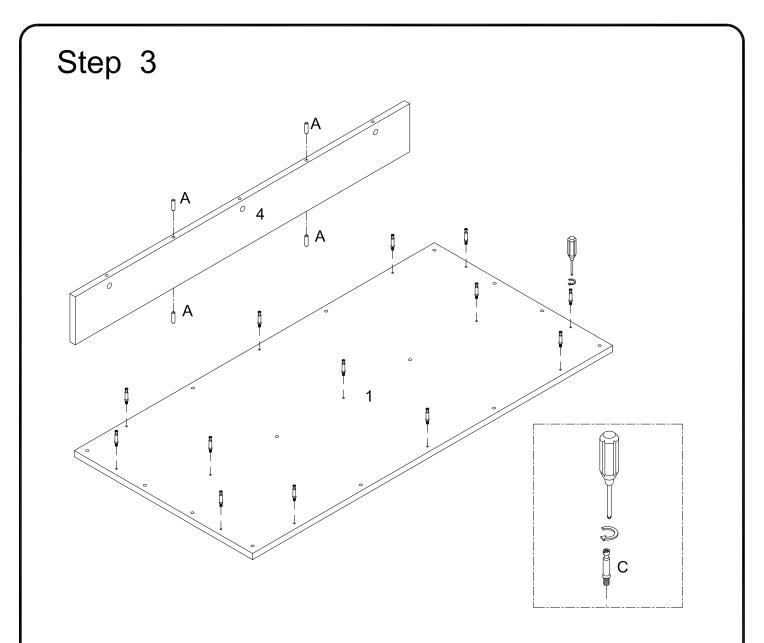

Insert wooden dowel (A) into part (4), then secure cam bolt (C) into part (1) with Philips head screwdriver as per diagram.

