

88 5411 351


Cabin Creek Bar Table

IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damage occurring to the parts.


We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

Home
Styles

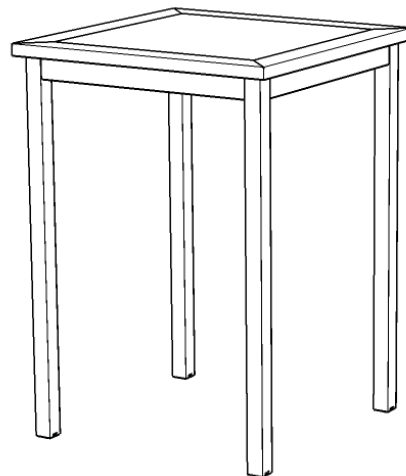

Part List

 Carton No. 88 5411 351



A.
Table Top
1 Pc.

Carton No. 88 5411 352



B.
Leg
4 Pcs.

 
Hardware List



Small Hex Wrench
1 Pc.



Hex Wrench
1 Pc.



Head Cap Bolt
8 Pcs. (+1 extra)



Spring Washer
8 Pcs. (+1 extra)




Flat Washer
8 Pcs. (+1 extra)

Assembly Instructions

IMPORTANT

- * Please keep Key Wrench in a safe place as you may need to tighten up the Head Cap Bolts in the future.
- * Do not tighten up all the bolts until each part is properly assembled.
- * Use a soft cloth between these parts and the floor.

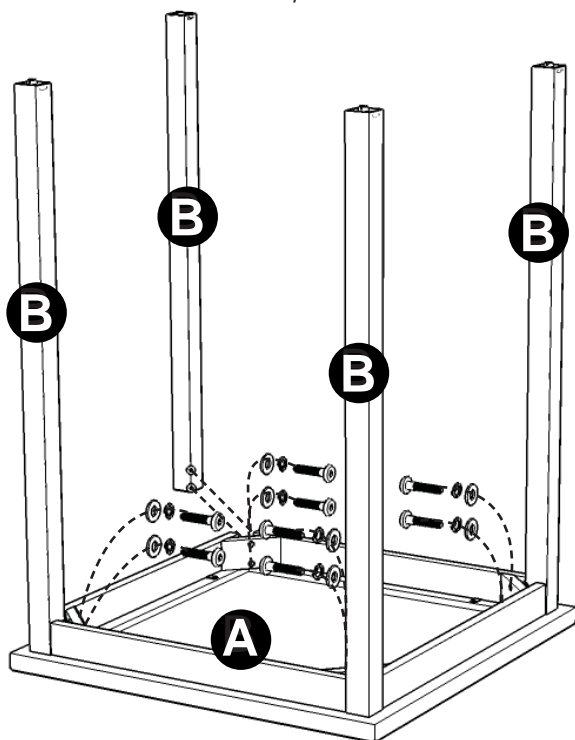

Place Table Top (A) upside down on a soft cloth.

Attach Legs (B) with Head Cap Bolts, Spring Washers and Flat Washers. (see Figure 1)

Turn the unit over its' upright position.

To the level the unit, adjust the adjustable levelers on the bottom of legs. (see Figure 2)

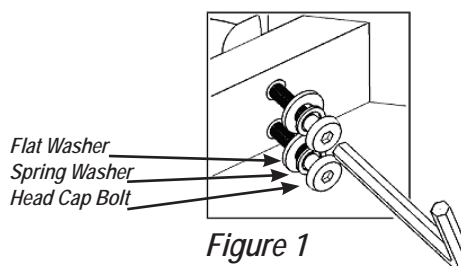


Figure 1

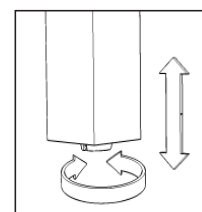


Figure 2

Note: Unit must be level to work properly.

Tools recommended for assembly : Level

Home Styles Consumer Assistance: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319