Installation Instructions

Double Handle Laundry Faucet

Tools

- Adjustable Wrench
- Pipe Wrench
- Screwdriver
- Thread Seal Tape
- Protective Goggles



Maintenance

Our faucets are crafted with the skill and quality to last a lifetime. By following the instructions in this booklet you will enjoy this quality item for years to come. To clean, wipe gently with a soft damp cloth, then wipe dry. Our finishes are very durable. However, to assure a long lasting luster, harsh abrasives or polishes should be avoided.

Safety Tips

Turn off the water before loosening any connections or disassembling the faucet. When working underneath a sink, protect your eyes from any dust or dirt by wearing safety glasses.

 
Important Points

Most faucet problems can be fixed by tightening a nut or connection or replacing a washer. Check supply line connections for any leaks and tighten if necessary. Don't overtighten any supply line connections.



Preparation/Assembly (Steps 1-5)

- 1. Shut off the water supply by turning the handle clockwise and remove the existing faucet.
- 2. Remove the union nuts (1) from the faucet body (4) and slide them up the hot and cold water supply pipes. Apply thread seal tape to all threaded applications in a clockwise motion.



3. Thread the supply connection fittings (2) onto the hot and cold water supply pipes and tighten with a wrench.



4. Slide the union nuts (1) down the supply pipes and attach them to the faucet body (4) and tighten with a wrench in a clockwise motion.




9. Tighten all connections and turn on the water supply by turning the handle counter-clockwise. Remove the aerator from the faucet spout. Run water for at least one minute to flush any sediment in the spout and body. Check for leaks. After flushing system re-attach the aerator.



Troubleshooting

If a faucet installation doesn't deliver water properly or leaks, finding the cause and fixing it can be easy.

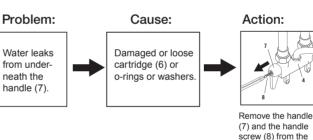






Loosen and remove the faucet body (4).

 Check for worn o-rings the cartridge (6) from or washers. Re-install into the faucet body (4)





the leak

faucet body (4).



If the leak persists. loosen the union nut (1) and supply connection fitting (2). Re-apply the thread seal tape to threaded



Tighten all connections



Manufactured for: Jones Stephens Corp. 3249 Moody Parkway, Moody, AL 35004