
Purchase Date: / / Order/Customer Reference Number:



Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products will be sent at our discretion within the 1-year warranty period. Proof of purchase, with the date of purchase as well as photos of the merchandise defect, must be provided. Photos are used to determine the cause of defects and for future quality control. Register your warranty at https://tiny.cc/SunnydazeWarranty If you have any questions, comments or concerns, feel free to contact us by phone at 833-982-1977, by email: customerservice@sunnydazedcor.com, or via our contact us page at https://tiny.cc/SunnydazeContact

ARNOLD COUNTER-HEIGHT DINING TABLE BWD-894

Carefully read all assembly and information in this manual before using this product. Save this manual for future reference. Assemble components on a soft, clean surface to avoid damaging the finish.

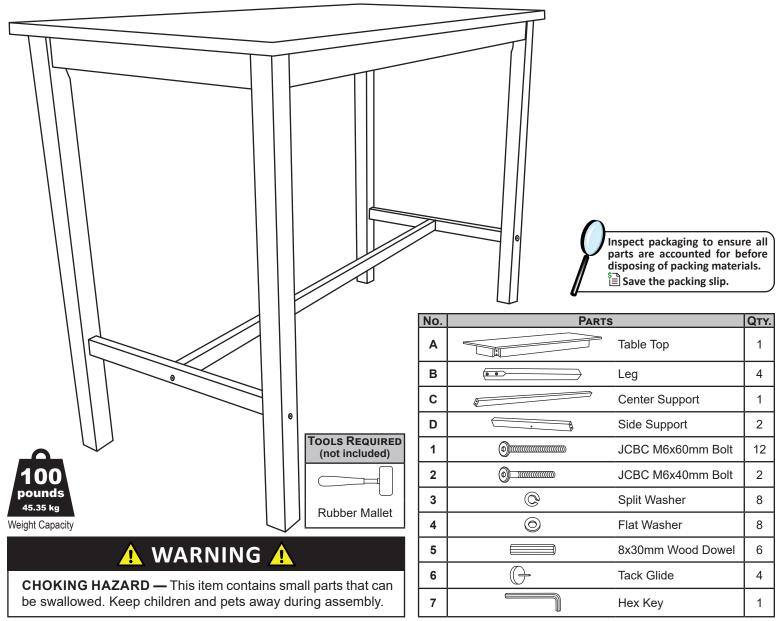

() HELPFUL HINT

NOTE: Over time and with use, the bolts may become loose. Save the included tool for tightening loosened hardware.

Sunnydaze Decor advises reading this manual fully, and assembling the item soon after purchase. Check that all parts are accounted for and familiarize yourself with the assembly before beginning.

Sunnydaze Decor

•••••

ASSEMBLY




Tip: Always fully insert the hex key inside the designated notch of the bolt.

If the hex key is not entirely inside the notch, the hex key could slip out, causing damage to the bolt head. In addition, repeated hex key slipping will cause the notch to become rounded, making it difficult or impossible to tighten the bolt.

Review all steps and understand assembly before beginning.

Do not fully tighten hardware until all frame components have been loosely assembled.

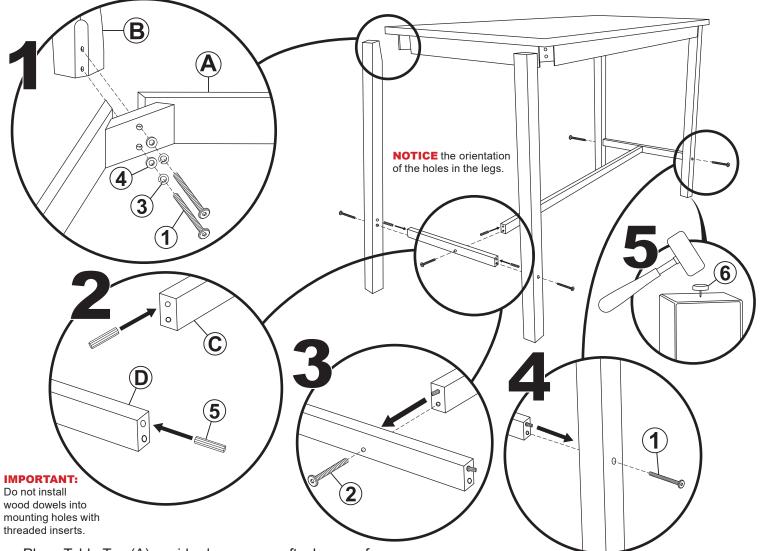

- Place Table Top (A) upside-down on a soft, clean surface.
- Identify the correct orientation for each table leg, ensuring the side of the leg that has two holes faces inward on the short side of the table, as shown above. Align Leg (B) with the corner of the table top and loosely fasten using two sets of Flat Washer (4), Split Washer (3), and JCBC M6x60mm Bolt (1) as shown. Repeat until all legs have been loosely attached.
- Insert 8x30mm Wood Dowels (5) into the top holes of Center Support (C), as shown. Insert remaining Wood Dowels (5) into the top holes of Side Supports (D).
- Align the dowels in the center support with the mounting holes in the middle of the side supports. Then, secure the side supports to the center supports using JCBC M6x40mm Bolts (2).
- Align the side supports with the table legs and secure using JCBC M6x60mm Bolts (1) as shown.

• •

- Fully tighten all hardware.
- Ensuring it is centered, install one Tack Glide (6) into the bottom of each leg.

Sunnydaze Decor

BW21-08T

SunnydazeDecor.com

••

Care & Maintenance



Clean the furniture using a dry, soft cloth or clean feather duster.



Remove stains with a slightly damp cloth and mild soap. Dry with a soft cloth to prevent water damage.



Do not clean with harsh cleansers or polish.



Do not put hot items or any liquids directly on the furniture surface.

🚹 SAFETY STATEMENTS & WARNINGS 🚹

- For indoor use only.
- This product is for residential use only; institutional or commercial use will automatically void the product warranty.
- Ensure fittings are tight before use. Periodically check fitting to ensure they are tight.
- Do not sit, stand or climb on any part of this unit.
- Do not exceed the weight capacity of this item.
- Do not place liquids or hot items directly on the unit.
- Never use chemical cleaning products or polishes as they may damage the finish.
- Avoid long-term exposure to sunlight.
- Avoid placing near heating or cooling vents as forced air is be very drying and could damage the wood.
- Use a padded barrier to protect the furniture surface when using writing utensils.

Any modification to the product or failure to follow recommended care will void the product warranty.

If you experience issues with assembly or the product was damaged during shipping, please contact our customer service team through one of the methods mentioned at the top of page 1. Please have the item number and order information ready to expedite response time.

A NOTICE:

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

Sunnydaze Decor

SunnydazeDecor.com

•••

• • (


Purchase Date: / / Order/Customer Reference Number:



Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products will be sent at our discretion within the 1-year warranty period. Proof of purchase, with the date of purchase as well as photos of the merchandise defect, must be provided. Photos are used to determine the cause of defects and for future quality control. Register your warranty at https://tiny.cc/SunnydazeWarranty If you have any questions, comments or concerns, feel free to contact us by phone at 833-982-1977, by email: customerservice@sunnydazeContact.

COUNTER-HEIGHT STOOL BWD-900

Carefully read all assembly and information in this manual before using this product. Save this manual for future reference. Assemble components on a soft, clean surface to avoid damaging the finish.

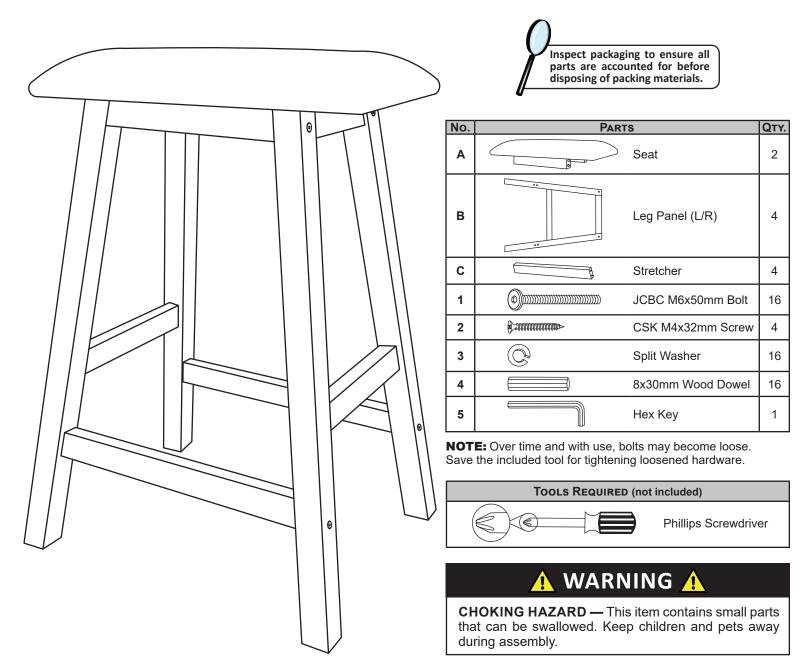

() HELPFUL HINT

Sunnydaze Decor advises reading this manual fully, and assembling the item soon after purchase. Check that all parts are accounted for and familiarize yourself with the assembly before beginning.


Sunnydaze Decor

•••••

INDIVIDUAL STOOL ASSEMBLY


Review all steps and understand assembly before beginning.

Do not fully tighten hardware until all frame components have been loosely assembled.

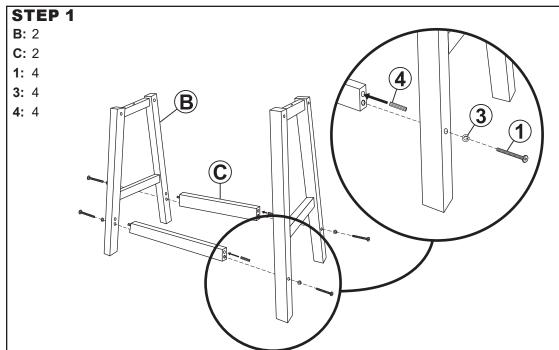

IMPORTANT: Do not install wood dowels into mounting holes with threaded inserts. Do not fully tighten hardware until after Step 2 is complete.

- Firmly insert one Dowel (4) into the top mounting hole on both ends of both Stretchers (C) as shown.
- Align the stretchers with one of the Leg Panels (B) and loosely securing using Split Washers (3) and M6x50mm Bolts (1). Repeat to secure the remaining leg panel.

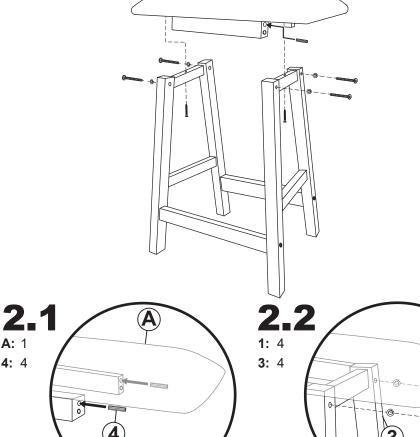

2.1


• Identify the support beams that are attached to the bottom of Seat (A) and firmly insert one Dowel (4) into each of the top mounting hole on each beam as shown.

2.2

- Align the seat with the top of the leg panels.
- Secure the leg panels to the support beams using two sets of Split Washers (3) and M6x50mm Bolts (1) as shown. Repeat to secure the opposite side.

2.3

• Use one M4x32mm Screw (2) to secure the underside of each leg panel to the seat as shown.

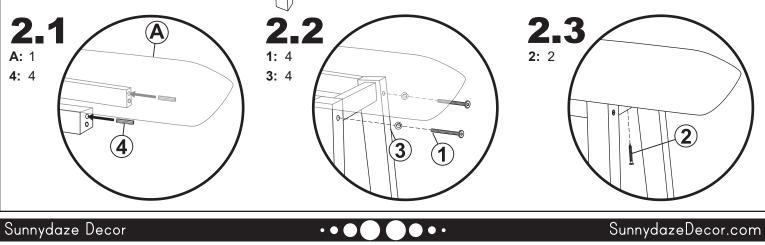

STEP 2

Care & Maintenance

SAFE USE: Follow all safety statements and warnings. For residential use only. Only use on a flat, level surface. Do not stand on any part of the furniture. Do not exceed the weight capacity.

INSPECT: Before use, ensure the unit is assembled correctly and all hardware is securely tightened. If parts are missing, broken, damaged, or worn out, do not use this product.

SUN EXPOSURE: All fabrics will eventually fade from sun exposure. Maintain cushion color and integrity by keeping the unit out of direct sunlight.

CLEAN: Use a soft cloth and clean, warm water to spot-clean the cushion. Use a slightly damp cloth to hand-wash the chair. Do not use chemicals or abrasive materials to clean any part of the unit.



Do not use bleach, harsh chemicals, or abrasive materials to clean the furniture.

SEAT CUSHION

- Frequently brush or vacuum the cushion to prevent dust and dirt from getting deep into the fabric.
- Spot clean the cushion using a soft cloth and lukewarm water. For more stubborn stains, gently scrub using mild soap and lukewarm water. Press a dry towel on the spot-cleaned area to absorb excess moisture. Allow to thoroughly dry before use.

WOODEN SURFACES

• Use a dry, soft cloth or a clean feather duster to remove dust. For more stubborn stains, gently scrub wooden surfaces using a slightly damp cloth.

🚹 SAFETY STATEMENTS & WARNINGS 🚹

- For indoor use only.
- This product is for residential use only; institutional or commercial use will automatically void the product warranty.
- Ensure fittings are tight before use. Periodically check fitting to ensure they are tight.
- Do not stand on any part of this unit.
- Do not exceed the weight capacity of the furniture.
- Do not place liquids or hot items directly on the furniture.
- Never use chemical cleaning products or polishes as they may damage the finish.
- Avoid long-term exposure to sunlight.
- Avoid placing near heating or cooling vents as forced air is be very drying and could damage the wood.

Any modification to the product or failure to follow recommended care will void the product warranty.

If you experience issues with assembly or the product was damaged during shipping, please contact our customer service team through one of the methods mentioned at the top of page 1. Please have the item number and order information ready to expedite response time.

A NOTICE:

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

Sunnydaze Decor

••

• •




Purchase Date: / / Order/Customer Reference Number:_


Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products will be sent at our discretion within the 1-year warranty period. Proof of purchase, with the date of purchase as well as photos of the merchandise defect, must be provided. Photos are used to determine the cause of defects and for future quality control. Register your warranty at https://tiny.cc/SunnydazeWarranty If you have any questions, comments or concerns, feel free to contact us by phone at 833-982-1977, by email: customerservice@sunnydazeContact, or via our contact us page at https://tiny.cc/SunnydazeContact

COUNTER-HEIGHT BENCH BWD-917

Carefully read all assembly and information in this manual before using this product. Save this manual for future reference. Assemble components on a soft, clean surface to avoid damaging the finish.

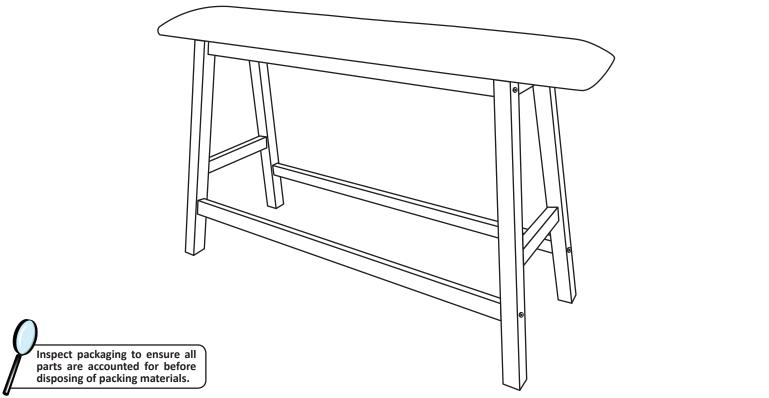

No.	Parts	QTY.
A	Seat	1
В	Leg Panel (L/R)	2
с	Stretcher	2
1	JCBC M6x50mm Bolt	8
2	CSK M4x32mm Screw	2
3	Split Washer	8
4	8x30mm Wood Dowel	8
5	Hex Key	1

 

NOTE: Over time and with use, bolts may become loose. Save the included tool for tightening loosened hardware.

WARNING 🥂

CHOKING HAZARD — This item contains small parts that can be swallowed. Keep children and pets away during assembly.

() HELPFUL HINT

Sunnydaze Decor advises reading this manual fully, and assembling the item soon after purchase. Check that all parts are accounted for and familiarize yourself with the assembly before beginning.

Sunnydaze Decor

BW21-08B


•

••

ASSEMBLY

Review all steps and understand assembly before beginning.

Do not fully tighten hardware until all frame components have been loosely assembled.

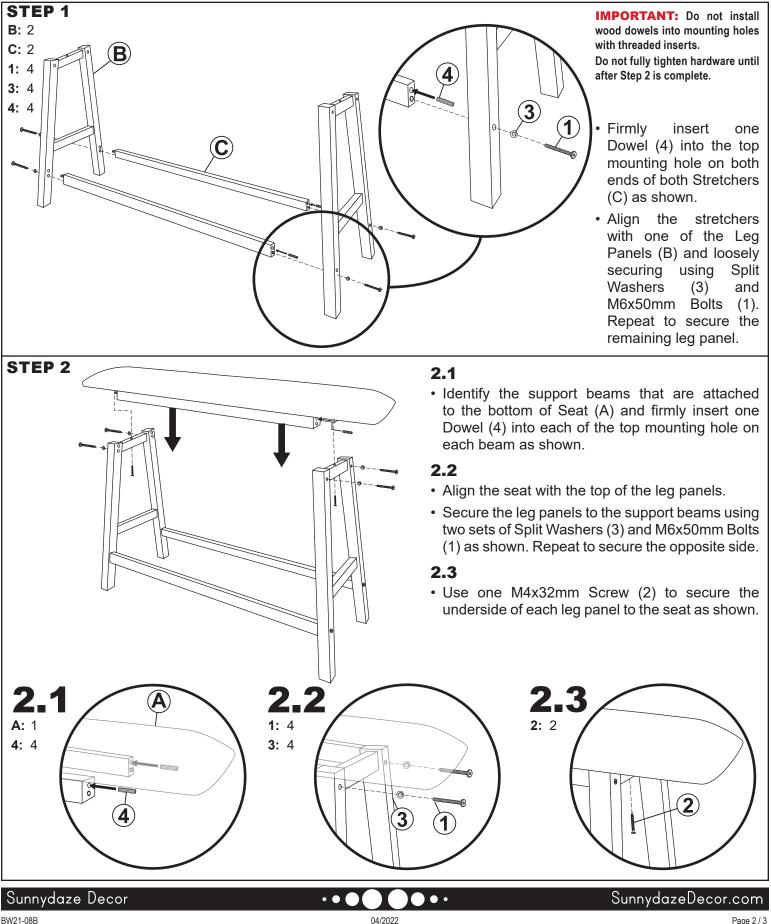

Care & Maintenance

SAFE USE: Follow all safety statements and warnings. For residential use only. Only use on a flat, level surface. Do not stand on any part of the bench. Do not exceed the weight capacity.

INSPECT: Before use, ensure the unit is assembled correctly and all hardware is securely tightened. If parts are missing, broken, damaged, or worn out, do not use this product.

SUN EXPOSURE: All fabrics will eventually fade from sun exposure. Maintain cushion color and integrity by keeping the unit out of direct sunlight.

CLEAN: Use a soft cloth and clean, warm water to spot-clean the cushion. Use a slightly damp cloth to hand-wash the chair. Do not use chemicals or abrasive materials to clean any part of the unit.



Do not use bleach, harsh chemicals, or abrasive materials to clean the furniture.

SEAT CUSHION

- Frequently brush or vacuum the cushion to prevent dust and dirt from getting deep into the fabric.
- Spot clean the cushion using a soft cloth and lukewarm water. For more stubborn stains, gently scrub using mild soap and lukewarm water. Press a dry towel on the spot-cleaned area to absorb excess moisture. Allow to thoroughly dry before use.

WOODEN SURFACES

• Use a dry, soft cloth or a clean feather duster to remove dust. For more stubborn stains, gently scrub wooden surfaces using a slightly damp cloth.

🚹 SAFETY STATEMENTS & WARNINGS 🚹

- · For indoor use only.
- This product is for residential use only; institutional or commercial use will automatically void the product warranty.
- Ensure fittings are tight before use. Periodically check fitting to ensure they are tight.
- Do not stand on any part of this unit.
- Do not exceed the weight capacity of the furniture.
- Do not place liquids or hot items directly on the furniture.
- Never use chemical cleaning products or polishes as they may damage the finish.
- Avoid long-term exposure to sunlight.
- Avoid placing near heating or cooling vents as forced air is be very drying and could damage the wood.

Any modification to the product or failure to follow recommended care will void the product warranty.

If you experience issues with assembly or the product was damaged during shipping, please contact our customer service team through one of the methods mentioned at the top of page 1. Please have the item number and order information ready to expedite response time.

MOTICE:

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

Sunnydaze Decor

••

• •