homestyles[°]

20 05420 0041


Chest


IMPORTANT


Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.

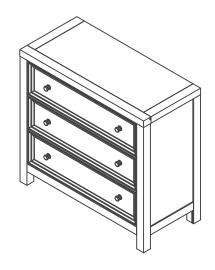

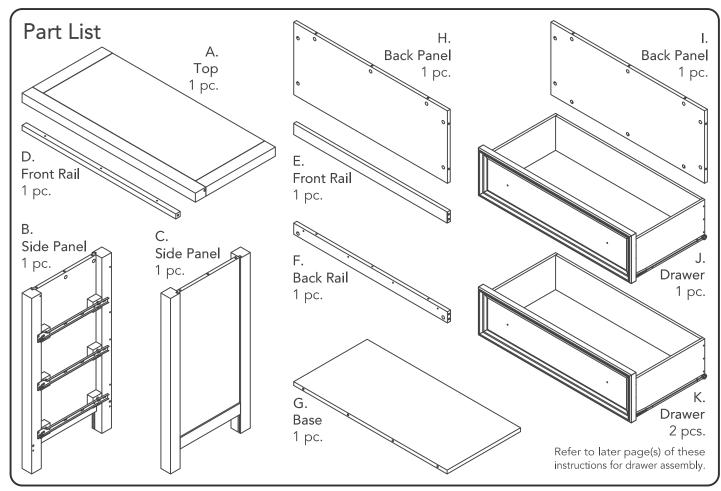

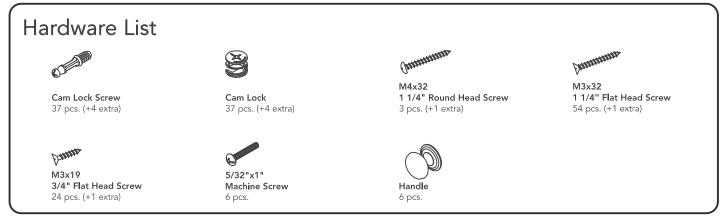


Tool(s) required for assembly: Phillips screwdriver, Level, Pencil, Drill (8 volts or less), 3/8" Drill Bit Home Styles Customer Service: www.homestyles-furniture.com, servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

Assembly Instructions 2/9

IMPORTANT


- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the screws until each part is properly assembled.
- The unit must be level to work properly. Use the included adjustable levelers to level.

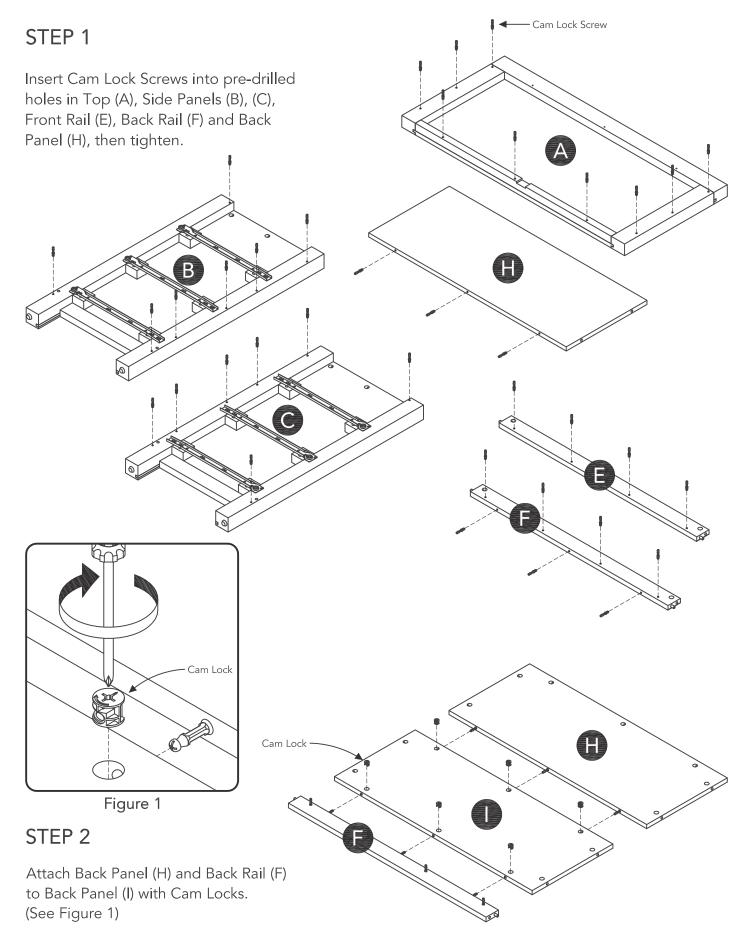


Assembly Instructions 3/9

STEP 3

Attach Front Rail (E) and unit to Base (G) with Cam Locks.

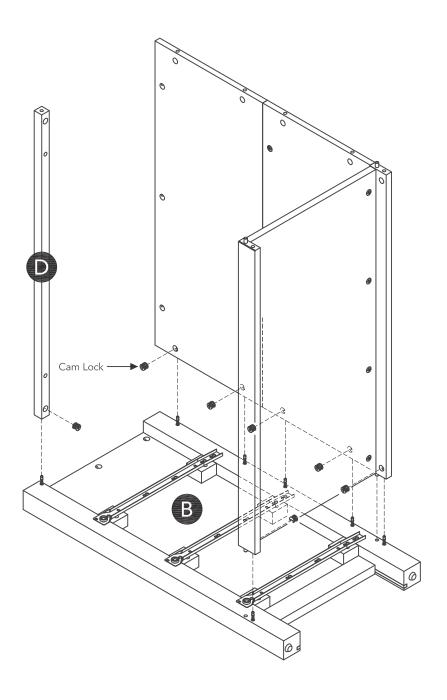


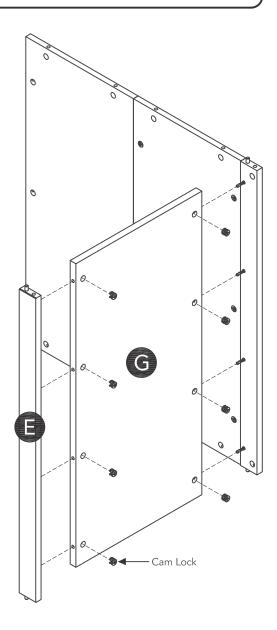

STEP 4

Attach Front Rail (D) and unit to Side Panel (B) with Cam Locks.

Assembly Instructions 4/9

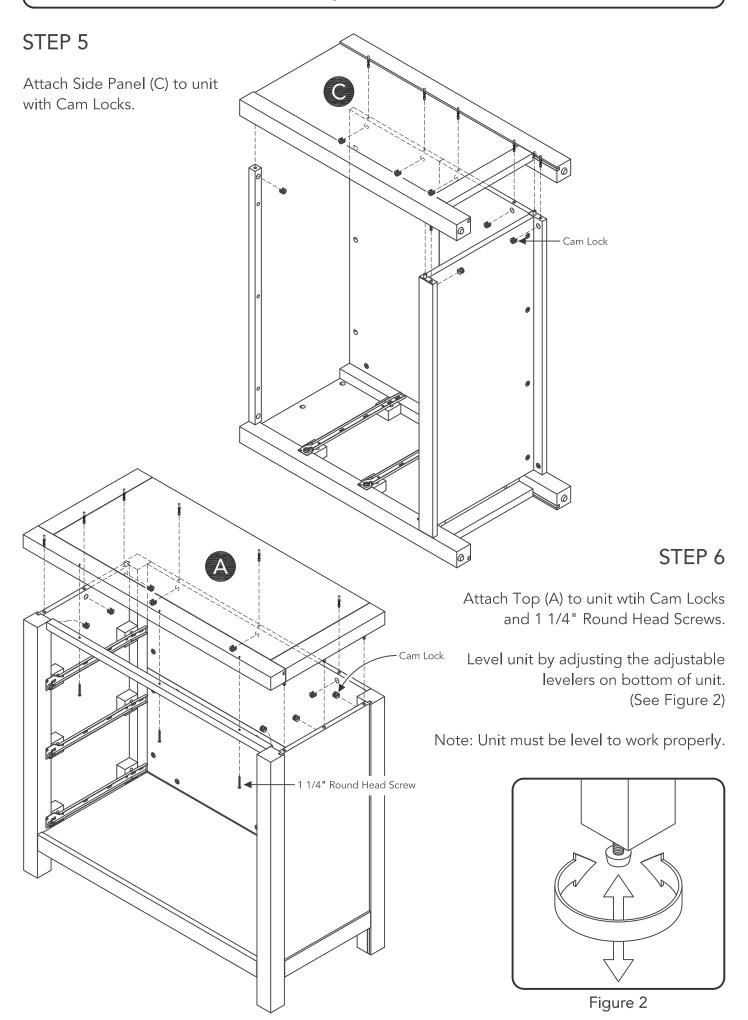

Assembly Instructions 5/9

IMPORTANT

• To help reduce the risk of the unit tipping over, the Tip-over Restraint must be installed following these instructions exactly.

STEP 7

Place unit at desired location.

Mark wall with pencil just above and in-line with hole in Top (A). (See Figure 3)


Move unit.

Drill a 3/8" hole in wall 2" below mark.

Insert Anchor into the wall hole and attach Tip-over Restraint to Anchor with 1 1/2" Round Head Screw and Flat Washer. (See Figure 4)

Move unit back into place and insert Tip-over Restraint into unit through hole in Top (A). (See Figure 5)

Attach Tip-over Restraint to unit with 1/2" Round Head Screw and Flat Washer. (See Figure 6)

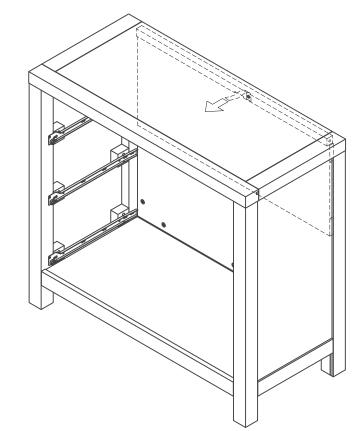

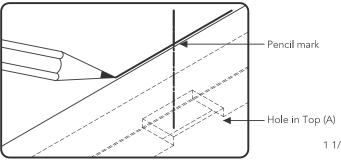
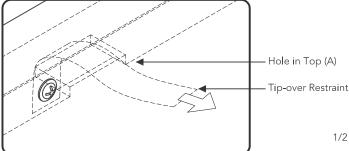


Figure 3

3/8" wall hole Anchor in wall Tip-over Restraint Flat Washer 1 1/2" Round Head Screw





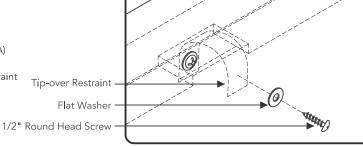


Figure 6

Hardware List



Figure 5

Tip-over Restraint



1 pc. (+1 extra)



1 1/2" Round Head Screw 1 pc. (+1 extra)




1/2" Round Head Screw 1 pc. (+1 extra)




Flat Washer 2 pcs. (+1 extra)

Assembly Instructions 6/9

Drawer (J)

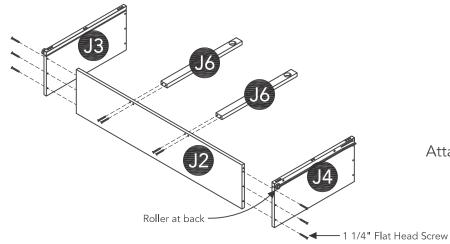

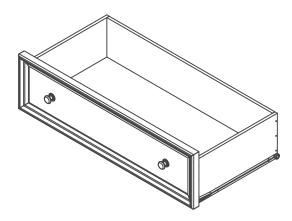


STEP 8


Attach Drawer Sides (J3), (J4) and Drawer Supports (J6) to Drawer Back (J2) with 1 1/4" Flat Head Screws.

STEP 9

Insert Drawer Bottom (J5) into groove.

Attach Drawer Front (J1) to unit with 1 1/4" Flat Head Screws.

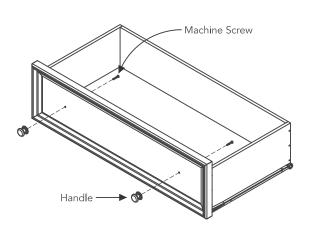


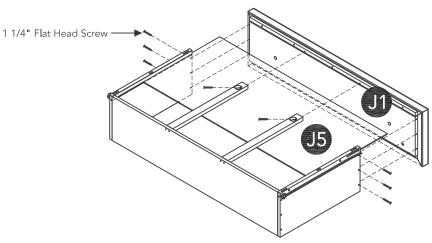

STEP 10


Attach Handles with Machine Screws.


Note: Drawer assembly is not complete until 3/4" Flat Head Screws are installed in a later step.

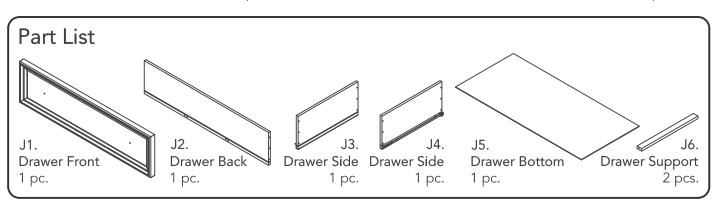

Assembly Instructions 7/9

Drawer (K)

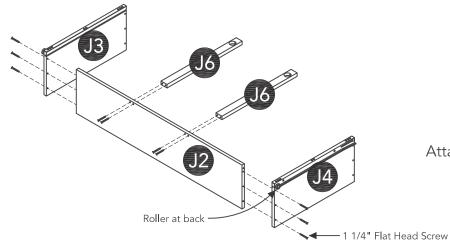

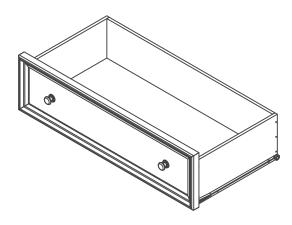


STEP 11


Attach Drawer Sides (J3), (J4) and Drawer Supports (J6) to Drawer Back (J2) with 1 1/4" Flat Head Screws.

STEP 12

Insert Drawer Bottom (K5) into groove.

Attach Drawer Front (J1) to unit with 1 1/4" Flat Head Screws.

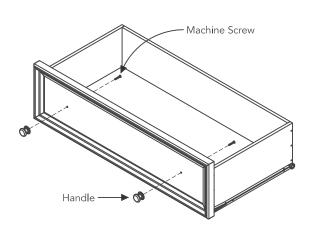


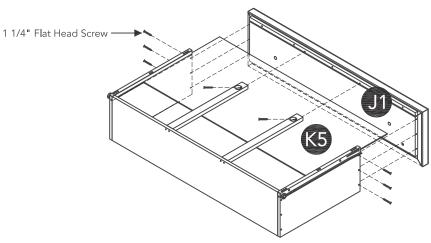

STEP 13

Attach Handles with Machine Screws.


Note: Drawer assembly is not complete until 3/4" Flat Head Screws are installed in a later step.

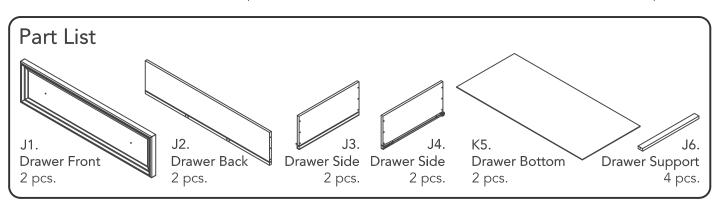


Assembly Instructions 8/9

STEP 14

Loosen slightly the screws pre-installed on back of drawer fronts.

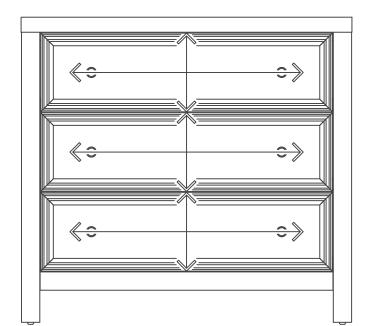

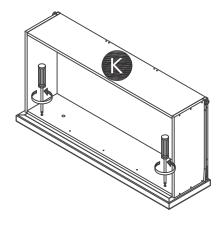

STEP 15


Insert drawers into unit, then adjust drawer front panels left or right and up or down until drawer gaps look proportional.


STEP 16

Pull each drawer open slowly and re-tighten screws from Step 14.

Make sure drawer front panels do not move and lock drawer front panels into position with 3/4" Flat Head Screws.

Note: These 3/4" Flat Head Screws must be installed to complete the drawer assembly.

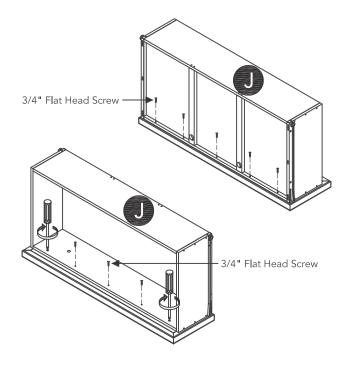


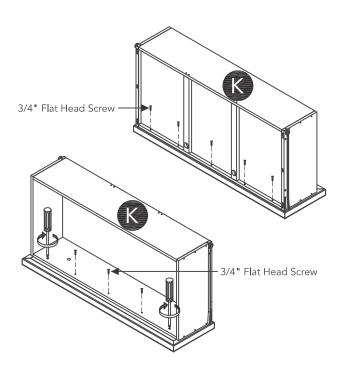

Assembly Instructions 9/9

STEP 17

Slide Drawers (J) and (K) into place.

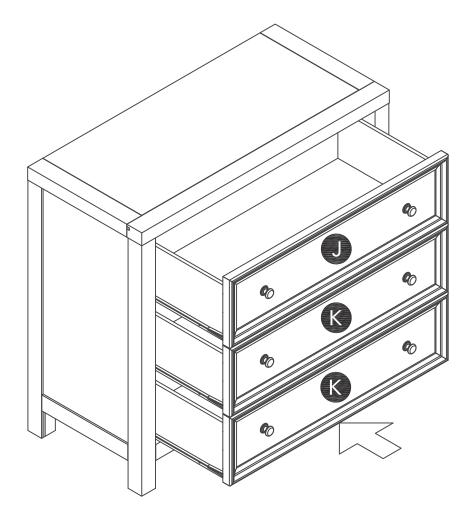

CARE INSTRUCTIONS

NEVER

allow liquids to remain on furniture. Absorption causes parts to warp and split and finishes to delaminate.

NEVER

use glass cleaners on finished furniture. Ammonia chemically attacks the finish.



Do not use power tools above 8 volts to assemble.

PREVENT

CRACKING



Do not place in direct sunlight. PREVENT FADING



Do not write directly on surface. PREVENT MARKING



Do not place hot objects on surface.

PREVENT
FINISH DAMAGE



Do not use rubber based placemats.

PREVENT

DISCOLORING



Do not use commercial waxes and polishes.

PREVENT

YELLOWING

CLEAN

with a soft cloth moistened in lukewarm soap and water. Buff with a dry clean cloth.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

www.homestyles-furniture.com/customer-service/replacement-parts

Home Styles Customer Service: www.homestyles-furniture.com, servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319