


ORNATE LAVELLO OUTDOOR FOUNTAIN FC-22440

Read the assembly instructions carefully and follow the care instructions.

Keep these instructions for reference and warranty.

Select a smooth, level surface to place the fountain. Assemble this fountain on a soft, clean surface to avoid scratching or damaging the finish.

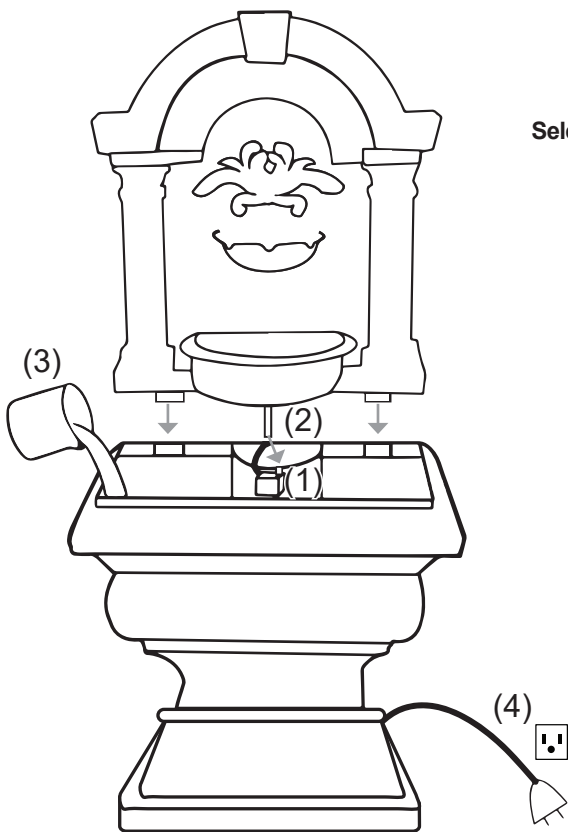

PARTS	QTY.
Decorative Top	1
Pedestal Basin	1
Electric Submersible Pump	1



Inspect packaging to ensure all parts are accounted for before disposing of packing materials.

NOTE: The water hose is built into the top of the fountain, ensure the water hose remains intact with the top. Take care when handling the water tube; detaching the water tube from the fountain will damage the fountain and void the product warranty.

ASSEMBLY

1. Place the pump inside the reservoir of the pedestal basin and run the power cord through the groove in the back of the pedestal.
2. Connect the water hose that is built into the decorative top to the pump and place the decorative top in the grooves of the pedestal basin.
3. Fill the basin with enough water to fully submerge the pump, approximately 3 gallons.
4. Plug the power cord into a properly grounded GFCI outlet.

Note: When first used, there may be air in the pump. It may take several minutes for the air to escape and water begins to flow.

! IMPORTANT INFORMATION !

USE & CARE

- For outdoor use only. Some splashing is normal; adjust the flow rate on the pump if the water rate is too high.
- Check the water level frequently to ensure the pump remains fully submerged; never allow the pump to run dry as it will burn out the motor. Water will need to be added more often when temperatures are higher and/or the air is dry.
- Only use water in this fountain; distilled water will help prevent mineral buildup but is not required, tap water is okay to use.
- Periodically change the water to keep the water, fountain and pump clean. Remove scale and build-up regularly.
DO NOT use harmful additives such as bleach, chlorine, etc.
DO NOT use anything abrasive to scrub the fountain.
DO NOT use a pressure washer.
- Always shut off the power supply before cleaning and maintaining the fountain and the recirculating pump.
- Take care when handling the pump; only pick it up by the body of the pump, never the power cord.
- During freezing weather, drain the fountain, disconnect the pump and store indoors; allowing ice to form may damage the fountain in such ways as, but not limited to, the fountain cracking, and/or permanent pump damage.

TROUBLESHOOTING

- Ensure that the pump is fully submerged and add water if necessary.
- Check to make sure the power outlet is working; if in doubt about electrical connections, consult a certified electrician.
- Check the pump and tubing for obstructions.
- Check the flow control on the body of the pump as it may need to be adjusted to achieve the desired flow rate.
- If water is not flowing within several moments of the fountain being plugged in, unplug the power supply for a few moments and plug it back in; the pump may have air bubbles in the filter which can prevent water from circulating properly.

Any modification to the product or failure to follow recommended care will void the product warranty.