 


Bar Stool

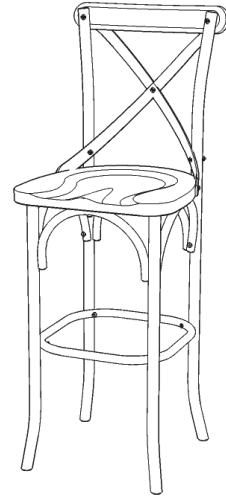

 
IMPORTANT

Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.


Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.


Part List

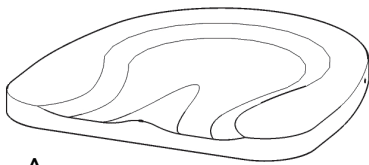

 
A.
Seat
1 pc.

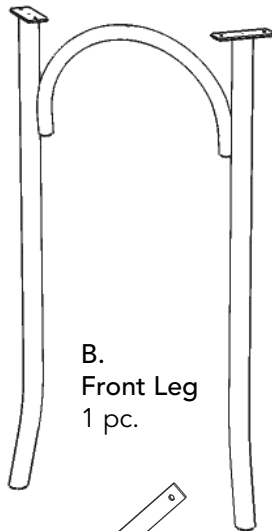

 
B.
Front Leg
1 pc.



 
C.
Top Rail
1 pc.

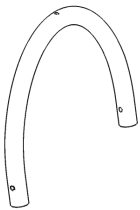

 
D.
Side Rail
2 pcs.

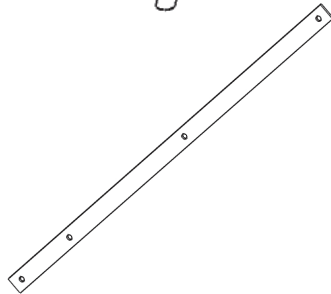

 E.
Back Rail
2 pcs.

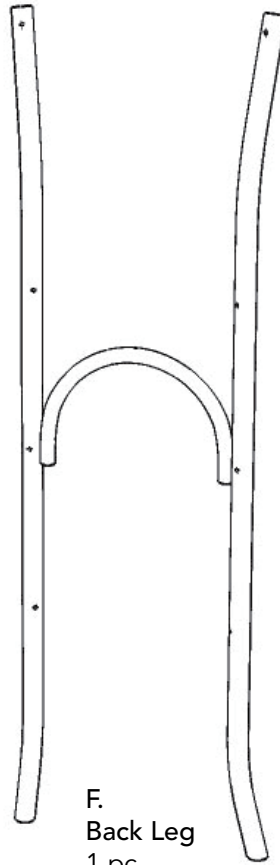


 F.
Back Leg
1 pc.

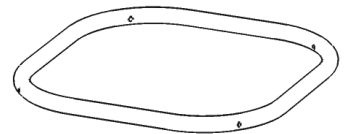

G.
Foot Rest
1 pc.

 Hardware List

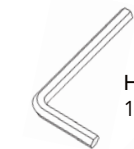

Hex Wrench
1 pc.



Small
Hex Wrench
1 pc.



M6x16
Head Cap Bolt
4 pcs. (+1 extra)



M6x30
Flat Head Bolt
12 pcs. (+1 extra)



Small
Flat Washer
5 pcs. (+1 extra)



Flat Washer
4 pcs. (+1 extra)



Key Wrench
1 pc.



 
Nut Cap
5 pcs. (+1 extra)



M6x13
Bolt (short)
3 pcs. (+1 extra)



M6x40
Bolt
2 pcs. (+1 extra)

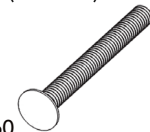

M6x60
Bolt (long)
2 pcs. (+1 extra)



Spring Washer
4 pcs. (+1 extra)

Tool(s) required for assembly: Phillips screwdriver, Level

Assembly Instructions 2/3

IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the bolts until each part is properly assembled.
- Keep Hex Wrench and Key Wrench as the bolts may need to be tightened in the future.

STEP 1

Attach Front Leg (B) to Seat (A) with Flat Washers, Spring Washers, Head Cap Bolts and Flat Head Bolt, tightening bolts only halfway. (See Figures 1 and 2)

Attach Side Rails (D) to unit with Flat Head Bolts, tightening bolts only halfway. (See Figures 2 and 3)

Attach Back Leg (F) to unit with Flat Head Bolts, tightening bolts only halfway.

Orientate Foot Rest (G) with Arrow label at back of unit, then attach Foot Rest (G) to unit with Flat Head Bolts, tightening bolts only halfway.

Tighten all bolts used in this step.

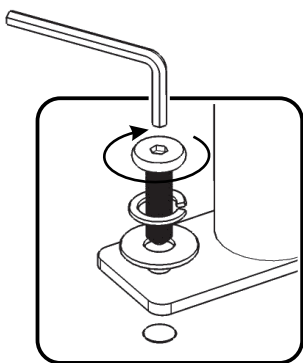 


Figure 1

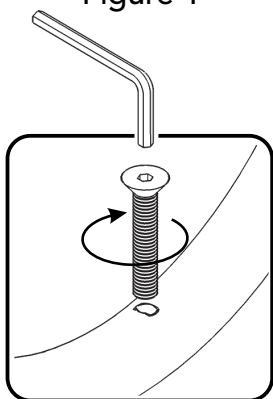 


Figure 2



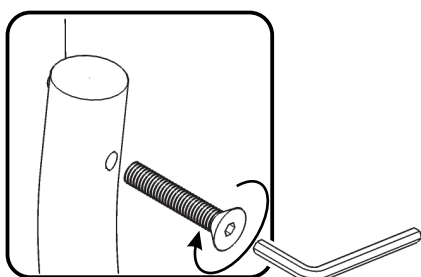 


Figure 3

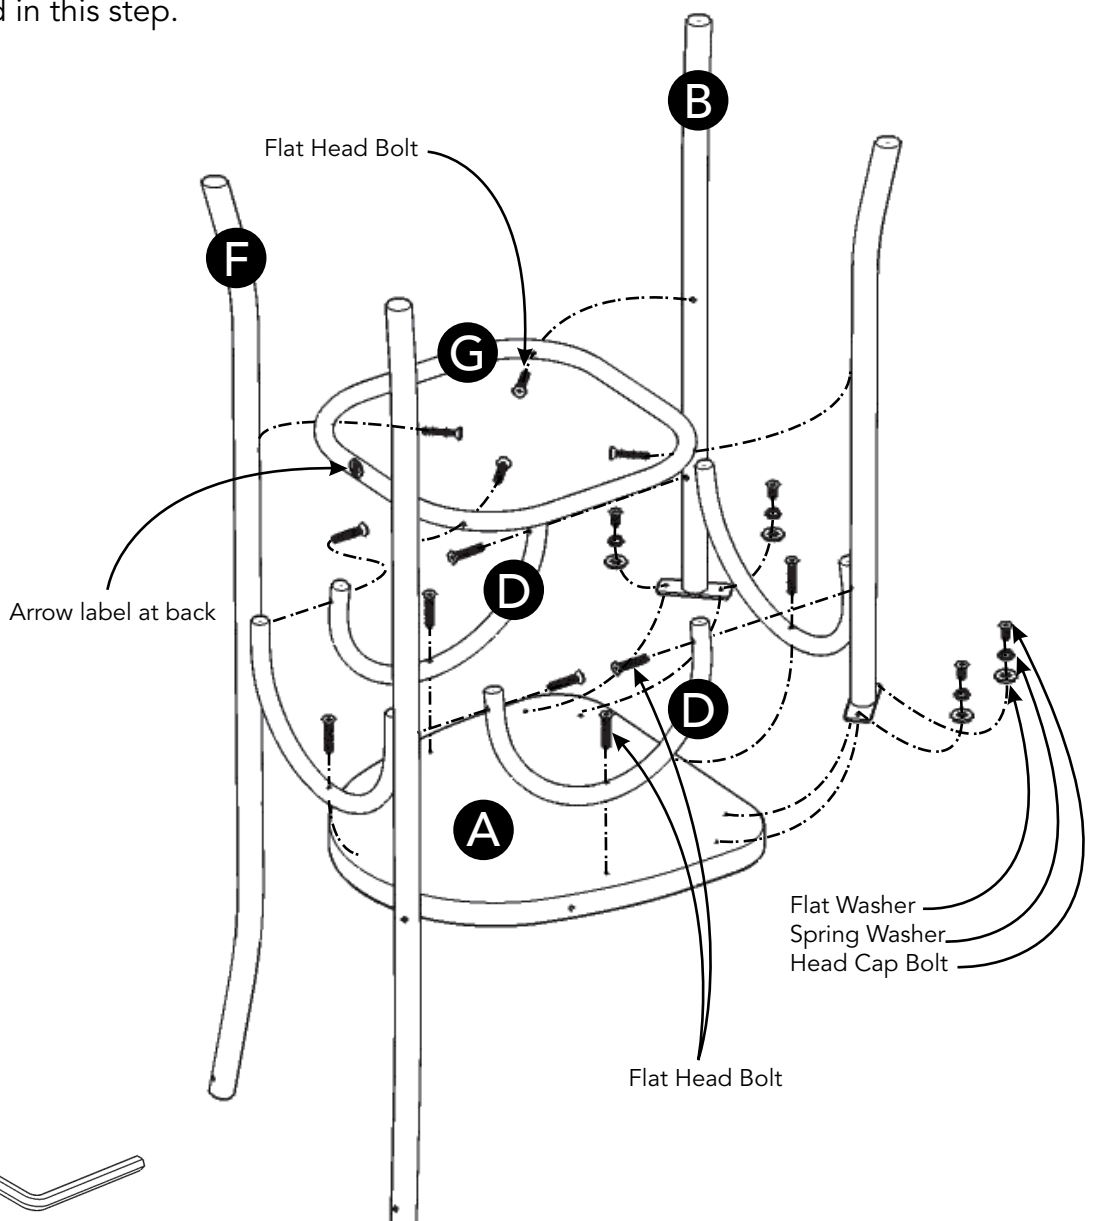 

Assembly Instructions 3/3

 STEP 2

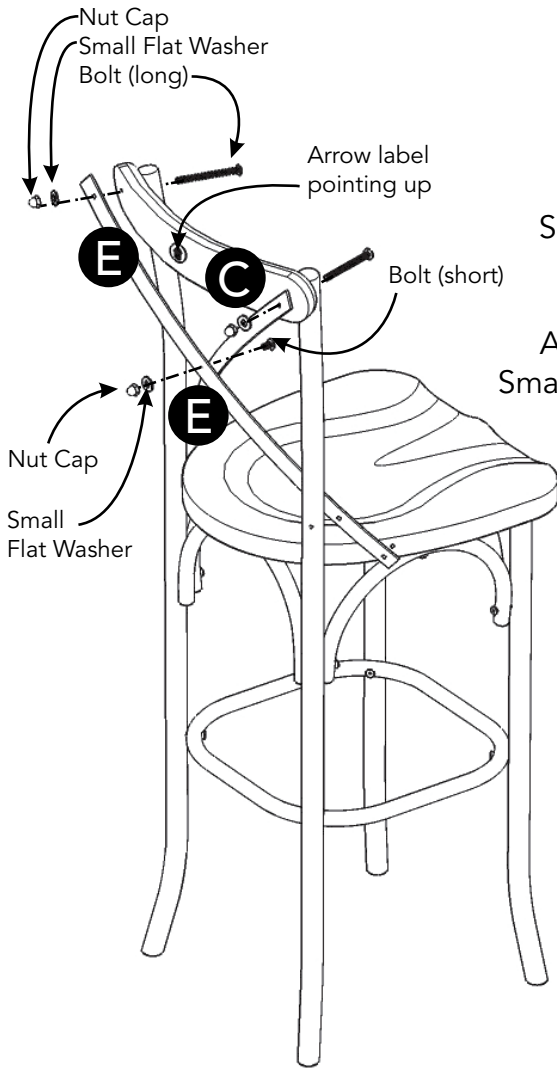

Orientate Top Rail (C) so Arrow label points up, then attach Top Rail (C) and Back Rail (E) to unit with Bolt (long) Small Flat Washer and Nut Cap, tightening bolt only halfway. (See Figure 4)

Attach other Back Rail (E) to unit with Bolt (long), Bolt (short), Small Flat Washers and Nut Caps, tightening bolts only halfway. (See Figure 5)

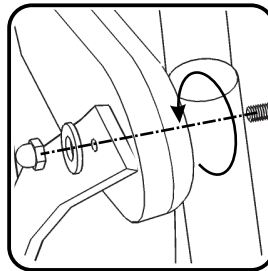 


Figure 4

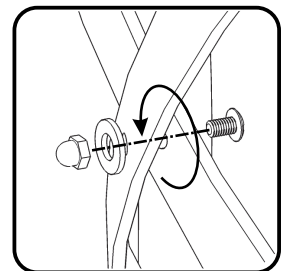 


Figure 5

STEP 3

Attach Back Rails (E) to back leg and seat with Bolts, Small Washers, Nut Caps and Bolts (short), bending Back Rails (E) slightly to align holes in Back Rails (E) to holes in back leg and seat. (See Figures 6 and 7)

Tighten all bolts and nut caps used in Steps 2 and 3.

Level unit by adjusting the adjustable levelers on bottom of legs. (See Figure 8)

Note: Unit must be level to work properly.

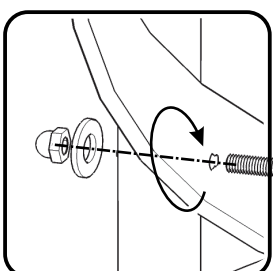 
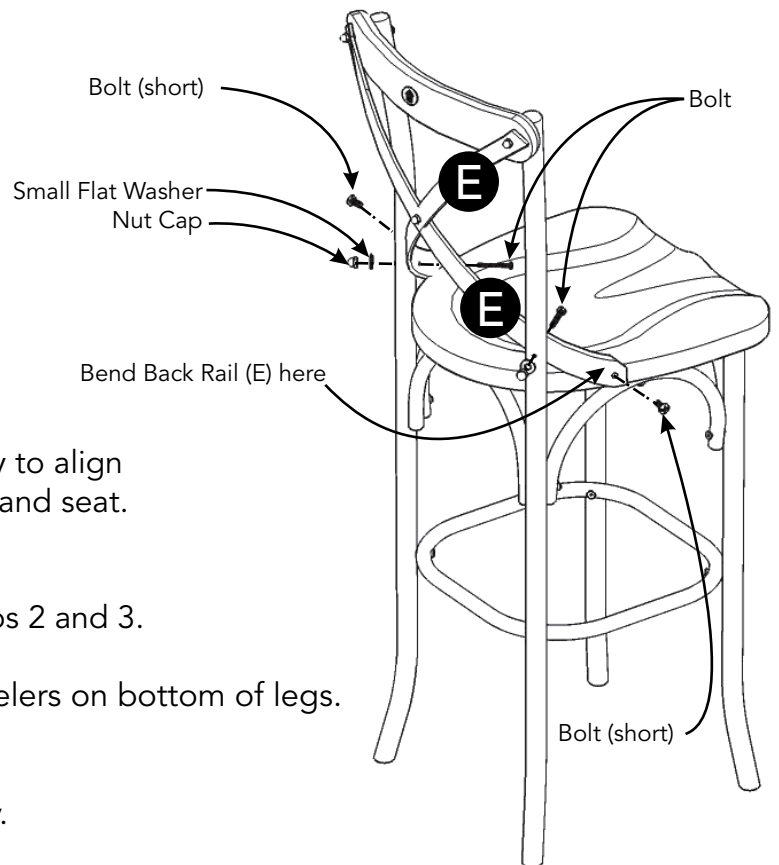 


Figure 6

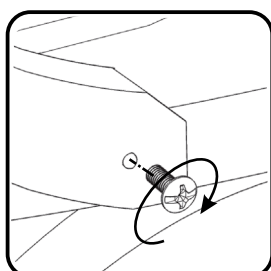 


Figure 7

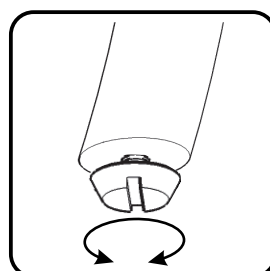 


Figure 8

CARE INSTRUCTIONS

NEVER

allow liquids to remain on furniture.
Absorption causes parts to warp
and split and finishes to delaminate.

NEVER

use glass cleaners on
finished furniture. Ammonia
chemically attacks the finish.



Do not use power tools
above 8 volts to assemble.

**PREVENT
CRACKING**



Do not place
in direct sunlight.

**PREVENT
FADING**




Do not write
directly on surface.

**PREVENT
MARKING**



Do not place hot
objects on surface.

**PREVENT
FINISH DAMAGE**

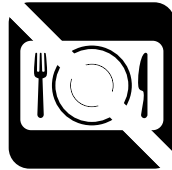

Do not use rubber
based placemats.

**PREVENT
DISCOLORING**



Do not use commercial
waxes and polishes.

**PREVENT
YELLOWING**

CLEAN

with a soft cloth moistened
in lukewarm soap and water.
Buff with a dry clean cloth.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

www.homestyles-furniture.com/customer-service/replacement-parts

Home Styles Customer Service: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319