



Purchase Date: ____ / ____ / ____ Order/Customer Reference Number: _____

Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products can be requested within the 1-year warranty period. Proof of purchase must be provided. This includes the date of the purchase as well as photos of the product defect. Photos are used to determine the cause of the defect and to provide future quality control. The request will be reviewed, and replacement pieces will be sent at our discretion. For warranty information, visit <https://tiny.cc/SunnydazeWarranty>

If you have any questions, comments or concerns, feel free to contact us by phone at 833-982-1977, by email: customerservice@sunnydazedecor.com, or via our contact us page at <https://tiny.cc/SunnydazeContact>

SHOWERING SPIRAL CONTEMPORARY OUTDOOR WATER FOUNTAIN WITH LED LIGHT SSS-213

Read the assembly instructions carefully and follow the care instructions. Keep these instructions for future reference.

Select a smooth, level surface to place the fountain.

Assemble components on a soft, clean surface to avoid scratching or damaging the finish.




| PARTS | QTY. |
|---------------------------|------|
| Fountain | 1 |
| Top Bowl | 1 |
| Polyurethane Foam Filter | 1 |
| LED Light | 1 |
| Mesh Screen | 1 |
| Electric Submersible Pump | 1 |
| Adapter Cord | 1 |
| Polyurethane Foam Filter | 1 |



Inspect packaging to ensure all parts are accounted for before disposing of packing materials.

NOTES: The water tubing is built into the fountain. Take care when handling the water tube; detaching the tube from the fountain will permanently damage the fountain and void the product warranty.

The polyurethane foam filter is required to help control water flow and helps prevent the drainage holes from clogging.

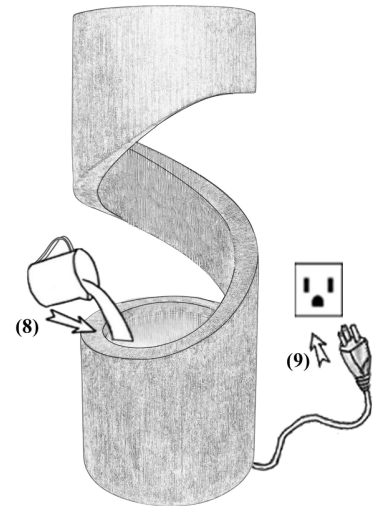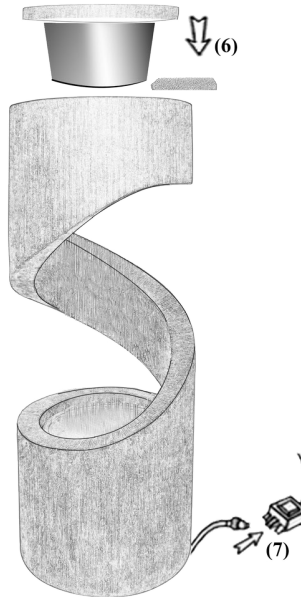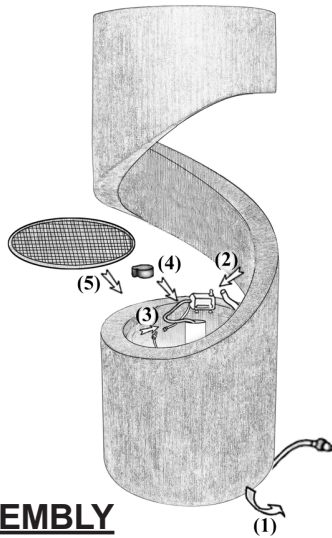

ASSEMBLY

1. Run the long cable on the pump through the tube in the bottom of the fountain. Ensure the cable is beneath the groove on the bottom of the fountain to prevent damage when the fountain is filled with water.
2. Firmly connect the water tube to the pump.
3. Locate the light cable and firmly connect it to the short cord on the pump. Do not over-tighten the seal.
4. Place the leak guard over the tube inside the fountain basin, ensuring the power cords are within the groove of the leak guard.
5. Place the mesh screen over the basin.
6. Ensure the polyurethane foam filter is over the drainage holes, beneath the top bowl.
7. Securely connect the pump power cable to the AC adapter.
8. Fill the fountain with enough water to keep the pump fully submerged during operation; approximately 2 gallons.
9. Plug the power cord into a properly grounded GFCI outlet.

Note: When first used, there may be air in the pump. It may take several minutes for trapped air to escape, allowing water to flow. You may need to add more water as the pump begins to circulate water through the fountain.

TROUBLESHOOTING

- Ensure that the pump is fully submerged and add water if necessary.
- If water is not flowing within several moments of the fountain being plugged in, the pump may have trapped air which can prevent water from circulating properly. Simply unplug the power supply for a few moments and plug it back in.
- If water is not flowing check the tubing for kinks or obstructions. Also check the pump for obstructions. The holes in the top of the fountain may be clogged; a straightened paper clip works well for clearing the holes.
- If water is splashing, check the flow control on the body of the pump; it may need to be adjusted to achieve the desired flow rate.
- If water is not flowing evenly, ensure the fountain is on a smooth, level surface.
- If the light is not working, ensure the cables are fully connected and the seal is adequately tightened (do not over-tighten). Ensure connector ends are completely dry before connecting and plugging the power cord back into an outlet.
- Soft surfaces may cause the fountain to become unbalanced. A large stepping stone or paving stone (not included) is recommended to help ensure the fountain remains evenly balanced.
- Make sure the power outlet is working; if in doubt about electrical connections, consult a certified electrician.

If you are still experiencing issues, please contact our customer service team through one of the methods mentioned at the top of page 1. Please have the item number and order information available to help expedite response time.

IMPORTANT INFORMATION

- For outdoor use only.
- Some splashing is normal; adjust the flow rate on the pump body if the water flow is too high.
- Check the water level and fill frequently to ensure the pump remains fully submerged; never allow the pump to run dry as it will burn out the motor.
- Only use water in this fountain. Distilled water will help prevent mineral buildup, but is not required. Avoid heavily chlorinated water as it may damage the fountain and pump.
- Periodically change the water to keep the fountain and pump clean. Remove scale and buildup regularly.
 - DO NOT use harmful additives such as bleach, chlorine, etc.
 - DO NOT use abrasive materials to scrub the fountain or pump.
 - DO NOT use a pressure washer to clean the fountain.
- Always shut the power supply off before cleaning and maintaining the fountain and pump.
- Take care when handling the pump; only pick it up by the body of the pump, never by the power cord.
- During freezing weather, drain the fountain, disconnect the pump and store indoors; allowing ice to form may damage the fountain in such ways as, but not limited to, the fountain cracking, permanent pump damage, and/or lighting malfunctions.
- Over time, the finish may gradually mellow in color from sun exposure; this is part of the natural aging process and is not cause for return.

Any modification to the product or failure to follow recommended care will void the product warranty.

WARNING!

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.