 


General Assembly Guidelines

 
- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are: wood dowels, screws and bolts.
- V. The provided glue is to secure wood dowels in place. When first inserting dowels, locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately.




In future assembly steps when dowels are necessary to attach assembly parts together, place a small amount of glue on the end of the dowel before attaching parts together. Wipe away excess glue immediately.




VI. A Phillips head screwdriver is required for the assembly of this product.



 
VII. Power tools should not be used to assemble this product.




- VIII. Drill may be needed for securing product to wall.
- IX. Concealed hinges are three-way adjustable.

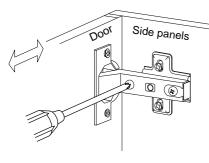


Horizontal by screw adjustment

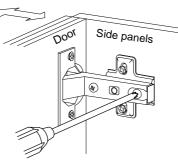

In-and-Out by loosening the hinge-arm mounting screw or via cam adjustment

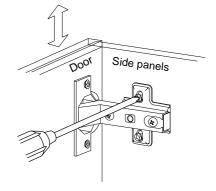


Vertical Via slots in the mounting plate or via cam adjustment

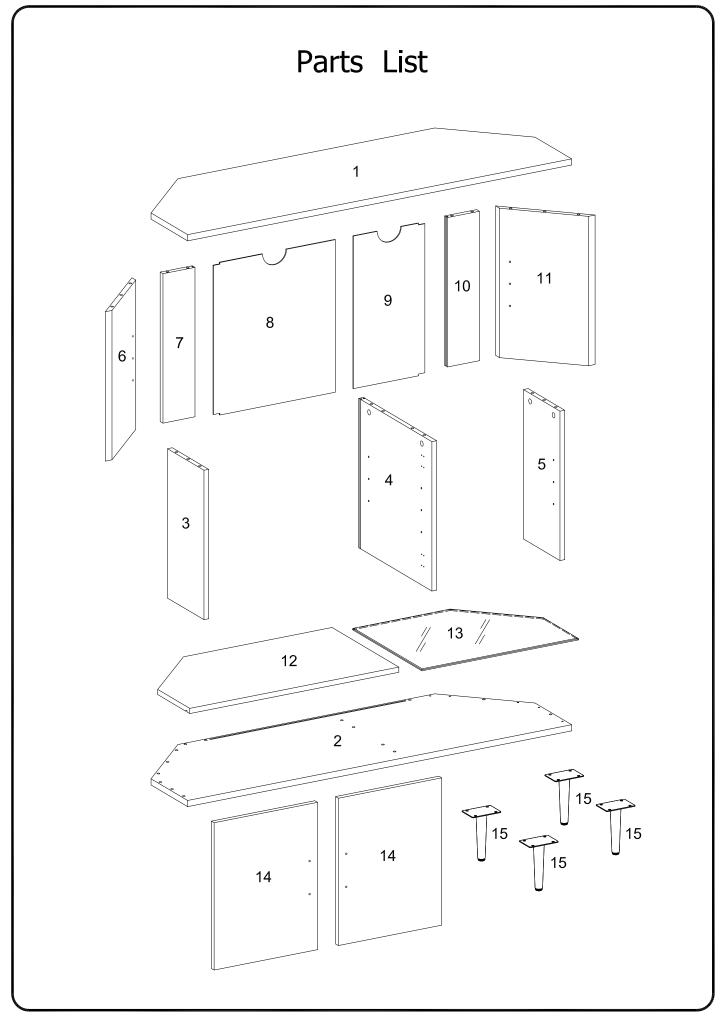


Copyright © 2019, by Walker Edison Furniture Co., LLC. All rights reserved.


		Hardware	List		
А		Ø8x30mm	Wooden dowel	16	pcs
В		Ø6x35mm	Cam bolt	12	pcs
С	A A	Ø15x11mm	Cam lock	12	pcs
D	0		Sticker	12	pcs
Е			Europe Hinge	4	pcs
F		Ø3.5x14mm	Screw	24	pcs
G			Shelf support pin	4	pcs
Н			L shape shelf support pin	4	pcs
J	00	Ø6x50	Screw	12	pcs
К			Handle	2	pcs
L	Dummun	Ø4x19mm	Handle Bolt	4	pcs
Μ		M4	Hex Key	1	рс
Ν		Ø6x12mm	Bolt	16	pcs
Ρ			Plastic wedge	8	pcs
Q	 Alling (f) 	Ø3x17	Screw	8	pcs
R			Glue tube	1	рс
	\frown				

 



Philips head screwdriver required for assembly (not included)


The hardware quantities listed above are required for proper assembly. Some extra hardware may also have been included.

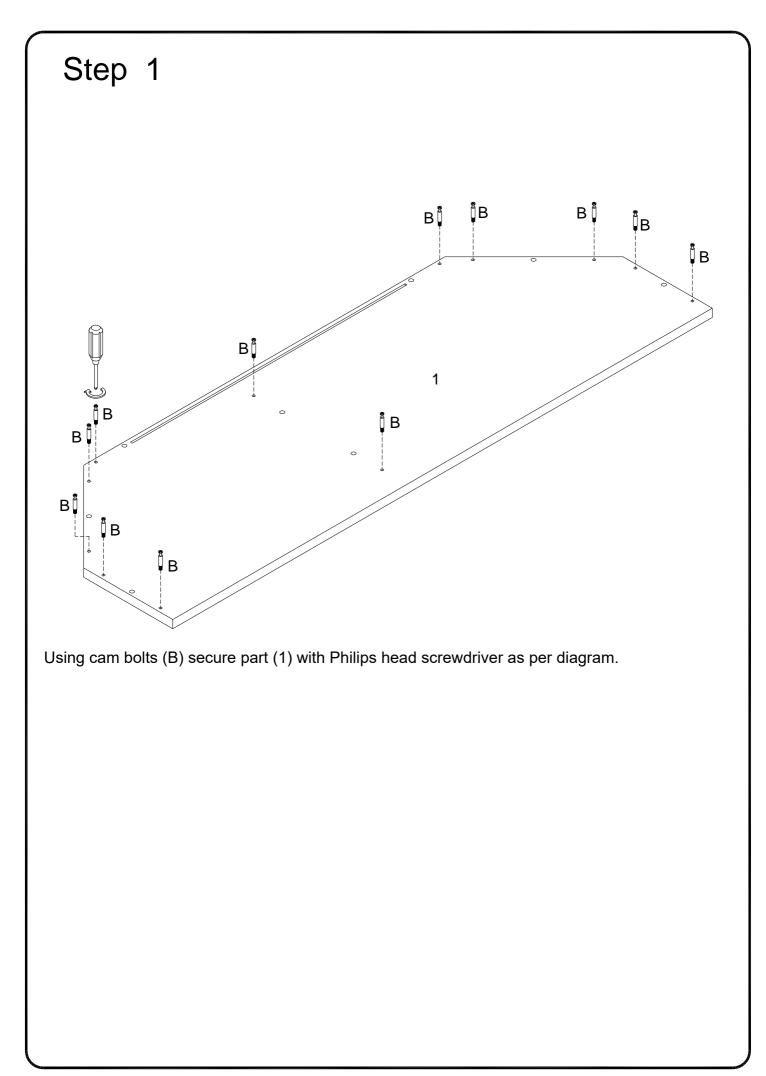


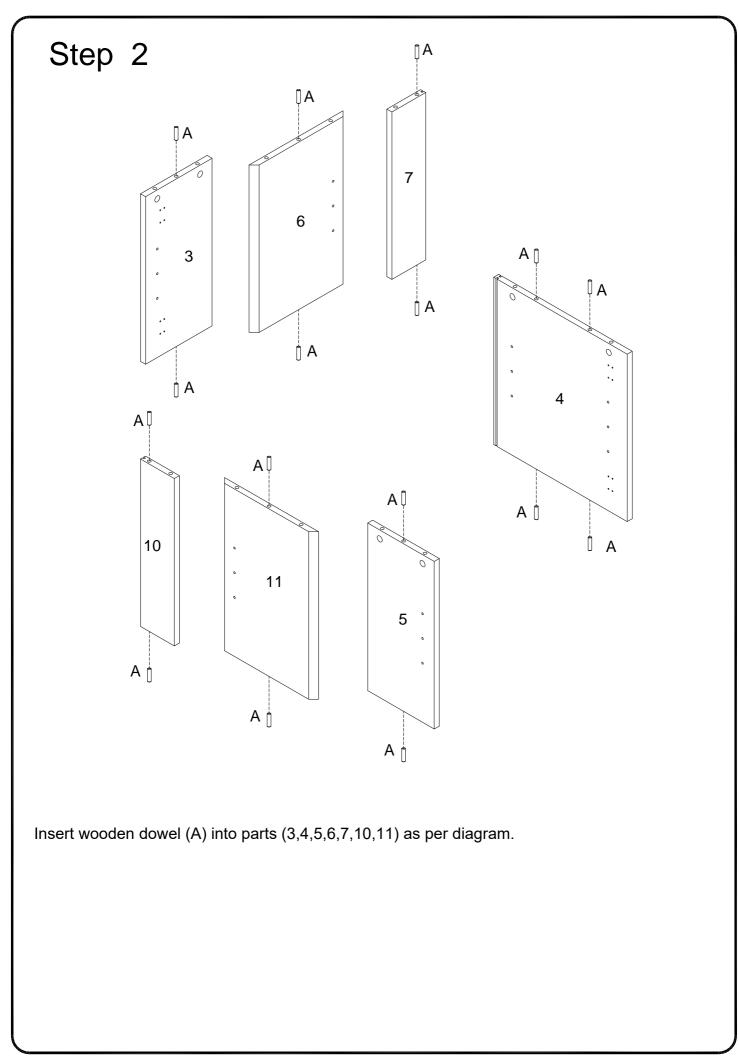


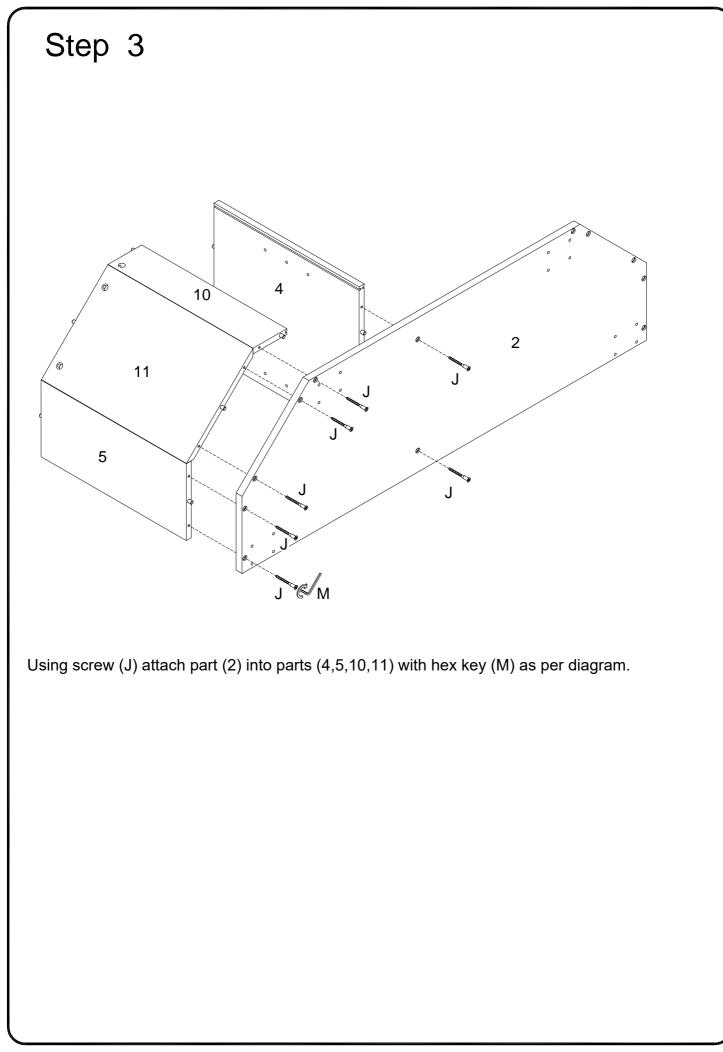


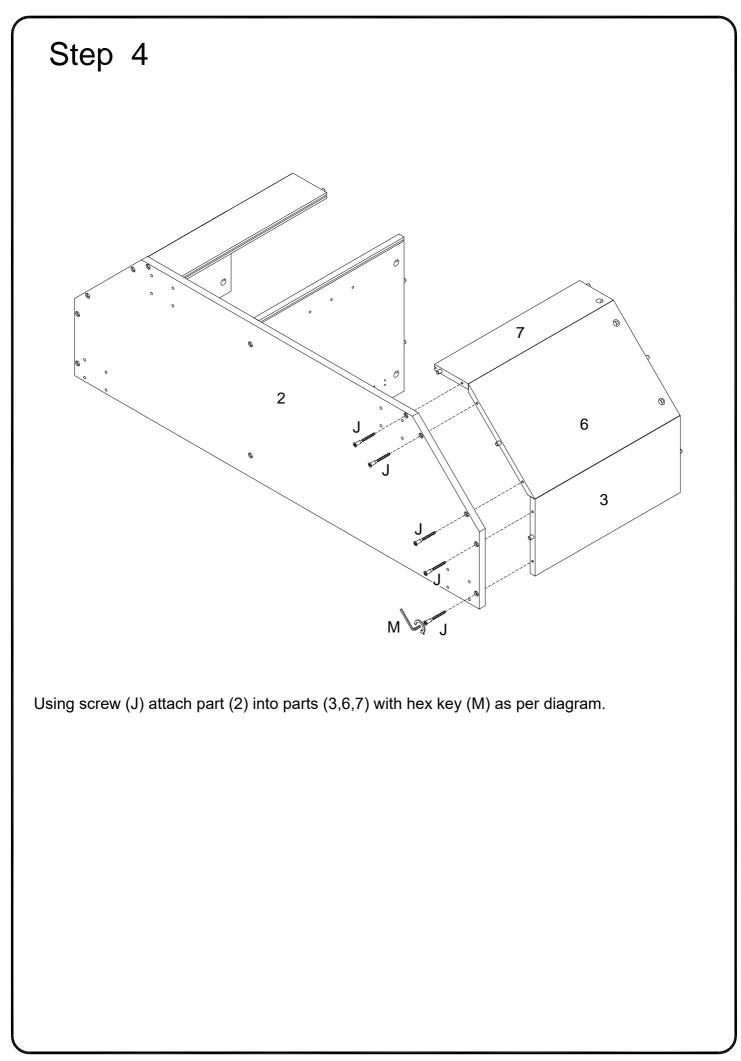


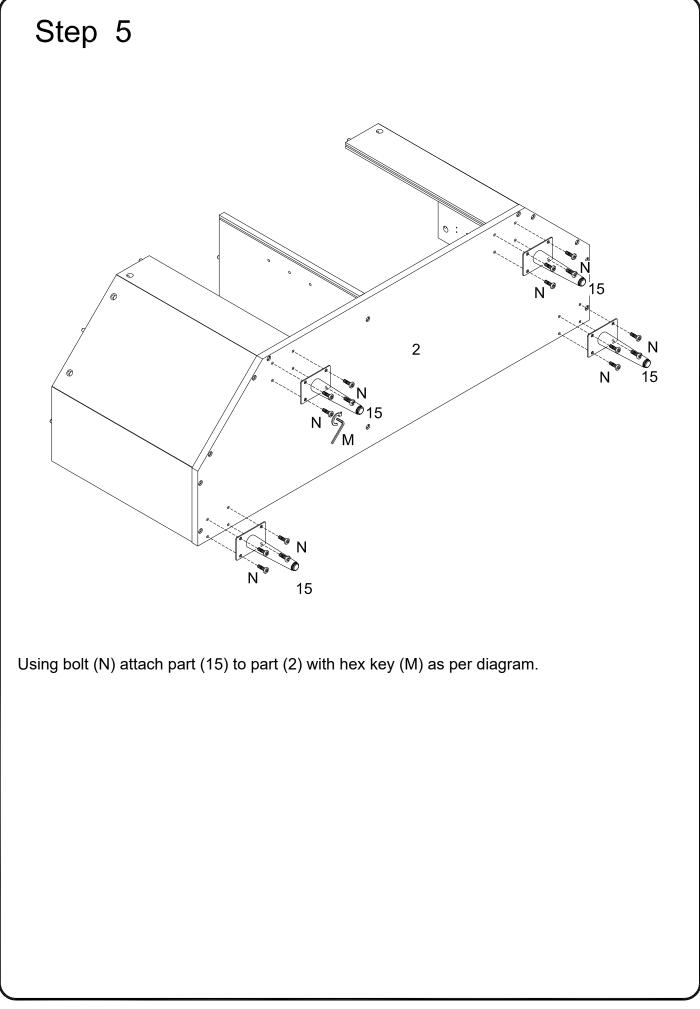

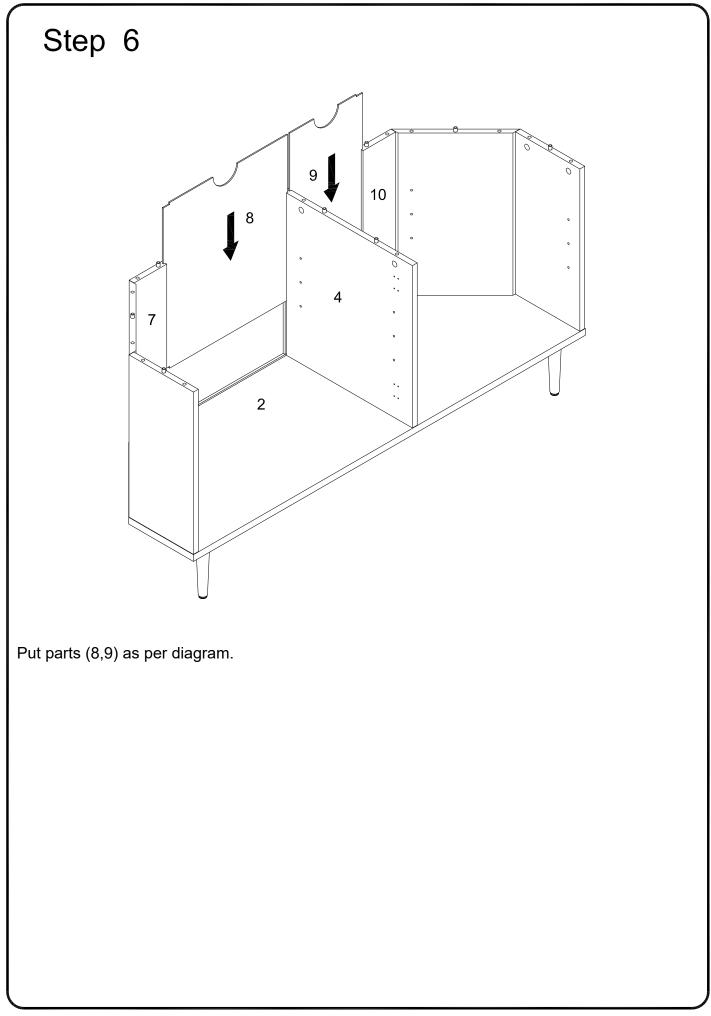


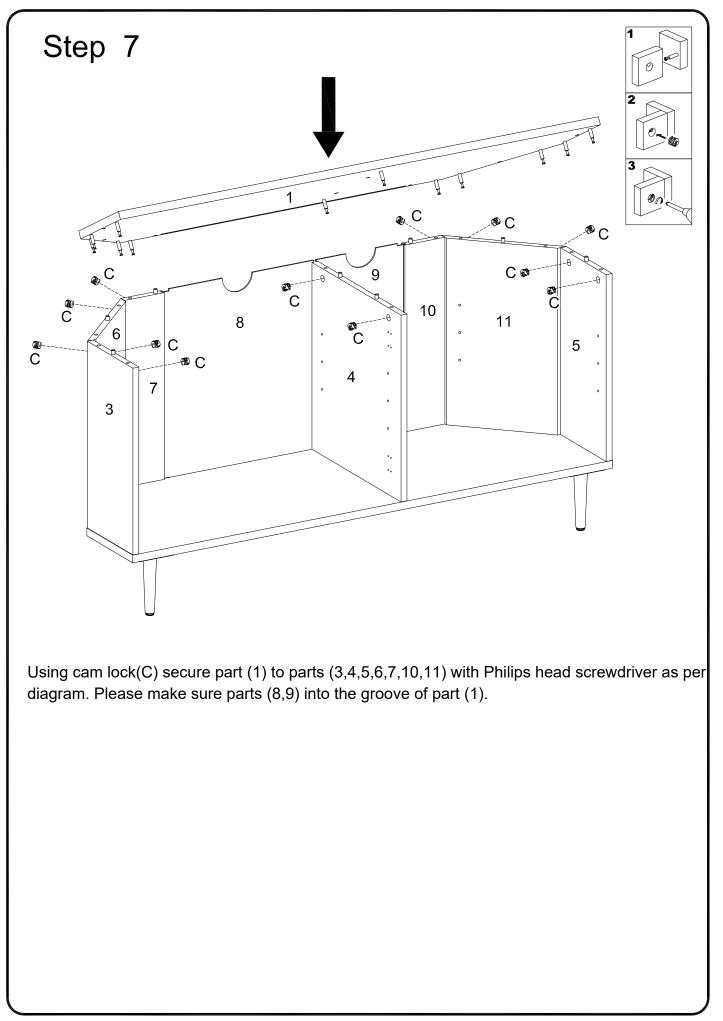

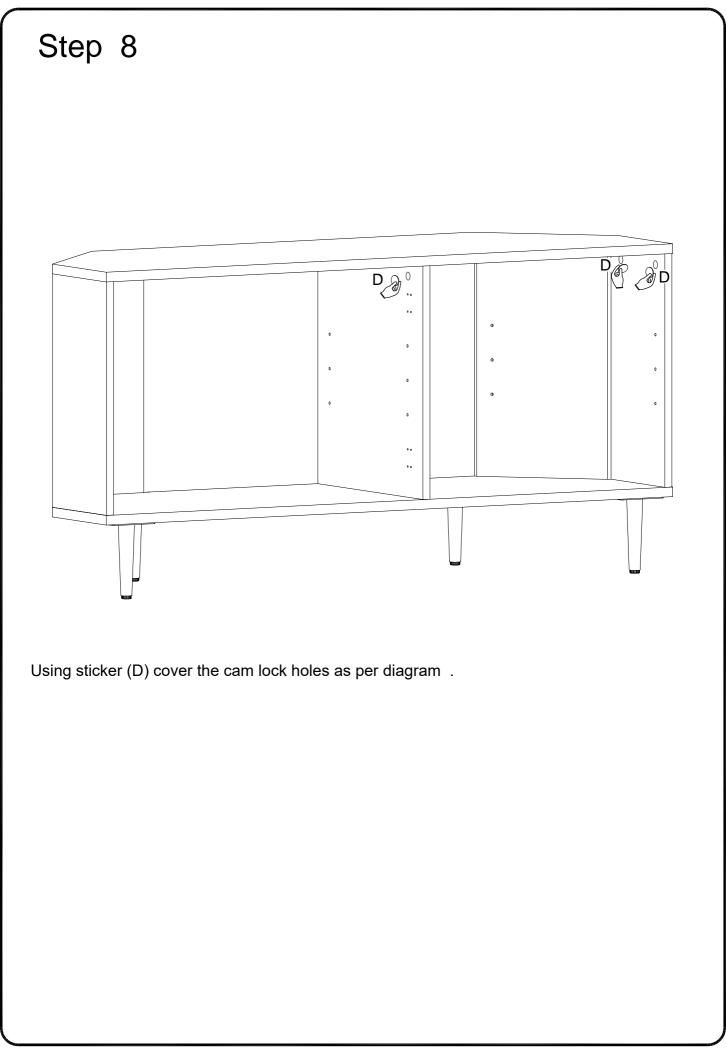


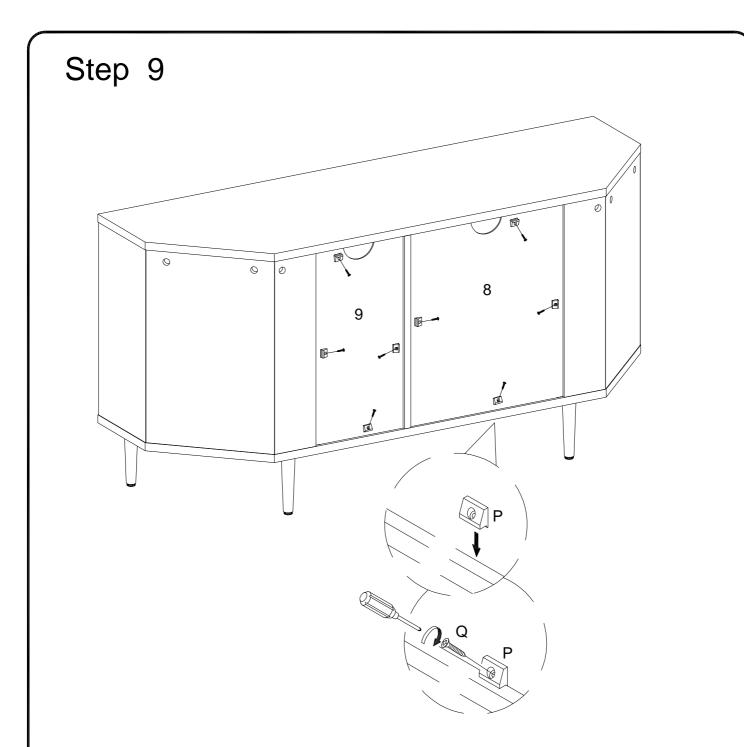


Using screw (Q) secure plastic wedge (P) to fix parts (8,9) with Philips head screwdriver as per diagram .

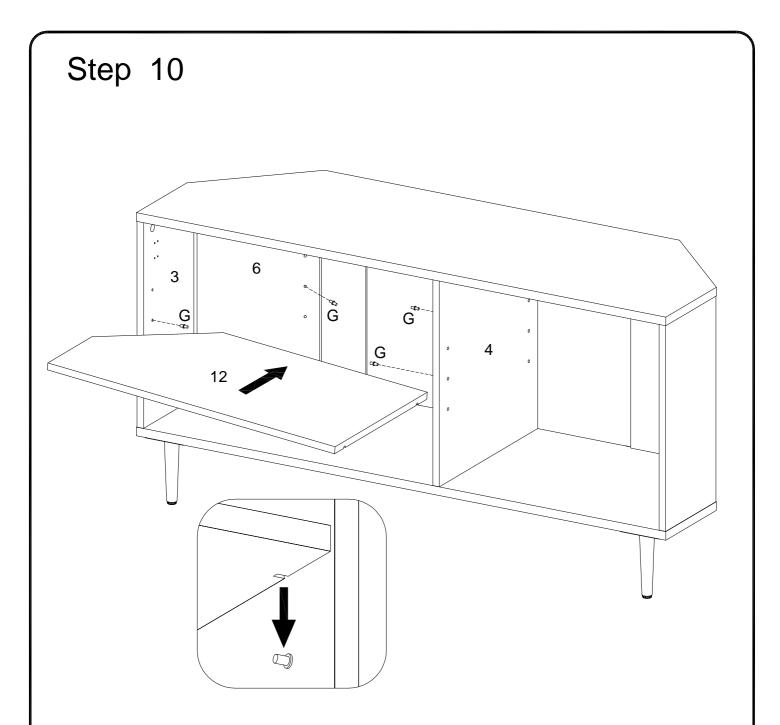


Insert shelf support pin (G) into parts (3,4,6) as per diagram. Make sure you place the four shelf support pins (G) in the same level. So the shelf is not titled .Put part (12) into unit as per diagram. Tilt and rest the adjustable shelf(12) onto the shelf support pins .

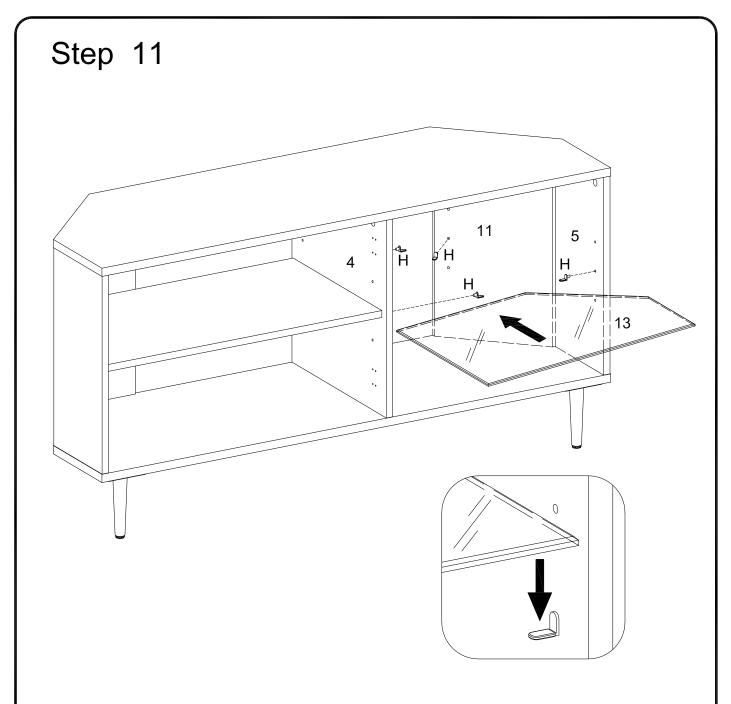



Insert L shape shelf support pins (H) into parts (4,5,11) as per diagram .Make sure you place the four shelf support pins (H) in the same level .so the shelf is not titled. Put glass shelf (13) into the unit as per diagram. Titled and rest the adjustable glass shelf (13) onto the shelf support pins as per diagram .

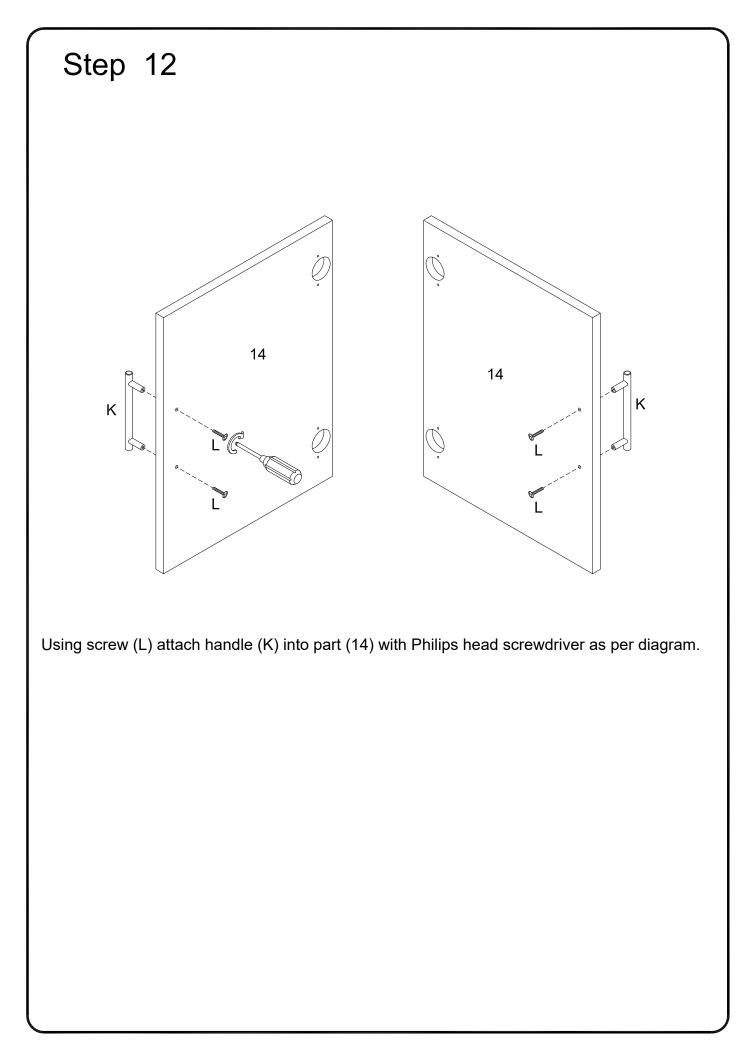

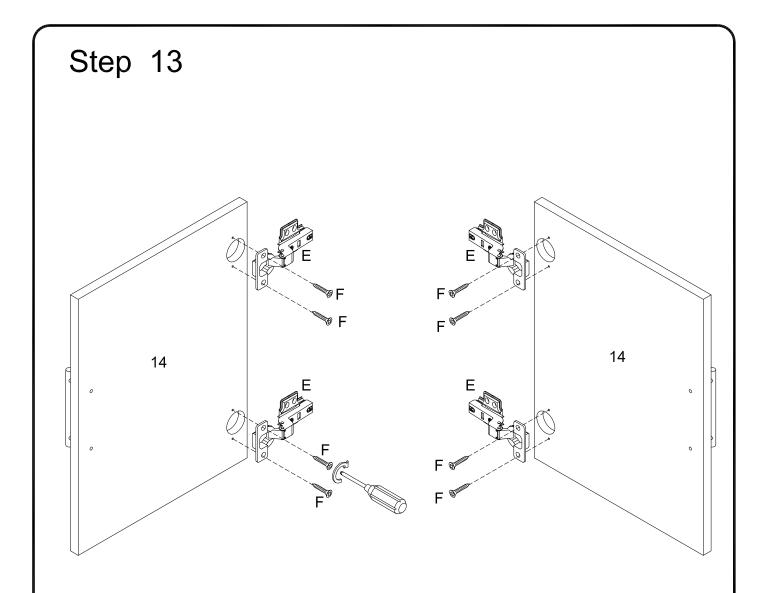


Using screw (F) attach Europe hinge (E) into part (14) with Philips head screwdriver as per diagram.

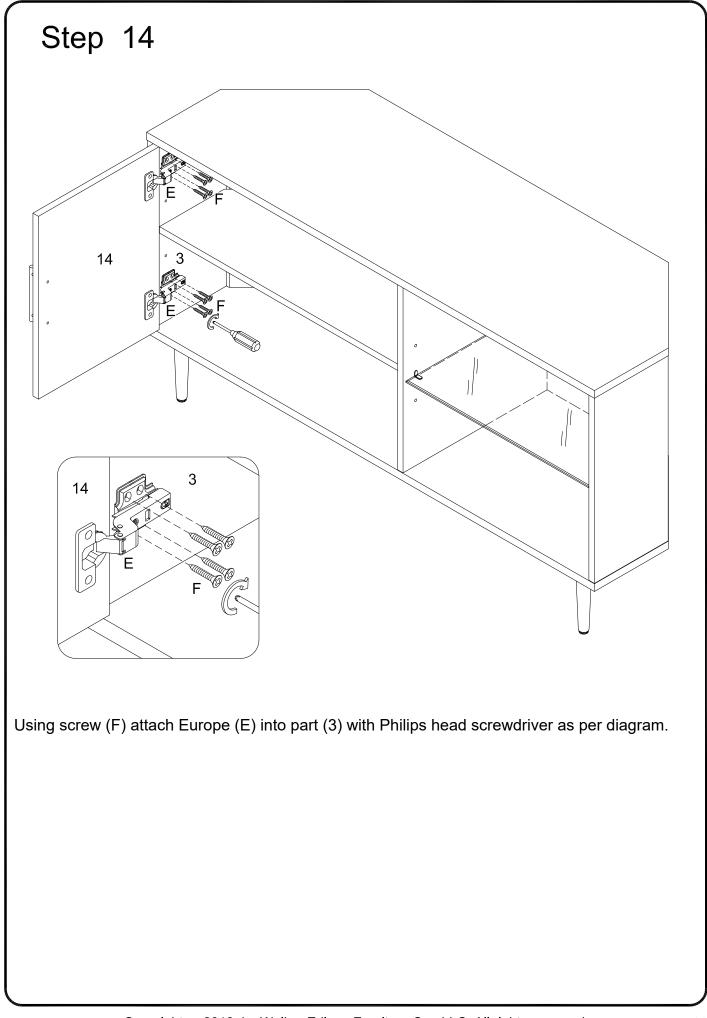


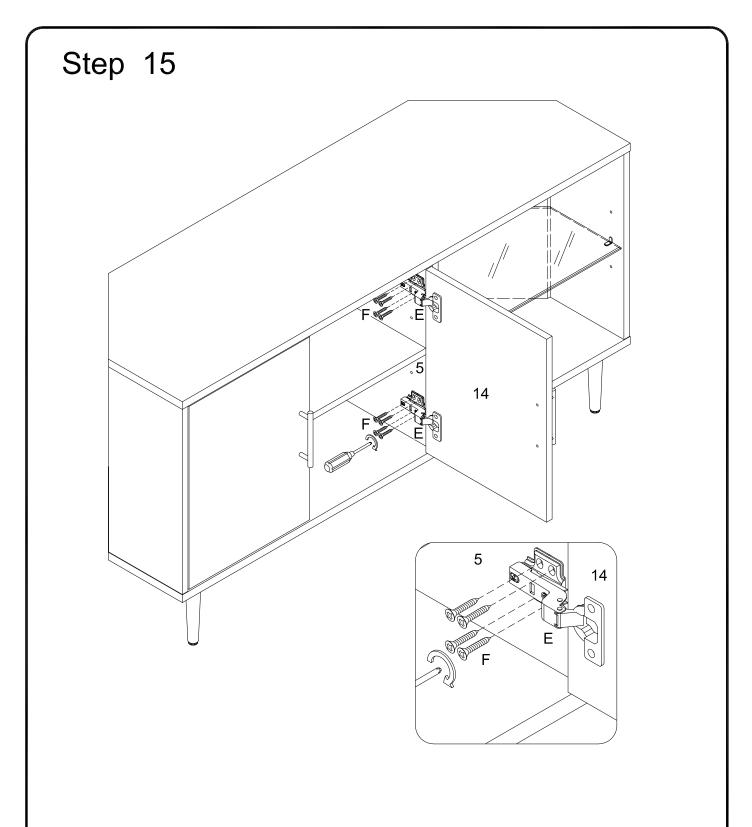

Using screw (F) attach Europe (E) into part (5) with Philips head screwdriver as per diagram. Close and open the doors to make sure they are shut correctly .If necessary ,adjust the screws (F) for a good fit .

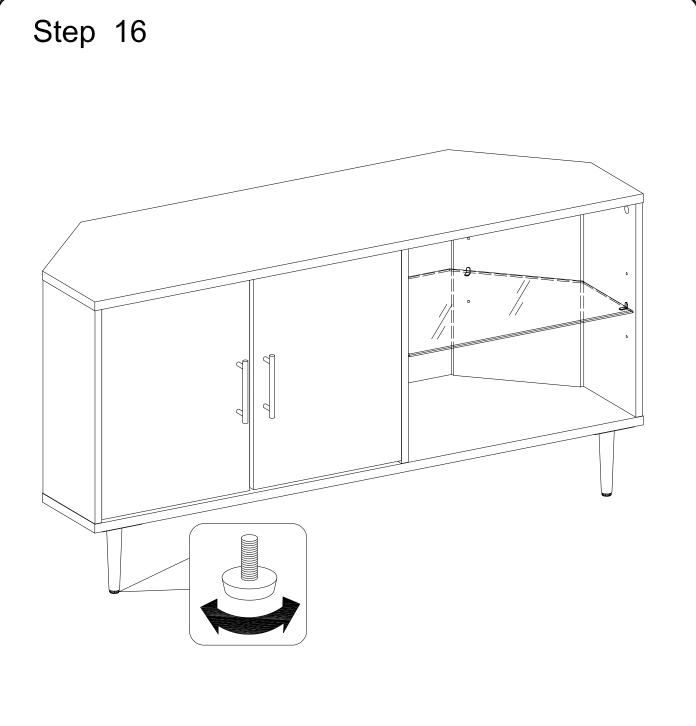

Position the assembled unit at the deaired location. If necessary adjust the floor levelers at the bottom of legs to level the unit .

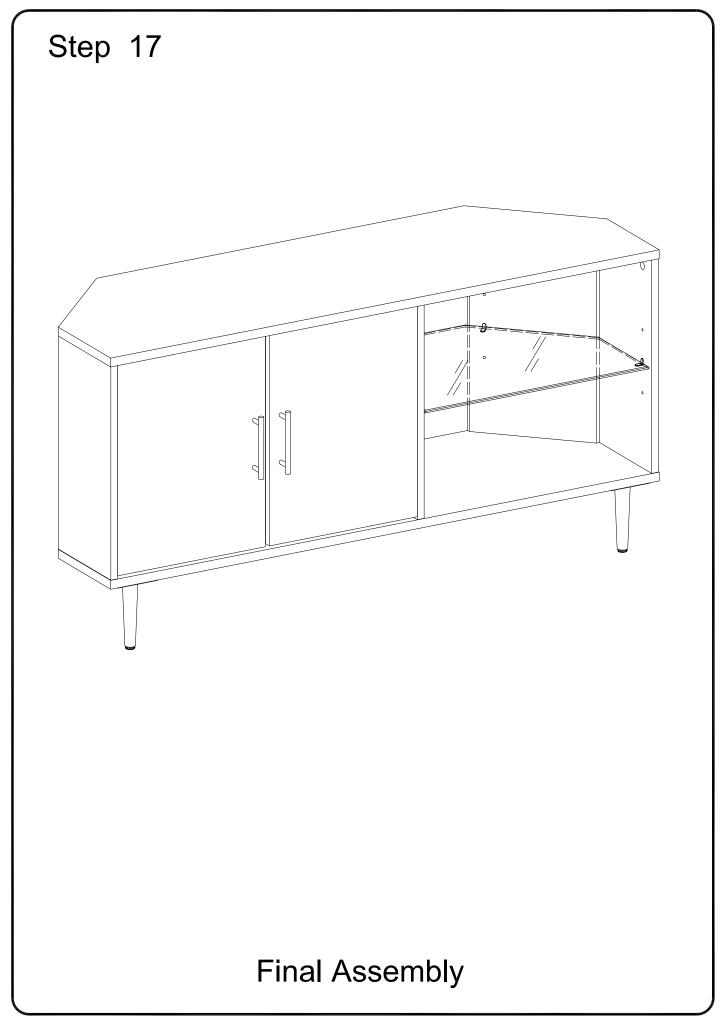

Copyright © 2019, by Walker Edison Furniture Co., LLC. All rights reserved.