


BOX #1

A. HEADBOARD : 1 PC B. HEADBOARD STRETCHER : 1 PC

C. LEFT LEG : 1 PC : 1 PC D. RIGHT LEG


* HEADBOARD HARDWARE BOX *

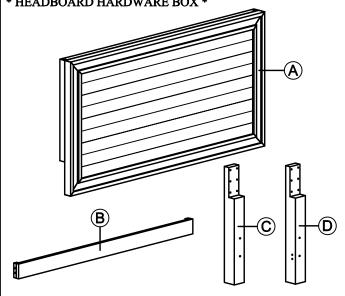

BOX #2


E. FOOTBOARD : 1 PC F. SLAT ROLL : 1 SET

G. SUPPORT LEG : 5 PCS

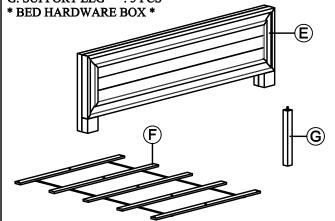

BOX #3

H. SIDERAIL : 2 PCS

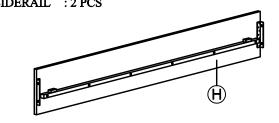

HARDWARE PACKED IN BOX #1


1	ALLEN BOLT (M6x50)	9	12PCS
2	ALLEN BOLT (M6x40)	9	4PCS
3	SPRING WASHER (M8)		16PCS
4	FLAT WASHER (M8)	0	16PCS
5	ALLEN KEY		1PC

HARDWARE PACKED IN BOX #2


6	ALLEN BOLT (M8x25)		8PCS
7	SPRING WASHER (M8)		8PCS
8	FLAT WASHER (M8)	0	8PCS
9	ALLEN KEY		1PC
10	WOOD SCREW (M4x25)	Management	4PCS

TOOL REQUIRED: PHILLIPS HEAD SCREW DRIVER (NOT PROVIDED)

 YOUR BOX MAY CONTAIN EXTRA HARDWARE





ASSEMBLY COMPLETE

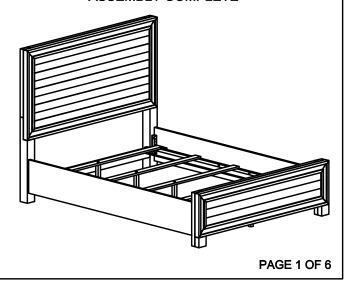




STEP #1:

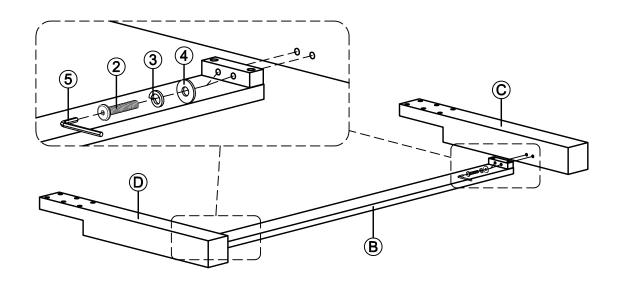

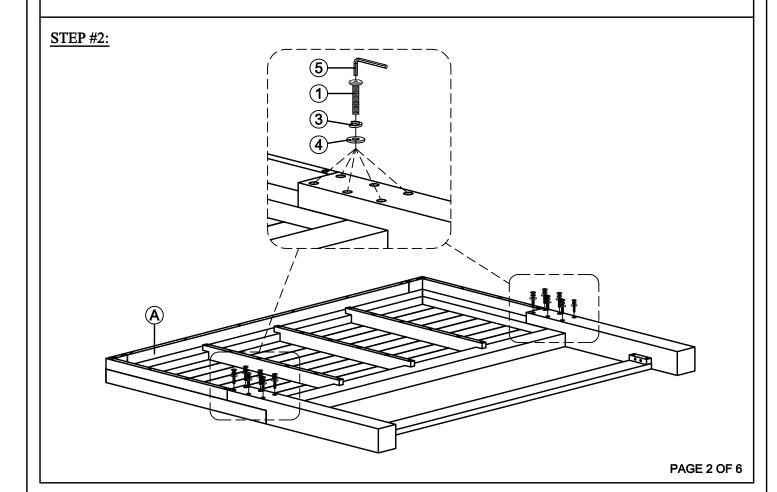




STEP #3:

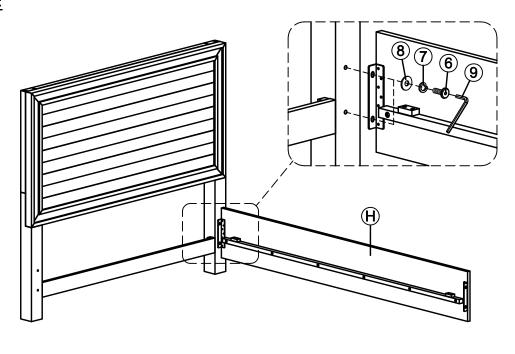


STEP #4:

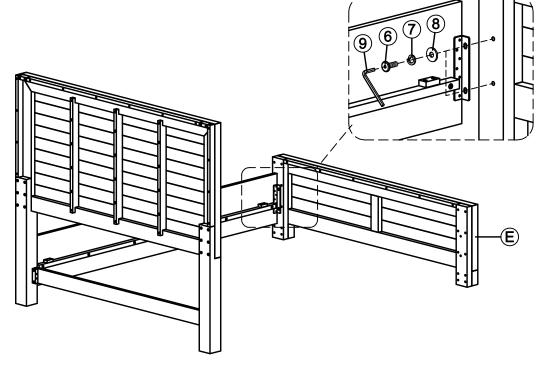

PAGE 3 OF 6




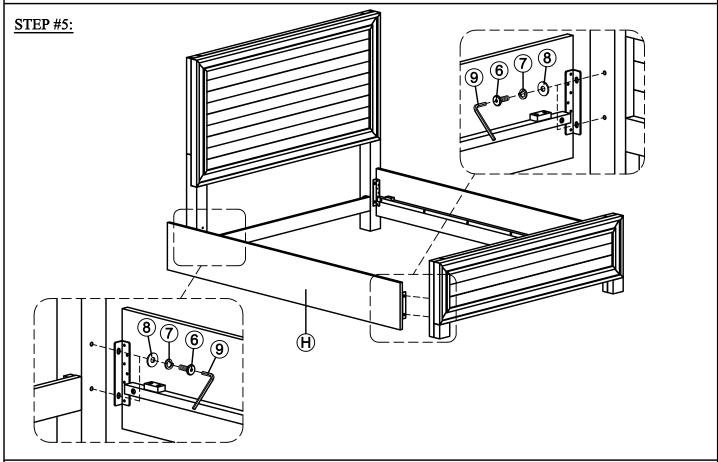




STOP

- IF USING BED FRAME WITH ADJUSTABLE MATTRESS BASE, SKIP TO APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION CONTINUE TO STEP 6.

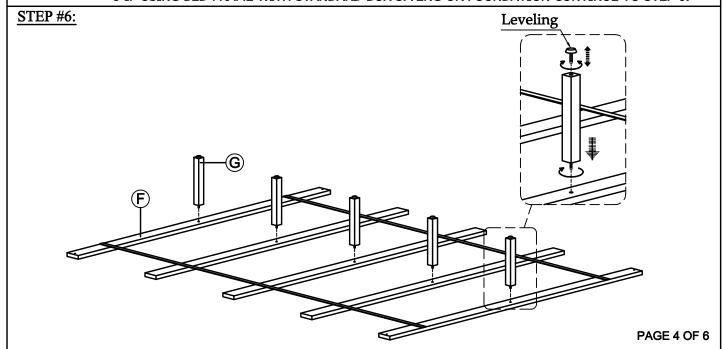




STEP #7:

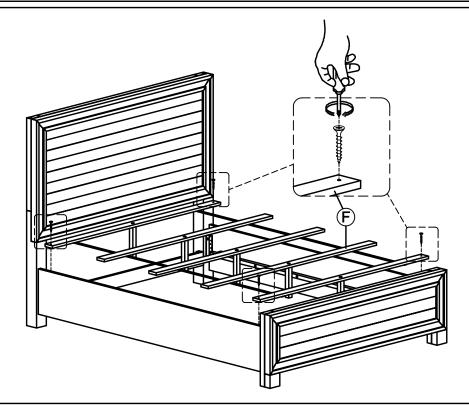

ASSEMBLY COMPLETE.

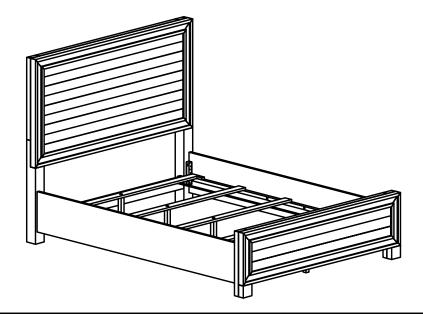

INSTRUCTIONS FOR ADJUSTING LEVELER:

- Position the bed in your space and locate the leveler under each support leg.
- Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.
- Adjust each leveler until each support leg is applying equal, upward pressure on the bed support slat.



MAINTENANCE INSTRUCTION:

- Remove box spring and mattress before moving your bed.
- Lift your bed when moving it.

 Dragging can damage the leg support.
- Readjust levelers after moving your bed.

PAGE 5 OF 6





AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

F. SLAT ROLL : 1 SET 7. WOOD SCREW (M4x25mm) : 4 PCS G. SUPPORT LEG : 5 PCS * ALLEN BOLT (M6x40mm) : 12 PCS

STEP #1:

USE ALLEN KEY (5) or (9) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

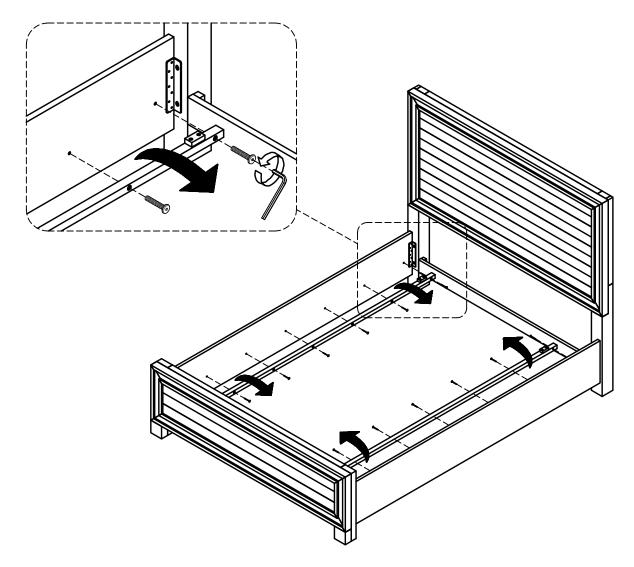

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION.

PAGE 6 OF 6




BOX #1

A. HEADBOARD : 1 PC
B. HEADBOARD STRETCHER : 1 PC
C. LEET LEG ... 1 PC


C. LEFT LEG : 1 PC D. RIGHT LEG : 1 PC




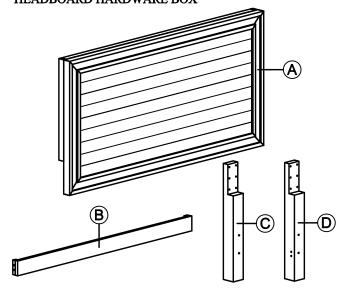

BOX #2

E. FOOTBOARD : 1 PC F. SLAT ROLL : 1 SET

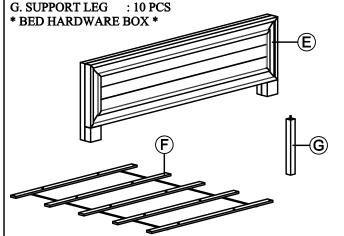

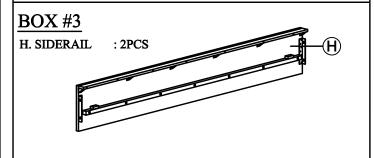

HARDWARE PACKED IN BOX #1


1	ALLEN BOLT (M6x50)	9	12PCS
2	ALLEN BOLT (M6x40)	9	4PCS
3	SPRING WASHER (M8)		16PCS
4	FLAT WASHER (M8)	0	16PCS
5	ALLEN KEY		1PC

HARDWARE PACKED IN BOX #2


6	ALLEN BOLT (M8x25)		8PCS
7	SPRING WASHER (M8)		8PCS
8	FLAT WASHER (M8)	0	8PCS
9	ALLEN KEY		1PC
10	WOOD SCREW (M4x25)	Management	4PCS

TOOL REQUIRED : PHILLIPS HEAD SCREW DRIVER (NOT PROVIDED)

 YOUR BOX MAY CONTAIN EXTRA HARDWARE




ASSEMBLY COMPLETE

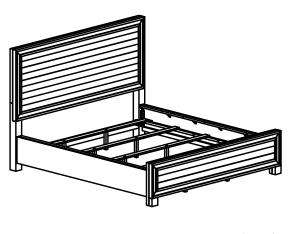


PAGE 1 OF 6




STEP #1:

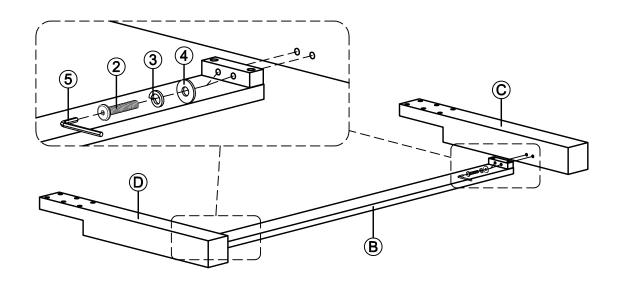

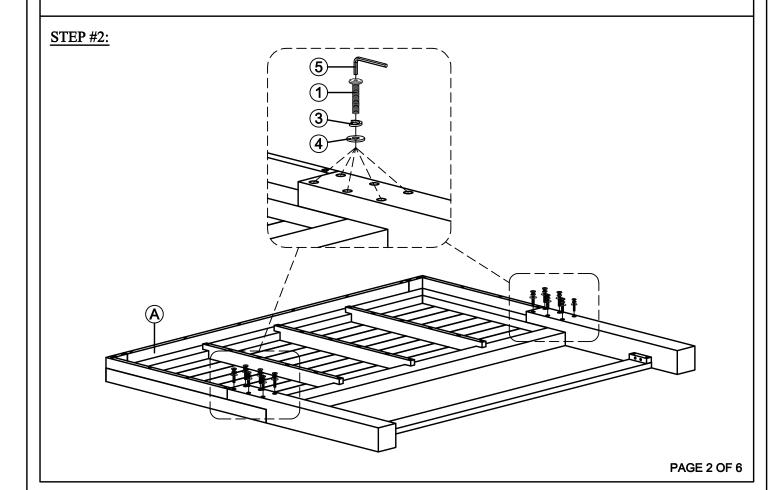




STEP #3:

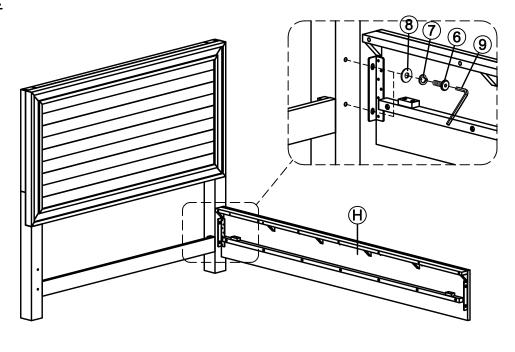


STEP #4:

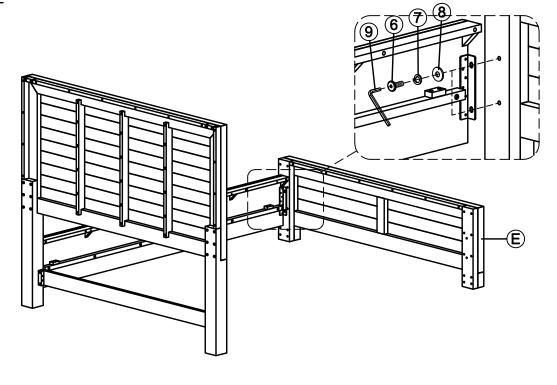

PAGE 3 OF 6




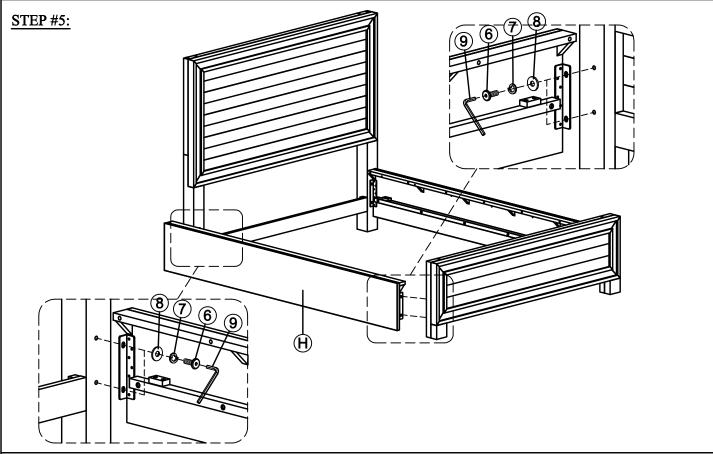




STOP


- IF USING BED FRAME WITH ADJUSTABLE MATTRESS BASE, SKIP TO APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION CONTINUE TO STEP 6.

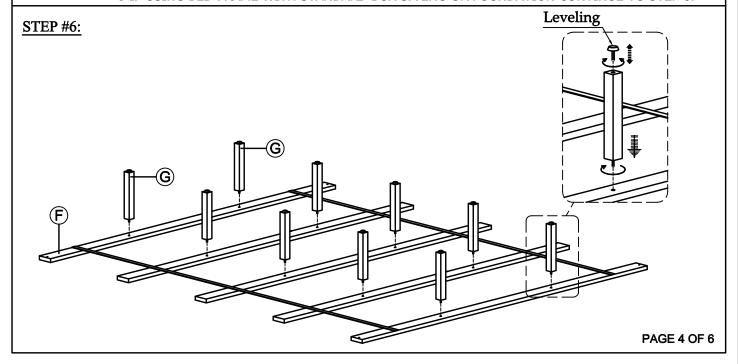



STEP #7:

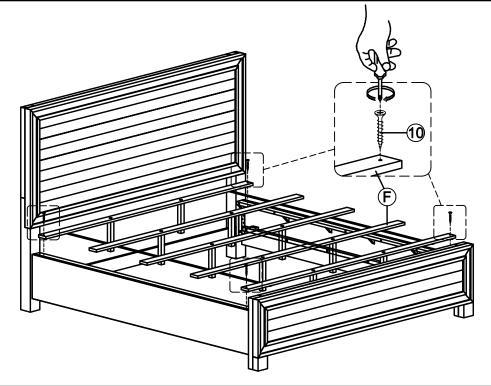

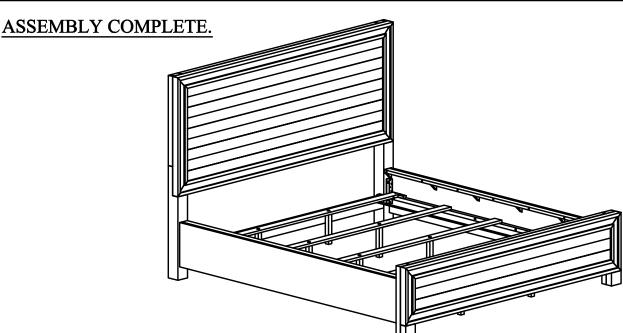

INSTRUCTIONS FOR ADJUSTING LEVELER:

- Position the bed in your space and locate the leveler under each support leg.
- Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.
- Adjust each leveler until each support leg is applying equal, upward pressure on the bed support slat.



MAINTENANCE INSTRUCTION:

- Remove box spring and mattress before moving your bed.
- Lift your bed when moving it.

 Dragging can damage the leg support.
- Readjust levelers after moving your bed.

PAGE 5 OF 6





AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.

PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.


THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

F. SLAT ROLL : 1 SET

G. SUPPORT LEG : 10 PCS 7. WOOD SCREW (M4x25mm) : 4 PCS * ALLEN BOLT (M6x40mm) : 14 PCS

STEP #1:

USE ALLEN KEY (5) or (9) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

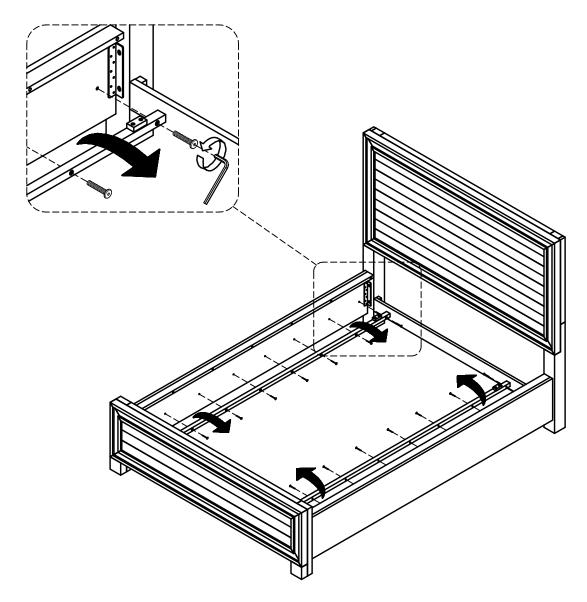

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION.


PAGE 6 OF 6



BOX #1

A. HEADBOARD : 1 PC B. HEADBOARD STRETCHER : 1 PC C. LEFT LEG : 1 PC


D. RIGHT LEG : 1 PC

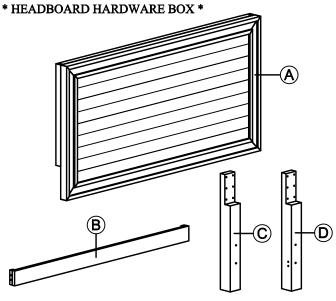

BOX #2


E. FOOTBOARD : 1 PC F. SLAT ROLL : 1 SET

G. SUPPORT LEG : 10 PCS

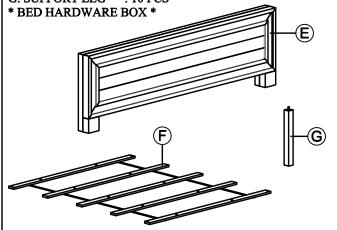

BOX #3

H. SIDERAIL : 2 PCS

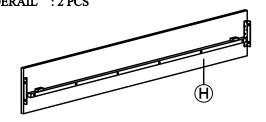

HARDWARE PACKED IN BOX #1


1	ALLEN BOLT (M6x50)	9	12PCS
2	ALLEN BOLT (M6x40)	9	4PCS
3	SPRING WASHER (M8)		16PCS
4	FLAT WASHER (M8)	0	16PCS
5	ALLEN KEY		1PC

HARDWARE PACKED IN BOX #2


6	ALLEN BOLT (M8x25)	9	8PCS
7	SPRING WASHER (M8)		8PCS
8	FLAT WASHER (M8)	0	8PCS
9	ALLEN KEY		1PC
10	WOOD SCREW (M4x25)	Diministra	4PCS

TOOL REQUIRED : PHILLIPS HEAD SCREW DRIVER (NOT PROVIDED)

 YOUR BOX MAY CONTAIN EXTRA HARDWARE





ASSEMBLY COMPLETE

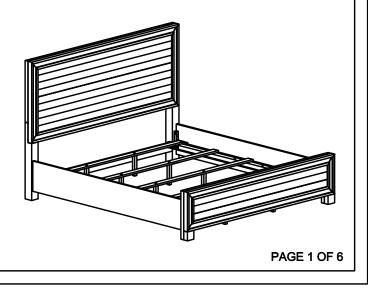




STEP #1:

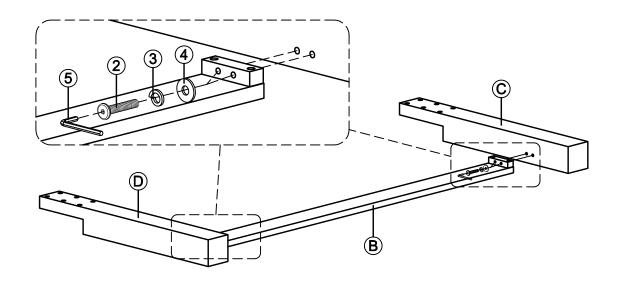

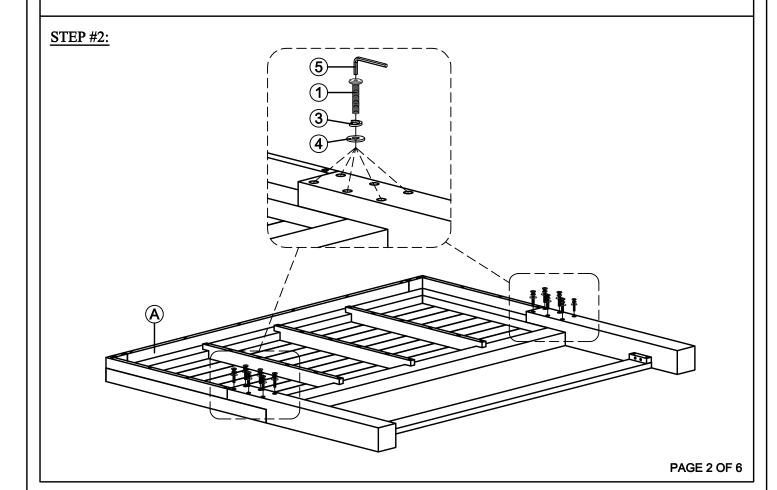




STEP #3:

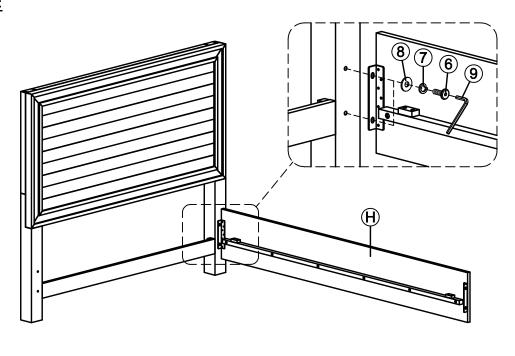


STEP #4:

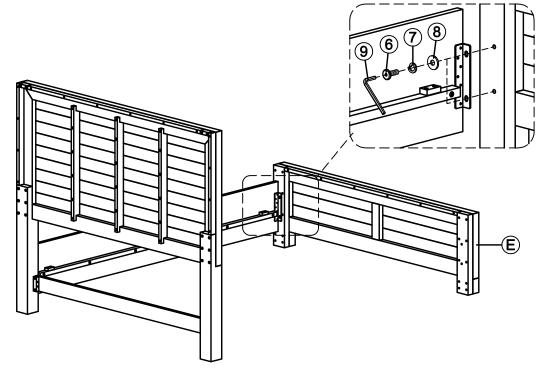

PAGE 3 OF 6




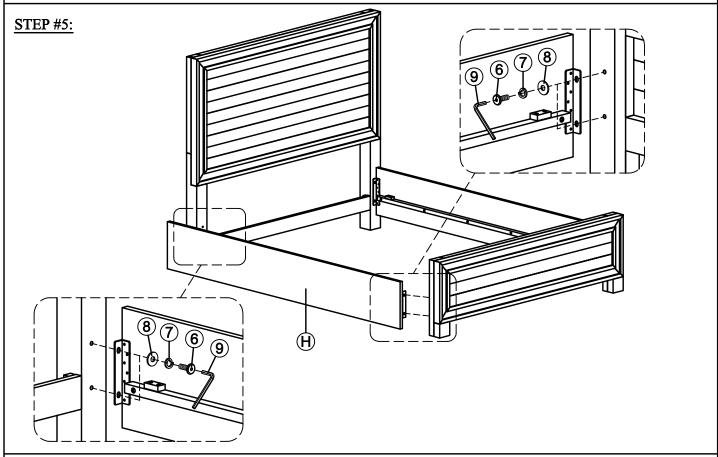




STOP

- IF USING BED FRAME WITH ADJUSTABLE MATTRESS BASE, SKIP TO APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION CONTINUE TO STEP 6.

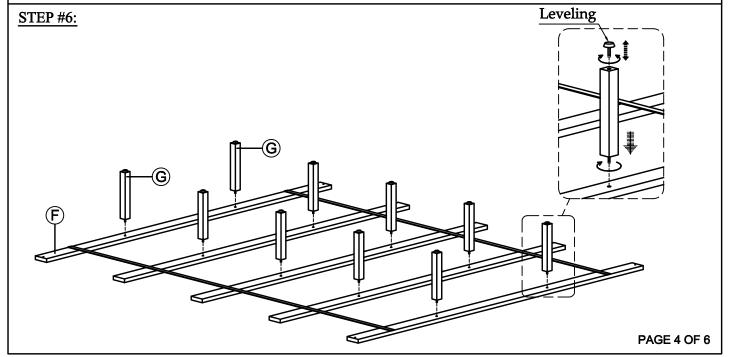




STEP #7:

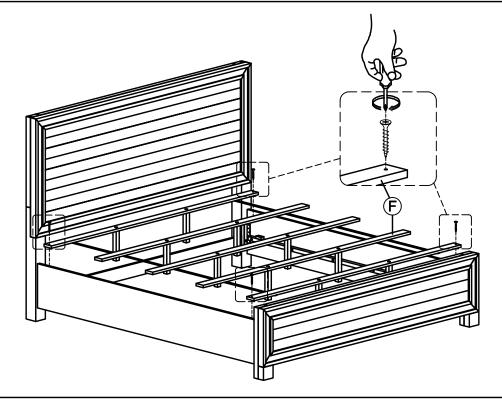

ASSEMBLY COMPLETE.

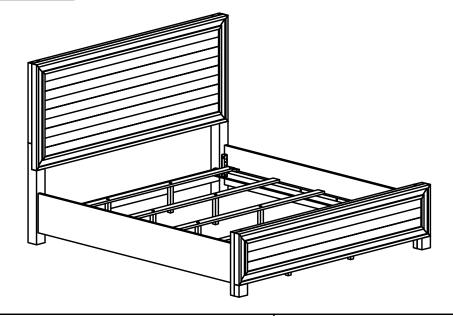

INSTRUCTIONS FOR ADJUSTING LEVELER:

- Position the bed in your space and locate the leveler under each support leg.
- Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.
- Adjust each leveler until each support leg is applying equal, upward pressure on the bed support slat.



MAINTENANCE INSTRUCTION:

- Remove box spring and mattress before moving your bed.
- Lift your bed when moving it.

 Dragging can damage the leg support.
- Readjust levelers after moving your bed.

PAGE 5 OF 6





AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

F. SLAT ROLL : 1 SET 7. WOOD SCREW (M4x25mm) : 4 PCS G. SUPPORT LEG : 10 PCS * ALLEN BOLT (M6x40mm) : 12 PCS

STEP #1:

USE ALLEN KEY (5) or (9) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

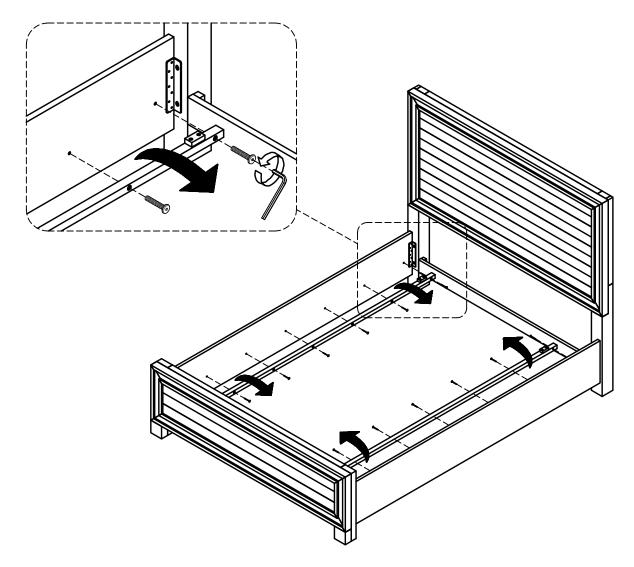

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION.

PAGE 6 OF 6