




4358-6864 (12.18.15) 

Pronto Booster Seat

booster seat 18-45 kg (40-100 lb) 102-145 cm (40-57 in.)
and at least 4 years old



Read all instructions **BEFORE USING** this booster seat.
KEEP INSTRUCTIONS FOR FUTURE USE.

WARNING:

Failure to read, understand and follow the instructions and warnings in this instruction manual and the warnings on the system could result in serious injury or death to the child.

A. Before You Begin.....Pages 3-6

- A-1 Thank You...
- A-2 DJG Consumer Relations Contact Information
- A-3 Registration and Safety Notices
- A-4 Understanding Your Booster Seat

B. Safety Information.....Pages 7-9

- B-1 Vehicle Seating Position
- B-2 Installation in Vehicle
- B-3 Booster Seat Use
- B-4 Transport Canada Regulations
- B-5 Storing Your Booster Seat

C. Basic UsePages 10-20

- C-1 Choose Position for Your Child
- C-2 Preparing Booster Seat for Use
- C-3 Adjusting the Headrest Height
- C-4 Reclining the Backrest
- C-5 Removing Headrest/Backrest
- C-6 Cup Holder
- C-7 Removing Pad for Cleaning

D. General Vehicle InstallationPages 21-23

- D-1 Understanding Your Vehicle
- D-2 Vehicle Seating Position
- D-3 Knowing Your Vehicle Belts

E. Aircraft Installation.....Page 23

- E-1 Booster Aircraft Information

F. Installing Booster Seat Pages 24-29

- F-1 Preparing to Install Highback Booster Seat

- F-2 Installing Highback Booster Seat Using the Lap and Shoulder Belt



- F-3 Preparing to Install Backless Booster Seat

- F-4 Installing Backless Booster Seat Using the Lap and Shoulder Belt




Important Information.....Pages 30-33

- Warranty
- Replacement Parts Order Form


A-4 Understanding Your Booster Seat

Front View

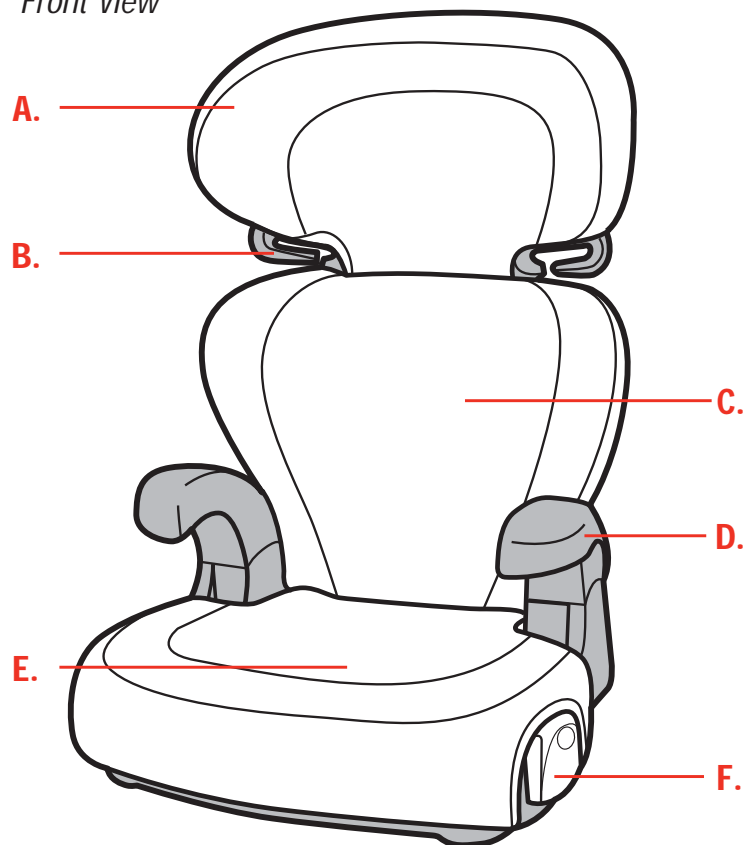


- | | |
|---|--------------------------------------|
| A. Headrest | G. Headrest Adjustment Lock |
| B. Shoulder Belt Positioning Guide | H. Backrest Release Tab |
| C. Removable Backrest | I. Shell |
| D. Armrest | J. Instruction Manual Storage |
| E. Seat Base | |
| F. Cup Holder | |

Back View

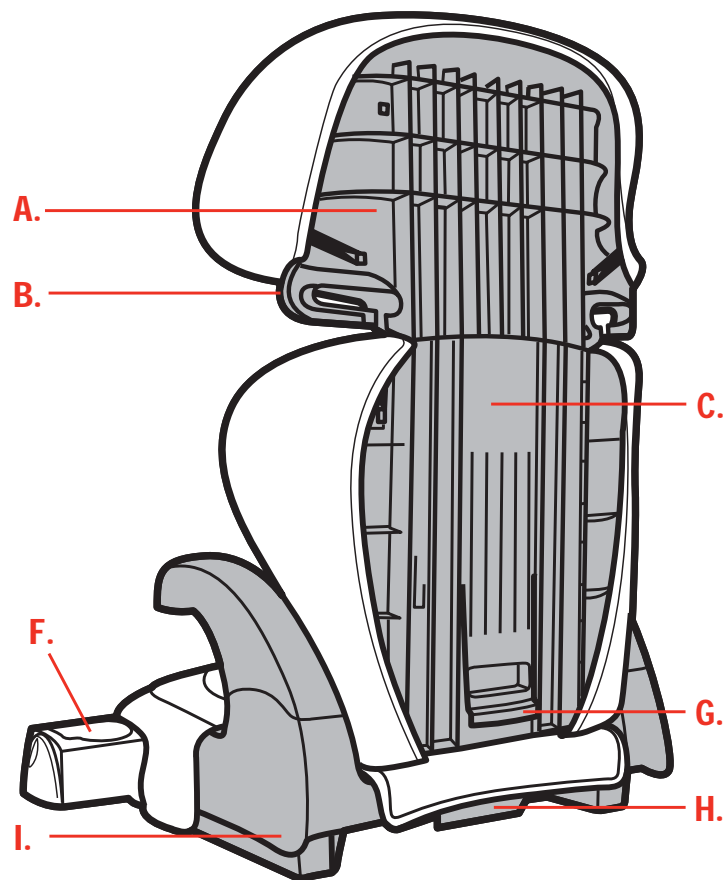

A. Before You Begin

Seat Base Bottom View

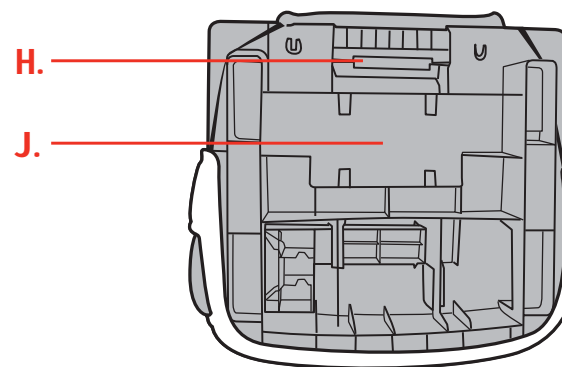

⚠ WARNING:

Failure to read, understand and follow the instructions and warnings in this instruction manual and the warnings on the system could result in serious injury or death to the child.

B-1 Vehicle Seating Position

- ⚠ Always check vehicle owner's manual for booster seat use with front or side air bags.
- ⚠ For vehicles with no rear seats, check the vehicle owner's manual for location and installation of a booster seat.

B-2 Installation in Vehicle

- ⚠ When unoccupied, the booster seat must be secured to the vehicle with the vehicle's seat belt only.
- ⚠ In a crash or sudden stop, an unsecured booster seat could injure the driver or other occupants in the vehicle.
- ⚠ Do not use the booster seat with a lap belt only.
- ⚠ In very few vehicles, the booster seat cannot be properly installed because of the type of seat belt system and/or air bag system. Always read and follow the vehicle owner's manual instructions for booster seat use.

B-3 Booster Seat Use

- ⚠ Do not use a booster seat that has been in a crash or a collision. The system must be replaced.
- ⚠ Do not use a booster seat if you do not know the history of the restraint.
- ⚠ Never take your child out of the booster seat or attend to the child's needs while the vehicle is moving.
- ⚠ Never leave child unattended in the booster seat.
- ⚠ To avoid the child being seriously burned, always check for hot seat and buckles before using this booster seat.
- ⚠ Do not use a booster seat with missing or damaged parts.
- ⚠ DJG does not recommend the use of accessories or add-ons that have not been certified with this booster seat at original purchase date.
- ⚠ Never allow any child to play with this booster seat; it is not a toy.
- ⚠ Do not remove the warning labels.
- ⚠ This booster seat has been certified for use in passenger vehicles only. Do not use in a boat, motorcycle, aircraft or in a cargo van or bus where there are no seat belts.
- ⚠ Read all instructions and warning labels for additional warnings.

B-4 Transport Canada Regulations


Transport Canada Road Safety Directorate regulates children's restraint systems under the Motor Vehicle Restraint Systems Safety Regulations (RSSR). The regulations require the manufacturer and/or importer to certify the booster seat to the applicable safety standards and place specified warnings and information on the labels fastened to each booster seat and in this instruction manual.

B-5 Storing Your Booster Seat

To protect your booster seat, store in the house, not in the garage or attic. The hot and cold temperatures can harm the plastic shell if stored for a long period of time.

C-1 Choose Position for Your Child

Your child's height, weight and age determine how your booster seat should be used and placed in the vehicle.

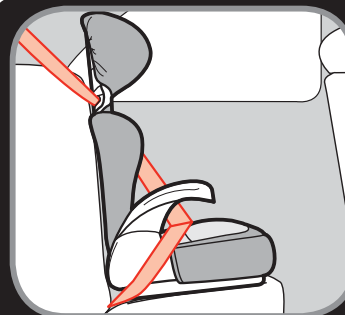

**18-45 kg (40-100 lb)
102-145 cm (40-57 in.)
and at least 4 Years Old**

**Highback booster
seat using vehicle
lap/shoulder belt
combination**

Child and booster seat are placed in the back seat, facing the front of the vehicle.



**18-45 kg (40-100 lb)
102-145 cm (40-57 in.)
and at least 4 Years Old**

**Backless booster
seat using vehicle
lap/shoulder belt
combination**

Child and booster seat are placed in the back seat, facing the front of the vehicle.

C. Basic Use

⚠ WARNING:

Verify your child's weight and height (do not guess) before using this booster seat.


C-2 Preparing Booster Seat For Use

NOTE: Separate the backrest/headrest from the base. If your pad comes in a plastic bag, remove the pad from the plastic bag.




1. Install Seat Pad

Slide seat pad onto the front of the seat base. Doing one side at a time, slide the elastic strap over each armrest.

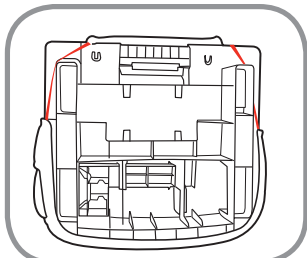


2. Wrap Elastic Straps Under the Seat Base

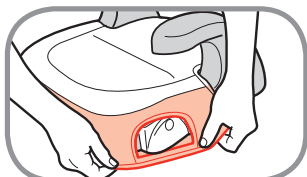


3. Pull Seat Pad Around Cup Holder

To use the booster seat with backrest/headrest, follow all of the instructions below to attach the seat back.

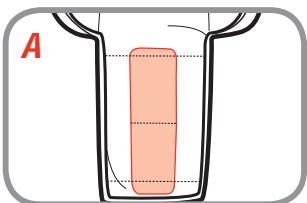


1. Determine Style of Headrest Pad

If back of headrest pad has a sewn on plastic piece (image **A**), follow **steps 2-5 and steps 10-12**.

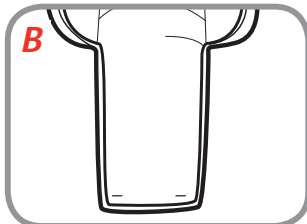


If the headrest pad does not have plastic piece (image **B**), skip to **steps 6-12**.

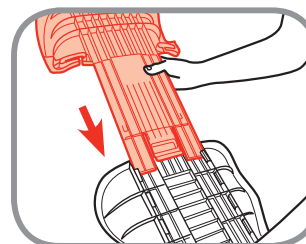


2. Attach Headrest to Backrest

With the headrest and backrest facing down, slide the headrest into the track on the back of the headrest.

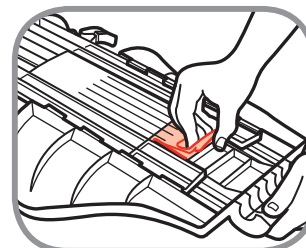


a. Lift headrest adjuster lock up and pull headrest down into a lock position.

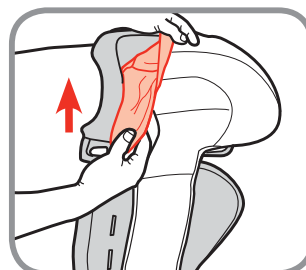


3. Install Headrest Pad

Slide the pad over one side of the head rest, then the other.

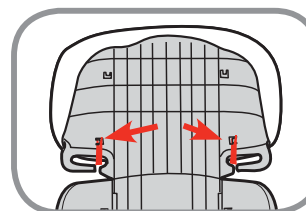


4. Attach the Elastic Straps

From the back of headrest, attach the elastic straps to the hooks above the shoulder belt positioning guides.

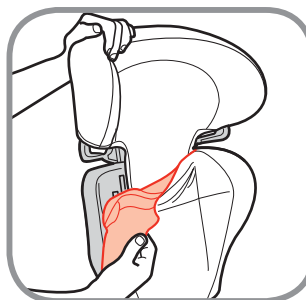


5. Install Backrest Pad

Slide backrest pad onto one side of the backrest. Pull pad tight and slide the pad over the other side of backrest. Bottom of the headrest pad should be behind the backrest pad as shown.


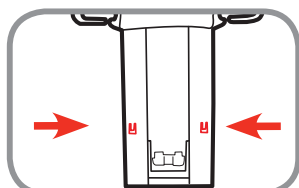


6. Install Headrest Pad

Attach headrest pad by attaching pad to tabs near the bottom of the headrest.

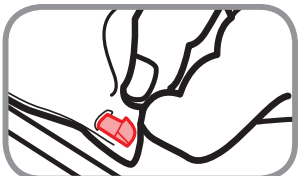


- a. Slide the pad over one side of the head rest, then the other.

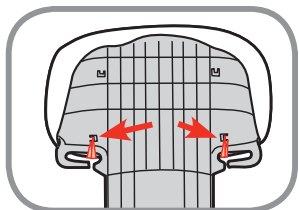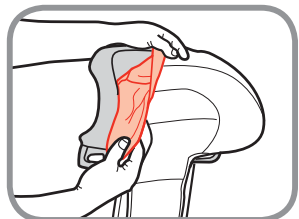


7. Attach the Elastic Straps

From the back of headrest, attach the elastic straps to the hooks above the shoulder belt positioning guides.

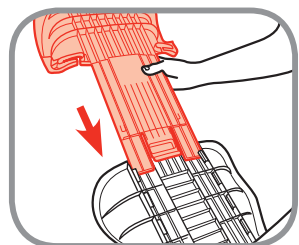


8. Attach Headrest to Backrest

With the headrest and backrest facing down, slide the headrest into the track on the back of the backrest.

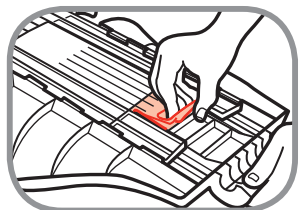


- a. Lift headrest adjuster lock up and pull headrest down into a lock position.

13

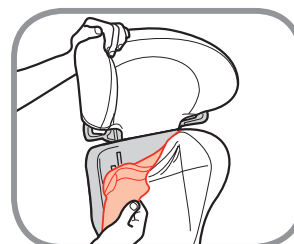


9. Install Backrest Pad

Slide backrest pad onto one side of the backrest. Pull pad tight and slide the pad over the other side of backrest.

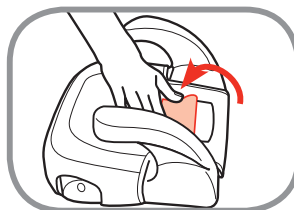


10. Expose the Backrest Hole

Hold the rectangular shaped flap on the rear of the seat base pad down to expose the backrest hole.

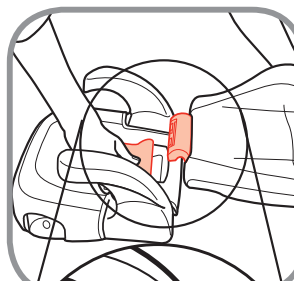

11. Attach Backrest to Seat Base

With the backrest laying flat (horizontal), insert the hook on the backrest into the large opening on the back of the seat base. Make sure the seat base pad does not get caught between the moving parts. The backrest may not connect properly if the pad is in the way.

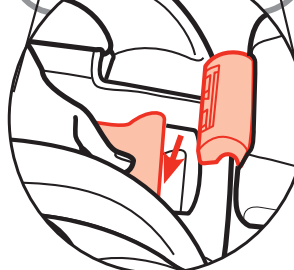

12. Rotate Backrest Up


Rotate backrest all the way up into the locked position. In the locked position, the backrest will remain upright.




Tuck backrest hole flap under the backrest pad.

14

C-3 Adjusting the Headrest Height

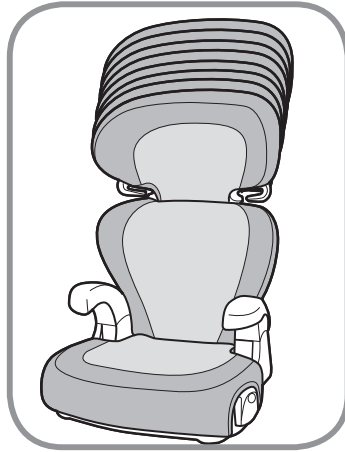


1. *Headrest has Multiple Headrest Positions*

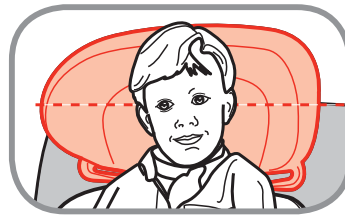

2. *Check Headrest Height*

Align the midpoint of the child's ears with the midpoint of the headrest. Adjust headrest if needed.

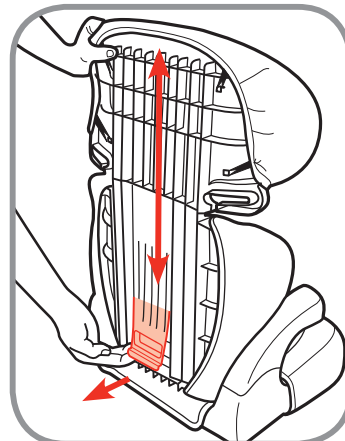


3. *To Raise or Lower Headrest*

Grasp the top of the headrest with one hand and push down on the headrest while pulling out on the headrest adjustment lock with the other.

Raise or lower headrest to selected position. Release the headrest adjustment lock into one of headrest heights. Check to make


sure the headrest is locked by push/pull headrest up and down. Headrest will move slightly when it is locked.

C-4 Reclining the Backrest

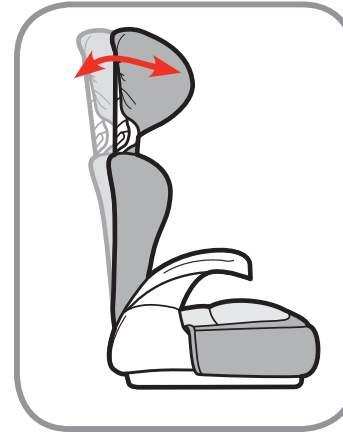

1. *Backrest has 2 Positions*


Backrest has an upright and semi-reclined positions. The semi-reclined position is to be used only to install the booster seat flush against the vehicle seat back, if needed.

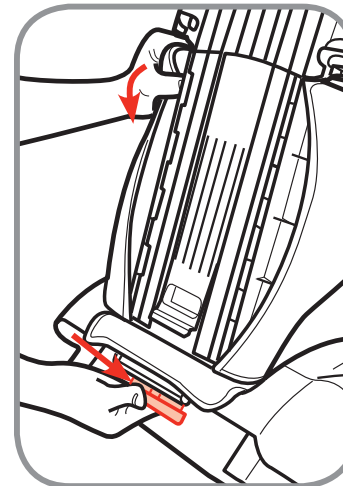

2. *To Recline Backrest*


Push firmly on the backrest release tab and rotate top of seat back about 2.5 cm (1 in.) The backrest is now in semi-recline mode.

C-5 Removing Headrest/Backrest

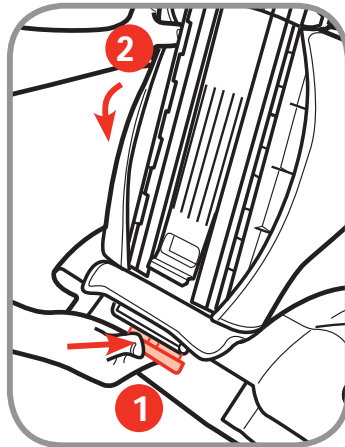

1. Lay Backrest Flat

To remove backrest/headrest from seat base, backrest needs to be in the most upright position. Press firmly on backrest release tab (1) and rotate seat back until it lays flat (2).

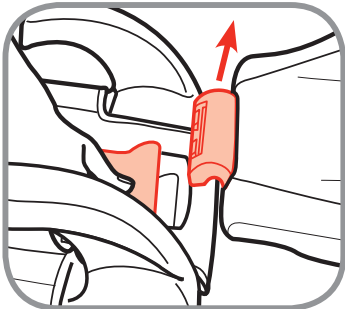


2. Remove Backrest

Lift backrest hook out of hole in seat base. Store backrest for future use.


Lay flap over hole where backrest connects to the base.

C-6 Cup Holder

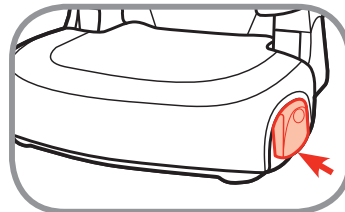

1. Cup Holders


Cup holder is located in the seat base of the booster seat.

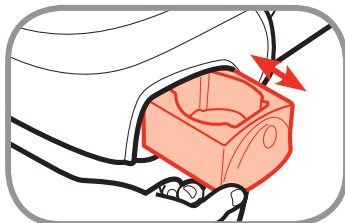

2. Pull out cup holder to use. Push the cup holder in when not needed.


17

C-7 Removing Seat Pad for Cleaning

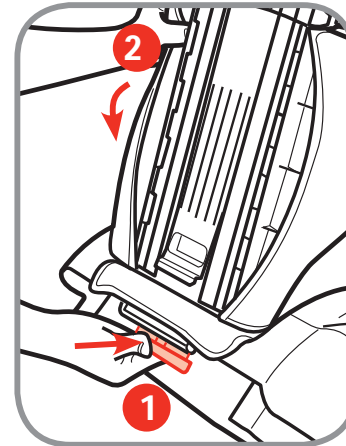

1. Lay Backrest Flat


To remove backrest/headrest from seat base, backrest needs to be in the most upright position. Press firmly on backrest release tab (1) and rotate seat back until it lays flat (2).

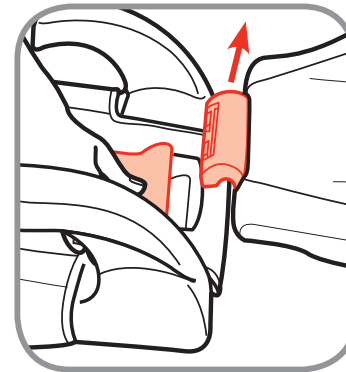

2. Remove Backrest

Lift backrest hook out of backrest hole in seat base. Store backrest for future use.

Lay flap over hole where backrest connects to the base.

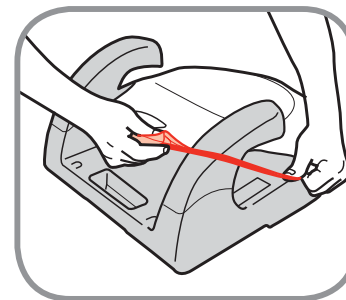


3. Remove Pad from Seat Base

Pull elastic straps out from under the seat base and pull the pad off the seat base.

18


continued on next page.

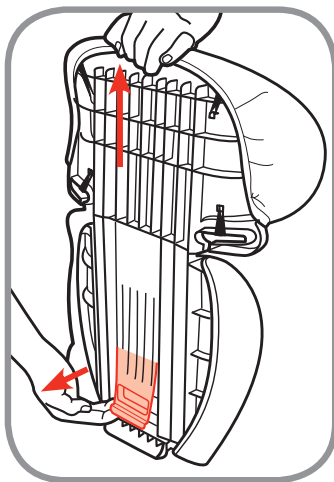

4. **Remove Headrest from Backrest:**

Grasp top of headrest and push down with one hand while pulling out on the headrest adjustment lock with the other.

Pull up to remove headrest.


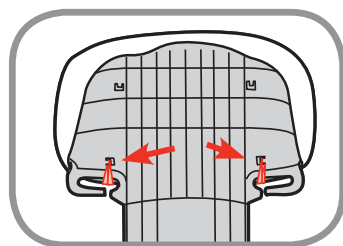


5. **Remove Pad from Headrest**

From the back, remove the elastic from the back of the headrest.

Depending on your model, you may need to unhook bottom of pad from tabs near bottom of headrest.

Pull pad off of headrest.

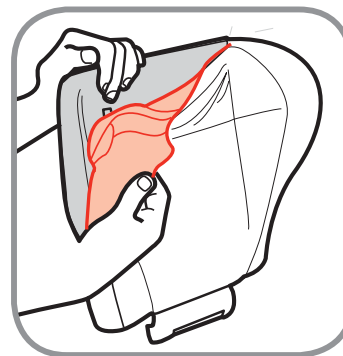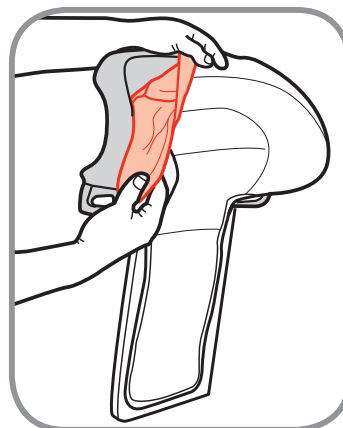

6. **Remove Pad from Backrest**

From the side, pull pad off of backrest.

Cleaning Pad

Machine wash separately with cold water on a gentle cycle. Do not use bleach. Tumble dry separately for 10-12 minutes on low heat. Remove immediately.

! WARNING:

Do not use this booster seat without the seat pad. Failure to do this can result in serious injury.


Installing Pad

See section C-2 and follow instructions that are applicable to the type of pad you have.

C. Basic Use


D-1 Understanding Your Vehicle

Your vehicle's features may be considerably different than those pictured here. Consult your vehicle owner's manual to help identify your vehicle's specific features and locations.

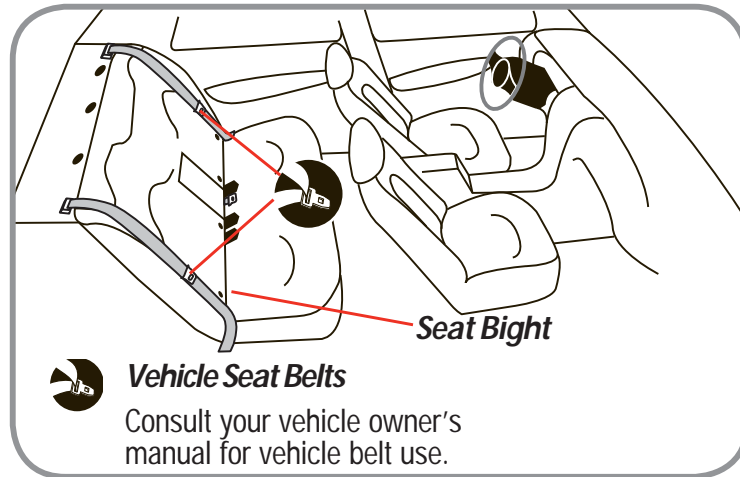

D-2 Vehicle Seating Position

⚠ WARNING:

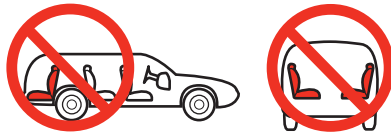

Use the booster seat only on vehicle seats that face forward. Do not use on seats that face the sides or rear of the vehicle. For vehicles with an air bag, but without a back seat, refer to your vehicle owner's manual.

In very few vehicles, the booster seat cannot be properly installed because of the type of seat belt system or air bag system. Always read and follow the vehicle owner's manual instructions for booster seat use.

Safety Tip:



Children are safer when properly restrained in rear seating positions than in the front seating positions.

According to accident statistics, children in rear seating positions are statistically safer, whether you have air bags, advanced air bags, or no air bags at all.

To help protect your vehicle seat's upholstery from damage, use a single layered towel underneath and behind booster seat.

To avoid your child being seriously burned, take the following precautions:

1. Park in the shade or where sun does not directly hit the booster seat.
2. Cover the booster seat with a sheet or blanket when not in use.
3. Check for hot booster seat and buckles before placing child in booster seat.

D-3 Knowing Your Vehicle Belts

Review your vehicle's owner manual for vehicle seat belt use with booster seats. This is your best source for information concerning your vehicle.

Not all vehicle belts will work with this booster seat. This booster seat must be tightly locked in place at all times during travel. You must determine if your vehicles belts are compatible with this booster seat.

Vehicle Belts


• Automatic/Passive Vehicle Seat Belts

You **MUST** have a vehicle lap and shoulder belt to install any booster seat.



• Vehicle Belts in center of the door or side panel

You must move the booster seat to another seating location. Consult your vehicle owner's manual.

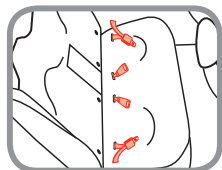

• Vehicle Belts that are in front of the seat bight

You may need to move the booster seat to another seating location. Consult your vehicle owner's manual.

E-1 Booster Aircraft Information




This booster seat is **NOT** certified for use in aircraft because aircraft seats do not have shoulder belts.

F-1 Preparing to Install Highback Booster Seat

18-45 kg (40-100 lb) 102-145 cm (40-57 in.)
and at least 4 Years Old

Booster seat using only vehicle lap/shoulder belt.

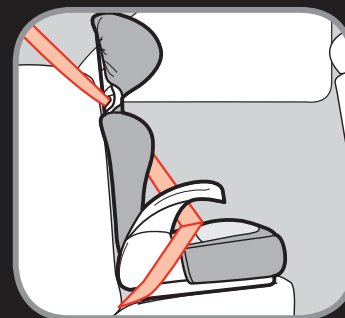


Lap/Shoulder Belt

⚠ WARNING:

Use only the vehicle's lap and shoulder belt system when restraining the child in this booster seat.



Do not use this booster seat if the midpoint of your child's ears are above the top of the booster seat's headrest.

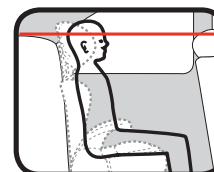

Do not use this booster seat if the midpoint of your child's ears are above the top of the vehicle seat back or vehicle's headrest.

Failure to follow these warnings can result in serious injury or death.



F-2 Installing Highback Booster Seat Using the Lap and Shoulder Belts



1. Place Booster Seat in Vehicle Forward-Facing in the Back Seat

Place booster seat in the back seat, **flush** against the back of the vehicle seat.



2. Place Child in Seat

Place the child's bottom and back flat against the booster seat. This will allow the vehicle belt to be properly tightened.



3. Check Headrest Position

The midpoint of the child's ears should be at the midpoint of the headrest. See section C-3 to adjust the headrest.

25



4. Buckle Lap and Shoulder Belt

Lap belt should cross the child's thighs (not on the stomach). Both belts on the buckle side of booster seat should be under the armrest and the lap belt should be under both armrests as shown.



5. Secure the shoulder belt through the shoulder belt positioning guide on the headrest. The shoulder belt should lay snugly across the center of the child's shoulders and across the chest (not on the face or neck). Pull up on the shoulder belt to tighten.

Check periodically to ensure your child has not moved out of position and loosened the vehicle belt.

Check periodically to ensure your child has not moved out of position and loosened the vehicle belt.

⚠ WARNING:

Do Not Use the vehicle lap belt only when using this booster seat.

The shoulder belt must always be adjusted snugly across the child's chest.

NEVER place the shoulder belt behind the child's back or under the child's arms.

Failure to follow these warnings can result in serious injury or death to your child.



26

F-3 Preparing to Install Backless Booster Seat

18-45 kg (40-100 lb) 102-145 cm (40-57 in.)
and at least 4 Years Old


Booster seat using only vehicle lap/shoulder belt.



Lap/Shoulder Belt

⚠ WARNING:

Use only the vehicle's lap and shoulder belt system when restraining the child in this booster seat.

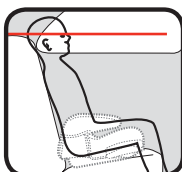


Do not use this backless booster seat if the midpoint of your child's ears are above the top of the vehicle seat back or vehicle headrest.

Failure to follow these warnings can result in serious injury or death.



F-4 Installing Backless Booster Seat Using the Lap and Shoulder Belts

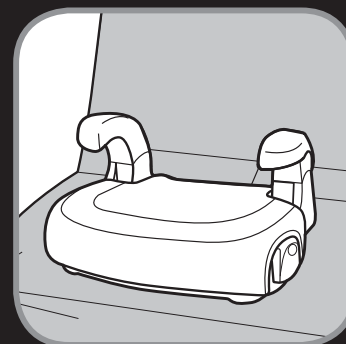

1. Place Booster Seat in Vehicle Forward-Facing in the Back Seat

Place booster seat in the back seat, **flush** against the back of the vehicle seat.



2. Place Child in Seat

Place the child's bottom flat against the booster seat. The child's upper and lower back should be flat against the vehicle seat back. This will allow the vehicle belt to be properly tightened.



3. Buckle Lap and Shoulder Belt

Lap belt should cross the child's thighs (not on the stomach). Both belts on the buckle side of booster seat should be under the armrest and the lap belt should be under both armrests as shown.



4. The shoulder belt should lay snugly across the center of the child's shoulders and across the chest (not on the face or neck). Pull up on the shoulder belt to tighten.

Check periodically to ensure your child has not moved out of position and loosened the vehicle belt.

⚠ WARNING:

Do Not Use the vehicle lap belt only when using this booster seat.

The shoulder belt must always be adjusted snugly across the child's chest.

NEVER place the shoulder belt behind the child's back or under the child's arms.

Failure to follow these warnings can result in serious injury or death to your child.



Warranty

Dorel Juvenile Group, Inc. (DJG) warrants this product to the original retail purchaser as follows:

This product is warranted against defective materials or workmanship for **one year** from the date of original purchase. **An original receipt is required to validate your warranty.** DJG will, at its option, provide replacement parts or replace this product. DJG reserves the right to substitute if the part or model has been discontinued.

To make a claim under this warranty you may contact us at www.djgusa.com, fax us at 1-800-207-8182 24 hours a day, write to DJG, Consumer Relations Department, P.O. Box 2609, Columbus, IN 47202-2609, or call 1-800-544-1108 from 8:00 a.m. to 6:00 p.m. EST Monday through Thursday and from 8:00 a.m. to 4:30 p.m. on Friday. **Proof of purchase is required and shipping charges are the responsibility of the consumer.**

Warranty Limitations: This warranty does not include damages which arise from misuse or abuse of this product.

Limitation of Damages: The warranty and remedies as set forth are exclusive and in lieu of all others, oral or written, express or implied. In no event will DJG or the dealer selling this product be liable to you for any damages, including incidental or consequential damages, arising out of the use or inability to use this product.

PLEASE REGISTER ONLINE AT:

WWW.DJGUSA.COM/REGISTRATION/CARSEAT/CAN OR
COMPLETE AND MAIL THE PRE-PAID OWNER REGISTRATION CARD
WITHIN (30) DAYS OF PURCHASE.

If there is ever a safety issue with your child restraint, we use registration information to reach owners. Please do not send in your registration card if you have registered your child restraint online.

Replacement Parts Order Form

Complete the form. Your model number and manufacture date code **MUST** be included on the form to ensure proper replacement parts. The codes can be found on a label on side of child restraint. Payment in U.S. dollars must accompany your order. Choose parts needed from the list on the next page.

Return the form with payment to:

Dorel Juvenile Group, Inc.
Consumer Relations Department

P.O. Box 2609
Columbus, IN 47202-2609

Fax orders to: 1-800-207-8182

Please make money orders payable to Dorel Juvenile Group, Inc. Fill in the area on the next page to charge credit card. (Visa or MasterCard **only**). We do not accept cash, personal checks, or other credit cards. All outside of U.S. and Canada **MUST** use credit card.

Ship To: (Please Print)

Name: _____

Address: _____

City: _____

State/Province: _____ Postal Code: _____

Country: _____

Telephone: _____

Email Address: _____

We **MUST** have this information:

Model Number (8 to 9 characters): _____

Manufacture Date (yyyy/mm/dd): _____

Replacement Parts List

NOTE: If requested color is not available, similar color will be substituted. Prices are subject to change.

Part	Cost	Quantity	Total Cost
Pad Set	\$16.99	X _____	= \$ _____
Instructions	\$0.00	X _____	= \$ _____

Merchandise Total: \$ _____

Shipping and handling: \$ _____

Up to \$25.00.....	\$5.95	\$100.01 to \$150.00	\$10.95
\$25.01 to \$50.00	\$6.95	\$150.01 to \$200.00	\$11.95
\$50.01 to \$75.00	\$8.95	\$200.01 and up	\$13.95
\$75.01 to \$100.00	\$9.95		

Outside Continental USA \$10.00

Sales Tax: \$ _____

Residents of Quebec, add 5% GST and 9.5% QST.
Residents of New Brunswick, Newfoundland and Labrador, add 13% HST.
Residents of Nova Scotia add 15% HST.
Residents of Saskatchewan add 5% GST and 5% PST.
Residents of Manitoba add 5% GST and 7% PST.
All other Provinces and Territories, add 5% GST.

Grand Total: \$ _____

No shipping and handling on instructions for quantities under 6. Add \$.50 for each instruction over 6, then add applicable shipping and handling

Fill Out For Credit Card

☐ Visa ☐ Mastercard

Card Exp. Date: _____

Cardholder's Name: _____

Card Number: _____

Signature: _____