


Purchase Date:// (	Order/Customer Reference Number
--------------------	---------------------------------

Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products will be sent at our discretion within the 1-year warranty period. Proof of purchase, with the date of purchase as well as photos of the merchandise defect, must be provided. Photos are used to determine the cause of defects and for future quality control. Register your warranty at https://tiny.cc/SunnydazeWarranty If you have any questions, comments or concerns, feel free to contact us by phone at 833-982-1977, by email:

customerservice@sunnydazedecor.com, or via our contact us page at https://tiny.cc/SunnydazeContact

## OUTDOOR FLOWER B

Read all assembly and care instructions carefully before using this product. Save this manual for future reference. Assemble components on a soft, clean surface to avoid damaging the finish.

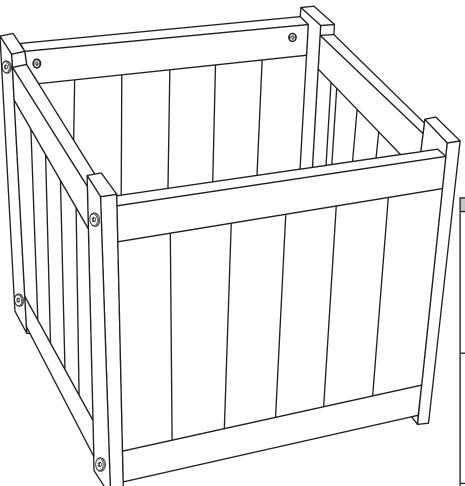

Inspect packaging to ensure all parts are accounted for before disposing of packing materials.

No.	Parts		QTY.
Α		End Panel	2
В	Go o	Inner Panel	2
С		JCBC M6x50mm	8
D	#)) <b>(11)</b>	Barrel Nut	8
Е		Hex Key	1
F		Barrel Nut Driver	1

NOTE: Over time, the bolts may become loose. Save the included tools for tightening loosened hardware.


### WARNING 1

CHOKING HAZARD - This item contains small parts that can be swallowed. Keep children and pets away during assembly.

# **HELPFUL HINT**

Sunnydaze Decor advises reading this manual fully, and assembling the item soon after purchase. Check that all parts are accounted for and familiarize yourself with the assembly before beginning.

Save this manual for future reference.

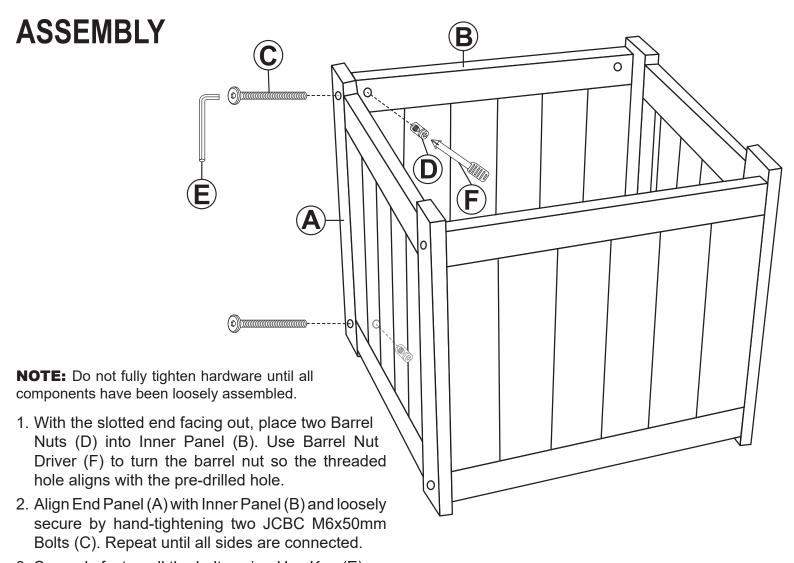

3. Securely fasten all the bolts using Hex Key (E).

### **CARE & MAINTENANCE**

**INSPECT:** Periodically check assembly points and tighten fittings as necessary.

**CLEANING:** Following the woodgrain, wipe with a soft cloth to remove dust, dirt, and debris. Do not use chemicals or abrasive materials as they will damage the wood.

**MAINTENANCE:** If left untreated, the wood will weather. To maintain the appearance, apply a suitable penetrating wood oil (not included) at least once per year or when the wood looks particularly dry.

Before applying a suitable wood oil, clean the unit and bring it into a dry, warm, indoor location. Allow the unit to dry thoroughly; drying may take several days. Only apply oil to wooden surfaces. Apply oil as directed by the wood oil manufacturer.

**STORAGE:** Maintain the appearance and prevent damage by storing this item indoors when not in use.

Wood expands when wet and contracts when it dries. Therefore, repeated and excessive exposure to moisture, rain, and snow can damage the product. The resulting damage includes, but is not limited to, assembly points becoming loose, wood cracking, mold and mildew growth, and hardware rust.

Any modification to the product or failure to follow recommended care will void the product warranty.

#### **MARNING**:

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.