

ASSEMBLY INSTRUCTION

ITEM: (E2150) SS741-PHZL3-080 Crosby Zero Gravity PWR

Sofa w/PWR Headrest


Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

PART LIST


Read all instruction and study the drawing carefully before starting the assembly process .

NO .	DESCRIPTION	SKETCH	QTY
А	Seat	RE	1PC
В	Left Back Cushion		1PC
С	Right Back Cushion		1PC
D	Middle Back Cushion		1PC
Е	Power cord		1PC


Seat Open Lumbar Close Headrest Open &Home Button USB Headrest Open Type C Lumbar Open

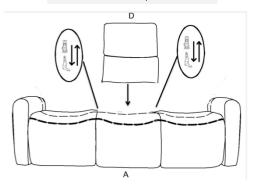


STEP 1 - Place Bracket into Sleeve and presstop of back down firmly to lock your KD back in place

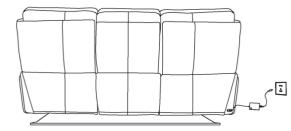


STEP 3 - Connect the connector from motor to the power cord and transformer

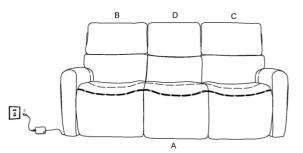

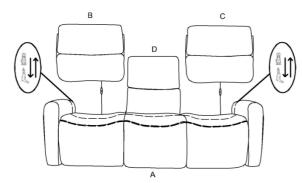

STEP 2 - Connect the wire on back cushion and seat cushion

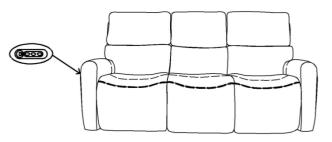

STEP 4 -Use the hand controller to enjoy your Hooker Furnishing

Do not allow children to play on this mechanism furniture or operate the mechanism. Leg rest folds down on closing so that child could possibly be injured. Always leave in an upright and closed position and keep hands feet clear of mechanism. Only the occupant should operate it.

CAUTION