INSTRUCTION MANUAL



Kids Outdoor 5-Piece Dining Set

TABLE OF CONTENTS

ASSEMBLY INSTRUCTIONS

| Kids Outdoor 24" Dining Table | . 3 |
|-------------------------------|-----|
| | |
| Kids Outdoor Dining Chair | . 7 |

INSTRUCTION MANUAL




Kids Outdoor 24" Dining Table

Page 3 of 12

! NOTICE


Please keep this instruction for your future reference.

- Be careful when assembling, avoid damaging the top surface.
- Clean the table with lukewarm water, mild detergent & soft cloth.
- Firmly secure all bolts before use, do not use any part of this item as a step ladder.
- Reconfirm that all bolts, screws, and nuts are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- Do not overtighten screws. (Insert all screws before tightening screws.)
- Please do not exceed the weight limitations of this item.

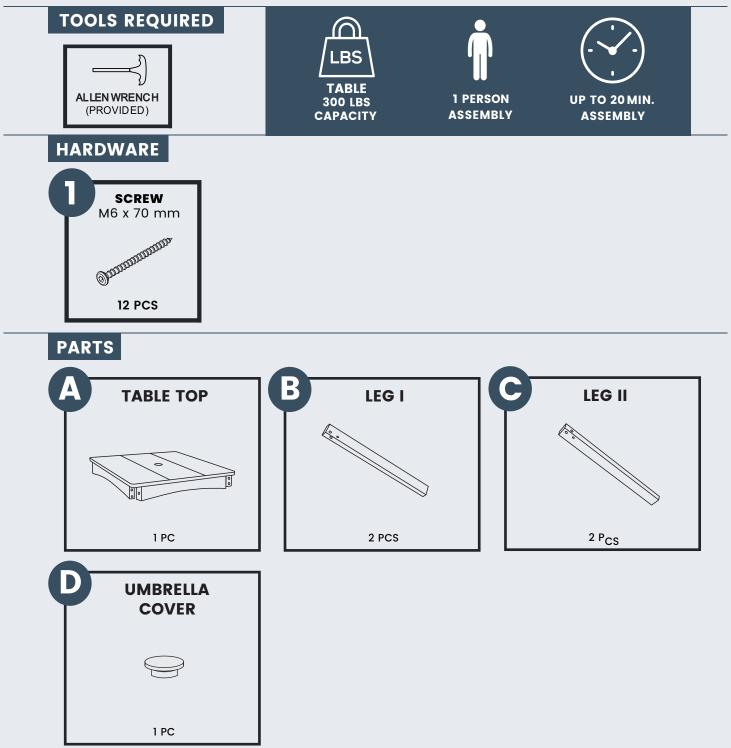

PRODUCT ASSEMBLY - OVERALL VIEW

Look at following overall view of this table and learn the exact position of each part to be assembled.

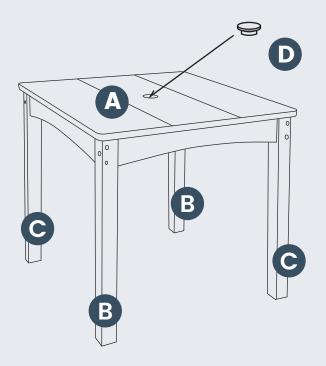


PRODUCT ASSEMBLY

Place **Part A Table Top** upside down on soft surface like carpet to avoid damage.

Attach **Part B Leg I** and **Part C Leg II** to the aprons of **Part A Table Top** as below with 6 pcs of **Hardware #1 Screw**.


Pay attention to match the holes in the aprons.

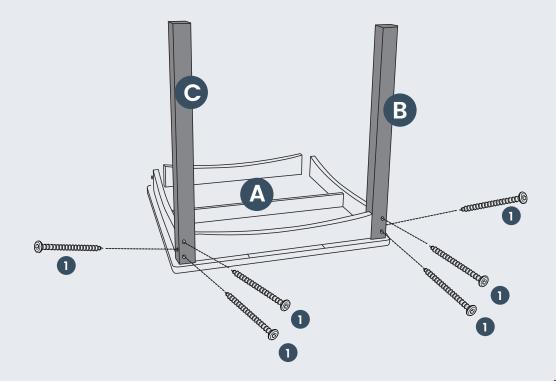

PRODUCT ASSEMBLY



Do the same to attach the **Part B Leg I** and **Part C Leg II** to the aprons of **Part A Table Top** with 6 pcs of **Hardware #1 Screw**.

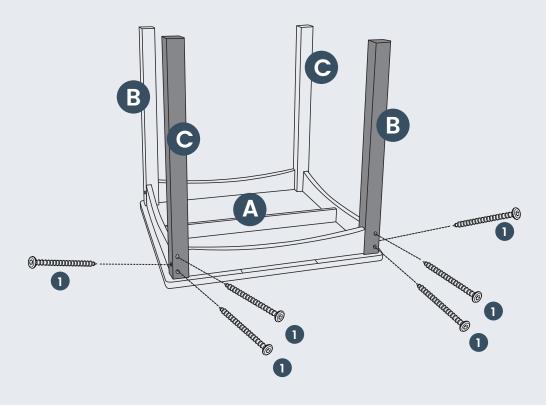



Check and tighten all the bolts again to ensure the table is steady enough.

Remove the **Umbrella Cover** to assemble the umbrella pole.

Enjoy this table now.



INSTRUCTION MANUAL




Kids Outdoor Dining Chair

! NOTICE


Please keep this instruction for your future reference.

- Be careful when assembling, avoid damaging the top surface.
- Clean the table with lukewarm water, mild detergent & soft cloth.
- Firmly secure all bolts before use, do not use any part of this item as a step ladder.
- Reconfirm that all bolts, screws, and nuts are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- Do not overtighten screws. (Insert all screws before tightening screws.)
- Please do not exceed the weight limitations of this item.

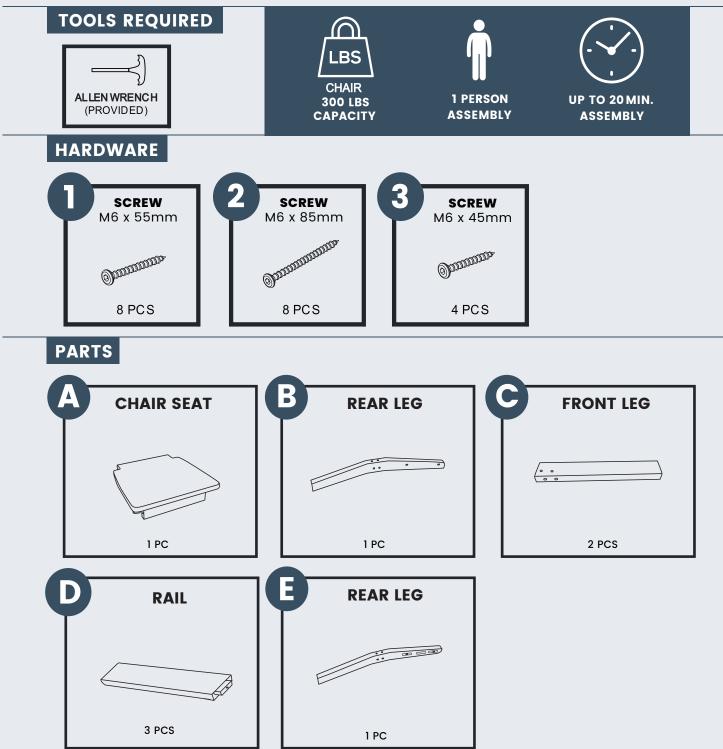

PRODUCT ASSEMBLY - OVERALL VIEW


Look at following overall view of this chair and learn the exact position of each part to be assembled.

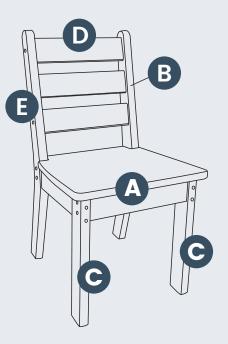

PRODUCT ASSEMBLY



Attach 3 pcs of **Part D Rail** to **Part B** and **Part E Legs** with 4 pcs of **Hardware #3 Screw** as below.

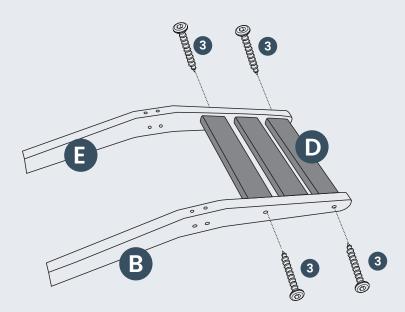


PRODUCT ASSEMBLY



Place Part A Chair Seat upside down on soft surface like carpet to avoid damage.


Attach 2 pcs of **Part C Front Leg** to the aprons of **Part A Chair Seat** with 4 pcs of **Hardware #1 Screw** and 4 pcs of **Hardware #2 Screw** as below.

Pay attention to match the holes in the aprons.

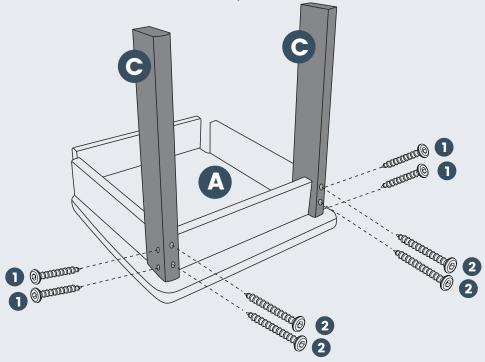



Attach the combined part (**Part B & Part E Rear Leg + Part D Rail**) to **Part A Chair Seat** with 4 pcs of **Hardware #1 Screw** and 4 pcs of **Hardware #2 Screw** as below.

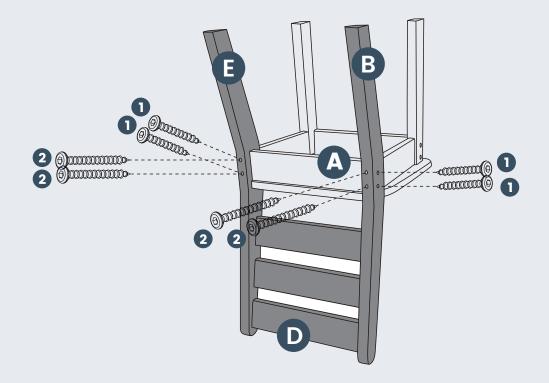


PRODUCT ASSEMBLY



Check and tighten all the bolts again to ensure the chair is steady enough.

Enjoy this chair now.

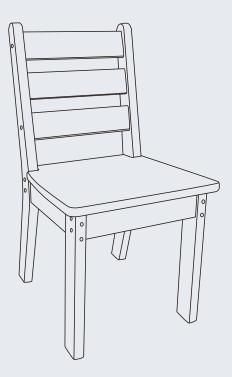

CLEANING TIPS

REGULAR CLEAN: Use a mixture of warm water and mild soap. Gently scrub the surface with a soft bristle brush to remove any dirt or stains.

QUICK CLEAN: You can simply wipe down the furniture with a damp cloth.

Regular cleaning not only preserves the aesthetic appeal of your furniture, but also helps extend its lifespan.