

PS3085 Power Supply

INSTALLATION INSTRUCTIONS

PS3085 Features

- 12VDC 3.0A regulated power supply
- Stand-by battery
- AC Trouble output
- Low Battery output
- Battery Test output
- Automatic shutdown to prevent deep battery discharge
- Self-resetting solid state over current protection devices eliminate the need for replacement fuses
- Selectable battery charging rates: 500mA or 2.0A

PS3085 Specifications

- Transformer required: 16.5VAC 40 VA or 50VA, 80VA or 120VA
- Output:

12VDC 1.5A maximum (power supply and battery charge current) with 40VA or 50VA transformer

12VDC 3.0A maximum (power supply and battery charge current) with 80VA or 120VA transformer

- AC Trouble, Low Battery and Battery Test Outputs: 50mA maximum, switched to ground through 100Ω resistor
- Battery Charge Current: 500mA or 2.0A
- Dimensions: 145mm L \times 83mm W \times 56mm H over heat sinks 5.7" L \times 3.3" W \times 2.2" H over heat sinks

Mounting the Power Supply

We suggest that the PS3085 and the stand-by battery be mounted in a cabinet; the DSC DLC-1 cabinet features mounting holes designed for the PS3085. From the back of the cabinet, press circuit board stand-offs into the appropriate holes and mount the cabinet. With the cabinet in place, secure the PS3085 to the stand-offs.

Operation

The **ACT Terminal** activates when there is an AC failure; the **LBT Terminal** activates when there is a low battery condition. Upon activation, these terminals switch to ground at 50mA maximum. These outputs may be used to activate an indicating device – such as an LED – or a relay used to activate devices requiring more current.

The panel monitors for low battery and loss of AC trouble conditions. When either trouble condition is detected, the keypad will indicate the trouble and the appropriate reporting codes, if programmed, will be sent.

The **TEST Terminal** activates during the automatic battery test. A battery test is performed every 5 seconds. During the test, the AC power is lowered and the TEST terminal is activated for 0.5 seconds. The TEST terminal may be used to activate an indicating device, such as an LED. An RM-1/RM1C relay may also be connected to the TEST terminal to switch a load into the power supply during the battery test. The test load should be of a resistance sufficient to test the battery under the expected maximum load.


The PS3085 features a battery test. The test occurs every 5 seconds for a duration of 0.5s. The test will be extended to approximately 25s whenever the panel detects a low battery condition.

Battery Charge Current


Select the battery charge current using jumper "J1".

| Jumper Setting | Charge Current | Transformer Required | Battery Size |
|-------------------|-------------------|-------------------------|-----------------|
| LC | 500mA max | 16.5V 40VA or 50VA | 4 to 7Ah |
| HC | 2.0A max | 16.5V 80VA or 120VA | 7Ah and larger |

Note: Panels with a 10s battery test are not supported.

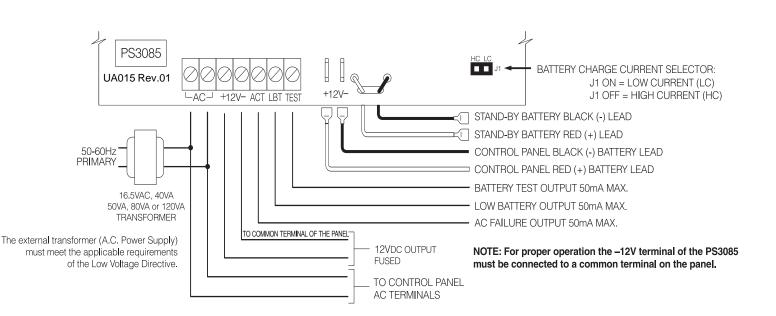

PS3085 Connection Diagram

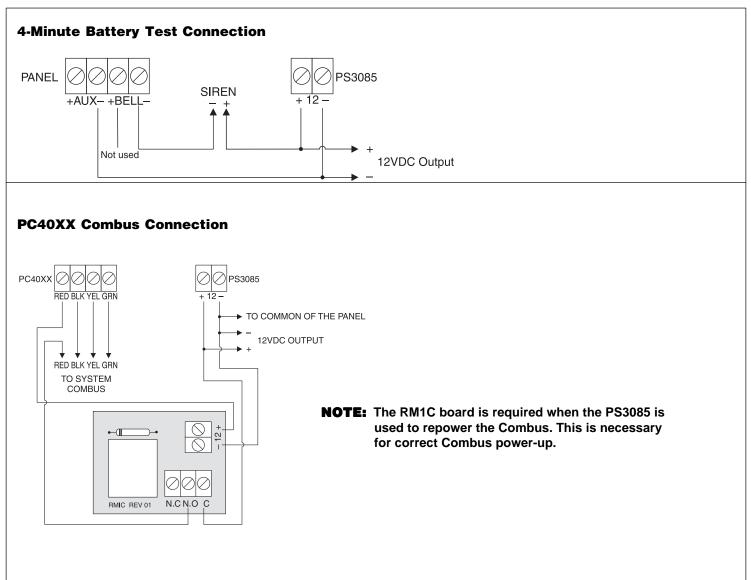

LIMITED WARRANTY

Digital Security Controls Ltd. warrants that for a period of twelve (12) months from the date of purchase by the original buyer, the product shall be free of defects in materials and workmanship under normal use and that fulfilment of any breach of such warranty, Digital Security Controls Ltd. shall, at its option, repair or replace the defective equipment upon return of the equipment to its factory. This warranty applies only to defects in parts and workmanship and not to damage incurred in shipping or handling, or damage due to causes beyond the control of Digital Security Controls Ltd. such as lightning, excessive voltage, mechanical shock, water damage, or damage arising out of abuse, alteration or improper application of the equipment.

The foregoing warranty shall apply only to the original buyer, and is and shall be in lieu of any and all other warranties, whether expressed or implied and of all other obligations or liabilities on the part of Digital Security Controls Ltd. This warranty contains the entire warranty. Digital Security Controls Ltd. neither assumes, nor authorizes any other person purporting to act on its behalf to modify or change this warranty or liability concerning this product.

In no event shall Digital Security Controls Ltd. be liable for any direct, indirect or consequential damages, loss of anticipated profits, loss of time or any other losses incurred by the buyer in connection with the purchase, installation or operation or failure of this product.

WARNING: Digital Security Controls Ltd. recommends that the entire system be tested on a regular basis. However, despite frequent testing, and due to, but not limited to, criminal tampering or electrical disruption, it is possible for this product to fail to perform as expected.



CE

© 1999 Digital Security Controls Ltd. 1645 Flint Road, Downsview, Ontario, Canada M3J 2J6 Tel. (416) 665-8460 • Fax (416) 665-7498 • Tech. line (800) 387-3630 Printed in Canada 29002582 R002