
Model: WSR6/827/BK/2



IMPORTANT SAFETY INSTRUCTIONS AND INSTALLATION GUIDE. READ BEFORE INSTALLATION. SAVE THESE INSTRUCTIONS.

Portable Wall Sconce

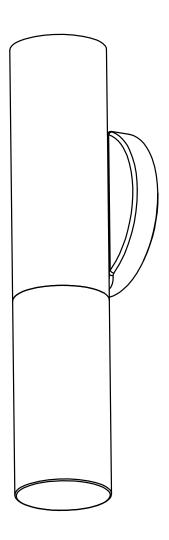

Questions, problems, missing parts? Before returning to the store, call Feit Electric customer service
8 a.m. - 5 p.m., PST, Monday - Friday
1-866-326-BULB (2852)
WWW.FEIT.COM



Table of Contents

Safety Information													2
FCC Statement													
Warranty													
Pre-Assembly													
nstallation with Screws .													
nstallation with Adhesive													
Operating Instructions													
oporating monactions in	•	•	 •	•	 •	•	•	•	•	•	•	•	_

Important Safety Information

Read and understand all Safety and Operating instructions in this manual before using this product. Follow all safe guards stated in this manual, in addition to normal safety precautions in working with electrical devices.

Do not place near any heat source.

- To reduce the risk of electrical shock, do not put in water or other liquid. Do not place or store product where it can fall or be pulled into a tub or sink.
- Do not crush or incinerate.
- Do not insert foreign objects into this product.
- To reduce the risk of fire, keep away from combustible materials while in operation.
- To reduce the risk of injury, close supervision is necessary when this product is used near children.
- Do not attempt to repair, disassemble or modify under any circumstances.
- Check for damage prior to each use of the product.
- LED's are not replaceable.

This product uses permanent tape that may cause damage to the mounted surface. Feit Electric is not responsible for any damage to the mounted surface.



WARNING: RISK OF SHOCK. House electric current can cause painful shock or serious injury unless handled properly.



WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity: 47 CFR § 2.1077 Compliance Information Responsible Party:

Feit Electric Company 4901 Gregg Road, Pico Rivera, CA 90660, USA 562-463-2852

Unique Identifier: WSR6/827/BK/2

Limited Warranty

This product is warrantied to be free from defects in workmanship and materials for up to 1 year from date of purchase. If the product fails within the warranty period, replacement or refund is your sole remedy. Except to the extent prohibited by applicable law, any implied warranties are limited in duration to the duration of this warranty. Liability for incidental or consequential damages is hereby expressly excluded. Some states and provinces do not allow the exclusion of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.

2

Pre-Assembly

Product Specifications


USB	5V
CRI	>80
Lumens	200 lm
ССТ	2700K
Life	25,000 hrs
Working Time	4 hours of continuous light
Charging Time	4 hrs
Operating Temperature	During Charge: 32°F to 104°F During Discharge: 14°F to 122°F

The performance specifications (lumens, watts, life and CCT) should only be considered an approximation of expected performances.

Parts Included




  NOTE: Hardware not shown to actual size.









Part	Description	Quantity
AA	Portable Wall Sconces	2
BB	USB-C Charging Cable	2
CC	Mounting Screws	4
DD	Magnetic Mount Plate	2
EE	Double Sided Adhesive	2
FF	Wall Anchors	4
GG	Mounting Template	1


Installation with Screws

Positioning the Portable Wall Sconce Find the desired place for the Portable Wall Sconce and clean the area thoroughly.




3 Installing the Magnetic Mounting Plate

Line up the Magnetic Mounting Plate (DD) onto the Mounting Screws (CC) with the mounting holes located in the back. Slide the plate down onto the Mounting Screws (CC) to secure it in place.

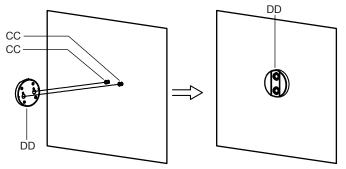


2 Installing the Mounting Anchors & Screws

Locate the Mounting Template (GG) at the install location and mark the position to be screwed in. Drill holes at the marked location and insert the Wall Anchors (FF) and Mounting Screws (CC).

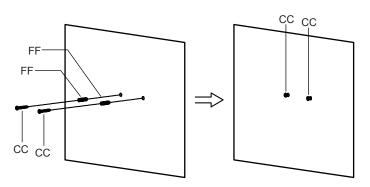

4 Installing the Portable Wall Sconce

Align the magnets on the Portable Wall Sconce (AA) with the magnetic indentation found on the Magnetic Mounting Plate (DD). Adjust and attach the fixture until it sits properly in the Mounting Plate (DD).

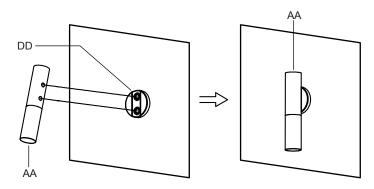

Installation with Adhesive

Positioning the Portable Wall Sconce

Find the desired place for the Portable Wall Sconce and clean the area thoroughly.




NOTE: Double sided adhesive works best when used on a non textured flat surface.




2 Attaching the Adhesive to the Magnetic Mounting Plate

 Peel off the protective film from one side of the Double Sided Adhesive (EE) and attach to the Magnetic Mounting Plate (DD).




3 Installing the Magnetic Mounting Plate

Peel off the other side of the Double Sided Adhesive (EE) and position the Magnetic Mounting Plate (DD) to the desired area. Press the Mounting Plate (DD) onto the surface and hold for 30 seconds to assure the Mounting Plate (DD) is held securely.

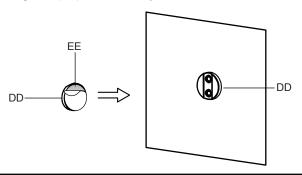

4 Installing the Portable Wall Sconce Align the magnets on the Portable Wall Sconce (AA) with the magnetic

indentation found on the Magnetic Mounting Plate (DD). Adjust and attach the fixture until it sits properly in the Mounting Plate (DD).

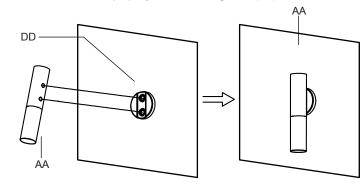

Operating Instructions

Charging the Portable Wall Sconce

Connect the USB-C Charging Cable (BB) to the charging port on the Portable Wall Sconce (AA). The Portable Wall Sconce (AA) takes approximately 4 hours to fully charge.

2 Turning On/Off

ON - The light will turn on OFF - The light will turn off

