


## LOOM ROLLERBALL PEN

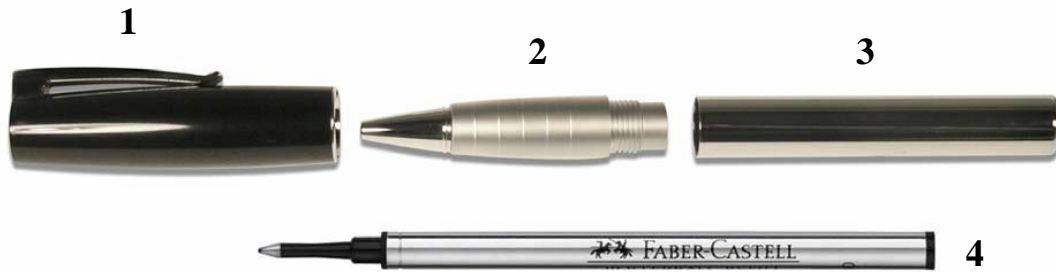

- LOOM Rollerball Pens come equipped with a black rollerball refill.
- The cap will post on the back end of the pen while writing.

1. Remove the cap (1) from the barrel (3) by pulling it off gently.
2. Remove the front piece (2) by turning the barrel (3) counterclockwise.
3. Remove the used refill (4) from the barrel (3).
4. Insert a new Faber-Castell Rollerball Refill (4) into the barrel (3).
5. Return the front piece (2) to the barrel (3) by turning the barrel clockwise and begin writing.
6. When not in use, return the cap (1) to the barrel (3) by pushing it on to the barrel (3) gently until you hear it click closed.

REFILLS    Rollerball: #148783 Black  
                  #148784 Blue