Caspian ADA Hand-held Shower/Tub Combination With Grab/Slide Bar SM-7090-ADA-P

DESCRIPTION

Speakman Caspian ADA Hand-held Shower Combination unites the best products included in our Caspian Series, while maintaining ADA requirements. The combination begins with our anti-scald balanced pressure valve with integral stops, featuring a brass body and adjustable temperature limit stop. The wall plate and handle are designed with definitive Caspian Collection styling. Piston-type pressure balancing/ceramic regulating cartridge assembly with built-in check valves. Meets ASME A112.18.1 / CSA B125.1 & ASSE 1016 standards. The featured product in the Caspian hand-held shower combination is the ANYSTREAM® VS-3014 hand shower with a 3¾" outer spray adjustment ring. Five self-cleaning plunger nozzles resist scale build-up and provide 50 spray streams for a full body coverage pattern. The center core nozzle delivers 12 massaging jets and a combination spray is included. Water-conserving pressure compensating AUTOFLO® device reduces flow to 2.5 GPM / 9.46 LPM maximum, to meet existing ANSI A112.18.1 Standard. To control the water supply between the brass S-2500 shower arm and your VS-3014 is the VS-156 ADA compliant volume control. The adjustability of your VS-153 grab/slide bar will allow you to choose the perfect height to rest your hand shower, while still meeting ADA standards. Finishing out the combination is the Caspian S-1562 tub spout, which features an integrated diverter, matched to the style of the other components.

SPECIFICATIONS

SM-7000-P Anti-Scald Balanced Pressure Valve:

Connections: ½" female copper sweat inlets & shower outlet; ½" NPT female

tub outlet

Flow Rate: For use with showerheads rated at 2.0 GPM (7.6 LPM) or higher.

VS-3014 Hand-Held Shower:

Supply: 1/2" NPT female

Flow Rate: 2.5 GPM / 9.46 LPM MAX

S-2500 Shower Arm:

Supply: ½" NPT male inlet Outlet: ½" NPT male outlet

VS-156 Volume Control:

Supply: ½" NPSM male inlet
Outlet: ½" NPSM female outlet


S-1562 Tub Spout with Diverter:

Supply: 1/2" copper pipe slip fit

INSTRUCTIONS

See individual products for installation of the components and warranty information.

ROUGH-IN

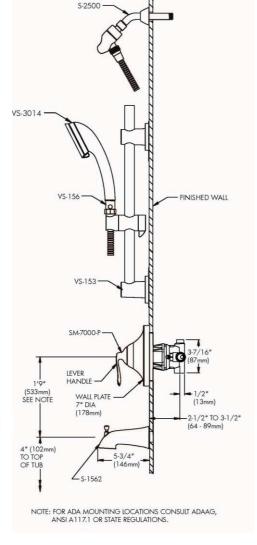

SPEAKMAN®

400 Anchor Mill Rd. New Castle, DE 19720 Phone: 800-537-2107 Fax: 800-977-2747 03/12 Visit us on the web at www.speakmancompany.com IOM-SM-7090-ADA

Caspian Collection Combination Series SM-7000-P

DESCRIPTION

Speakman Caspian Collection Combination Series unites the best products included in our Caspian Series. The combination begins with our anti-scald balanced pressure valve with integral stops, featuring a brass body and adjustable temperature limit stop. The wall plate and handle are designed with definitive Caspian Collection styling. Piston type pressure balancing/ceramic regulating cartridge assembly with built-in check valves. Meets ASME A112.18.1 / CSA B125.1 & ASSE 1016 standards


SPECIFICATIONS

SM-7000-P Anti-Scald Balanced Pressure Valve:

Connections: ½" female copper sweat inlets & shower outlet; ½" NPT female tub outlet Flow Rate: For use with showerheads rated at 2.0 GPM (7.6 LPM) or higher.

INSTRUCTIONS

See individual products for installation of the components and warranty information.

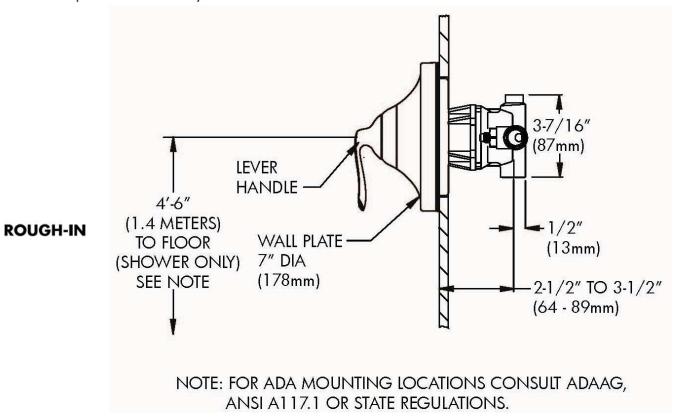

SPEAKMAN®

VS-3014 Installation, Operation & Maintenance Instructions

ANYSTREAM® HAND-HELD SHOWER

DESCRIPTION

Polished chrome plated ANYSTREAM® S-3014 hand shower. Includes a five foot long hose and swivel ball bracket for shower arm mounting. Spray adjusting, 3-3/4" outer ring. 5 plunger nozzles resist scale build-up and provide 45 spray streams for a full body coverage pattern. Center core nozzle delivers a massage spray. Combination spray included. Water conserving pressure compensating AUTOFLO® device reduces flow to 2.5 GPM/9.46LPM maximum, to meet existing ASME A112.18.1 Standard. ½" NPT inlet.

SPECIFICATIONS

SUPPLY INLET: 1/2" NPT

FLOW RATE: 2.5 GPM/9.46LPM MAXIMUM

FLOW CONTROL: VARIABLE SHIPPING WEIGHT: 1.43 LBS.

OPTIONS

- BN Brushed Nickel
- VS-3014-E2 Low Flow Showerhead (2.0 GPM/ 7.6 LPM)
- **VS-3014-BN-E2 –** Low Flow Brushed Nickel Showerhead (2.0 GPM/ 7.6 LPM)

INSTALLATION

Screw the swivel arm bracket onto the outlet shower arm. Install rubber washers in the ends of the hose. Turning in a clockwise direction, thread the hose swivel onto the threaded end of the swivel arm bracket and the other hose end onto the hand held shower. **IMPORTANT:** One end of the hose is marked with ribs and a paper tab indicating this end <u>MUST</u> connect to the bracket. If not installed correctly there will be restricted flow. Hand tighten firmly all connections. Turn the water supply on and check for leaks.

OPERATION


To adjust the spray pattern of the shower head, simply rotate the outer ring to the desired spray (Full-Body, Dual action or Massage). The outer ring can rotate 360°.


MAINTENANCE

The gleaming finish of your SPEAKMAN® hand shower can be cleaned by using mild soap and warm water. Dry immediately with a soft, clean cloth for best results. The flow control device limits water flow to 2.5 gallons per minute. The small orifices may become clogged with scale and other minerals found in potable water. To clean the flow regulator, simply remove the shower arm mount from the bent arm, pull out the rubber washer from the ball, dislodge the flow regulator and clean as necessary.

Product improvements may cause specification and dimensional changes without notice.

ROUGH-IN MEASUREMENTS

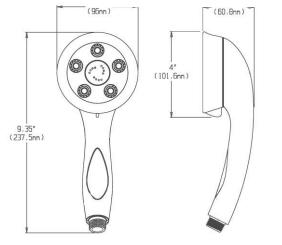

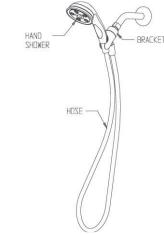

Note: Accessories shown.

SPEAKMAN®

400 Anchor Mill Rd. New Castle, DE 19720 Phone: 800-537-2107 03/12 Visit us on the web at www.speakmancompany.com

Fax: 800-977-2747 IOM-VS-3014-R1

S-2500 Installation, Maintenance & Operation Instructions

SHOWER ARM AND FLANGE

DESCRIPTION

Speakman polished chrome plated brass 7" shower arm with brass wall flange.

•PB: Polish Brass

SPECIFICATIONS

OPTIONS

½" NPT MALE INLET ½" NPT MALE OUTLET SHIPPING WEIGHT: 0.7 LBS.

| •PN: Polished Nickel | •ORB: Oil Rubbed Bronze |
|----------------------|-------------------------|

•SN: Satin Nickel

INSTALLATION


Slip wall flange onto shower arm. Apply teflon tape or pipe dope to male inlet threads and thread arm into supply piping behind the wall. Wrench tighten. Slip wall flange flush to wall. Check connection for leaks.

MAINTENANCE

The gleaming finish of your SPEAKMAN S-2500 shower arm can be cleaned by using mild soap and warm water. Dry immediately with a soft, clean cloth for best results.

ROUGH-IN MEASUREMENTS

Product improvements may cause specification and dimensional changes without notice.

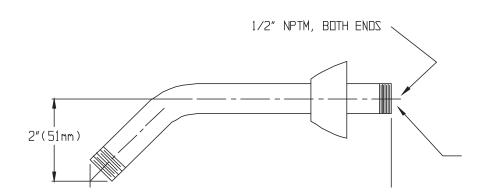

Fax: 800-977-2747

IOM-S-2500-R1

SPEAKMAN®

Instructions for Models:

VS-156 VS-156-BN



Need Help?

For additional assistance or service call:

SPEAKMAN Company 400 Anchor Mill Road New Castle, DE 19720

PHONE: 800-537-2107

EMAIL: customerservice@speakmancompany.com

WEB: www.speakmancompany.com

92-3431-R1

What You Need To Know:

Tools:

Helpful:

Teflon Tape



Important Notes:


Be sure to read instructions thoroughly before beginning installation. Do not overtighten any connections or damage may occur.

Safety Tips:


Cover your drain to prevent loss of parts.


Maintenance:

Keep the Volume Control looking new by cleaning it periodically with a soft cloth. Avoid abrasive cleaners, steel wool, and harsh chemicals as these will dull the finish and void your warranty.

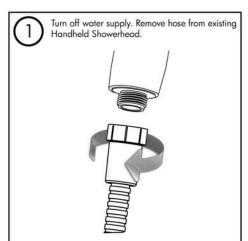



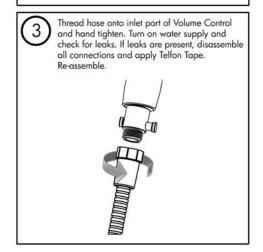

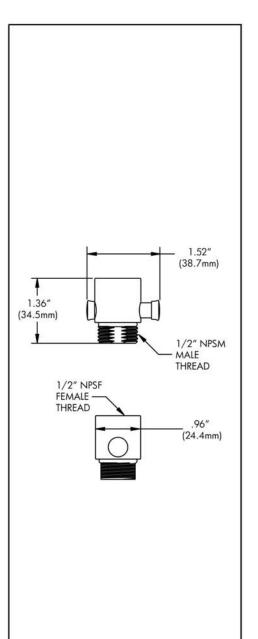

Specifications:

Supply Inlet: 1/2" NPSM MALE Outlet: 1/2" NPSF FEMALE

Instructions for Models:

S-1562 S-1562-BN S-1562-PN



Need Help?

For additional assistance or service call:

SPEAKMAN Company 400 Anchor Mill Road New Castle, DE 19720

PHONE: 800-537-2107

EMAIL: customerservice@speakmancompany.com

WEB: www.speakmancompany.com

92-3320-R1

What You Need To Know:

Tools:

Required:

*Allen Wrench (Included)



Helpful:

* Tubing Cutter

*Hacksaw



*Protective Eye Wear



Important Notes:

Be sure to read instructions thoroughly before beginning installation. Do not overtighten any connections or damage may occur.


Safety Tips:


Cover your drain to prevent loss of parts.


Be sure to wear eye protection while cutting pipe.


Maintenance:

Your new Tub Spout is designed for years of trouble-free performance. Keep it looking new by cleaning it periodically with a soft cloth. Avoid abrasive cleaners, steel wool, and harsh chemicals as these will dull the finish and void your warranty.

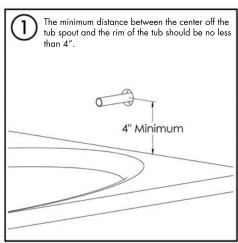

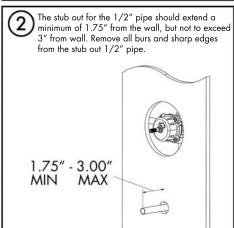

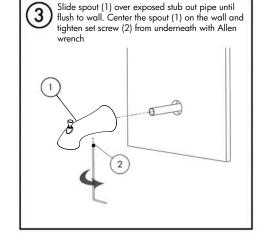

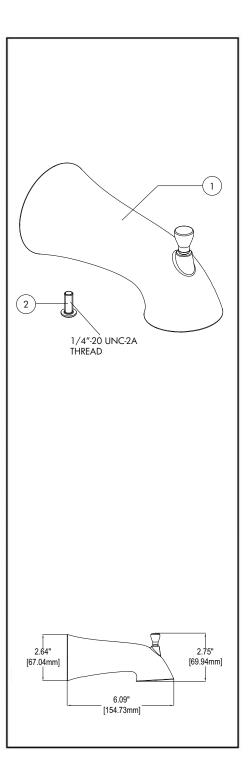

VS-153-ADA

Installation

- 1. Hold the Grab/Slide bar against the wall in the chosen location. Using a pencil, mark the drill hole positions (4 in total) for the lower and upper mounting brackets. If using as a Grab bar, be sure to fasten securely to a wall stud. (Note: upper mounting bracket height is adjustable)
- 2. To mount the brackets, use a No. 10 (0.1935 inches/5.5 mm) masonry drill bit to make a hole approximately 1 3/8 inches (35 mm) deep. Push the plastic anchors (4 in total) into the drilled holes, unless your mounting to wall studs, where anchors can be omitted. (Note: plastic anchors provided may not be suitable for all types of wall construction, seek professional help if in doubt)
- 3. Fix upper mounting bracket and then the lower mounting bracket to the wall using the four (4) screws provided.
- 4. Push the bracket covers over the mounting brackets while paying close attention to cover orientation for proper placement.

Clean Grab/Slide bar regularly using a non-abrasive liquid bathroom cleaner.

