

PORTABLE BEARING PACKER

Item Number W54175

OWNER'S MANUAL



▲WARNING: READ, UNDERSTAND AND FOLLOW ALL INSTRUCTIONS AND WARNINGS BEFORE OPERATING THIS TOOL. FAILURE TO DO SO MAY RESULT IN PERSONAL INJURY AND/OR PROPERTY DAMAGE AND WILL VOID WARRANTY.

SAFETY INFORMATION

- Use only according to these instructions and its intended use.
- Always wear ANSI approved safety glasses or goggles when pump is in use.
- Read and understand instruction prior to continuing.
- Before each use, inspect the general condition of the bearing packer.
- Be sure there are no broken, bent, damaged, or missing parts.
- Use only for its designed intended purpose.

OPERATION

NOTE: Only fill the bearing packer about half full.

You can load your Portable Bearing Packer two ways.

1. A bulk fill using a scoop and a 14 oz tub, a 35 lb. bucket, or a 120 lb. keg
2. By using a grease gun on the fitting on the shaft of the plunger.

CLEAR AND REPACK BEARING

NOTE: Visually inspect the used bearing for excessive wear, replace if needed.

Conveniently press out the old expired grease and easily replace it with new grease.

1. Simply place the bearing tapered end down. Add the palm driver, to center the bearing in the packer.
2. Find a flat place to set the packer and bearing, preferably where you can get above it. It's much easier with the aid of body weight to force the palm driver down.
3. Place both palms on the driver and continue to firmly press down.
4. Look through the side of the packer to watch the old grease pressed out, and new grease when it comes out the top of the bearing.

Alternate method, place the bearing packer in a vise when working with NLGI 4, 5 or 6.

1. Add Polyurethane Soft Jaw Caps (Performance Tool # MV1) if available.
2. Open and place the movable jaw against the bottom of the bearing packer between the ribs. If soft jaw caps are not available, use a rug on the stationary jaw of the vise.
3. The palm driver of the bearing packer was designed with a flat top, this prevents the packer from moving when pressures applied.
4. Slowly turn the vise handle watching for the new grease to exit the top of the bearing.
5. While supporting the bearing packer reverse direction and open the vise jaws.

CARE & MAINTENANCE

NOTE: Always replace the dust cover when finished for storage.

1. Always store your Portable Bearing Packer in a cool dry place. Avoid extreme conditions.
2. Cover the bearing packer with unused grease with the dust cap. Prevent grease contamination.
3. When empty, either clean or refill using the methods above.
4. Refilling: Thread the palm driver on to aid in pulling the plunger out. Clearing out two or three of the holes at the base of the plunger to release any vacuum holding the plunger down.
5. Cleaning: use diesel fuel or a water based grease remover to clean. Pay special attention to the center shaft with the grease fitting. Be sure the entire shaft is clear of grease. Grease can solidify making it difficult to refill when needed.

LIFETIME WARRANTY

PERFORMANCE TOOL® extends only the following warranties, and only to original retail purchasers. These warranties give specific legal rights except where prohibited by local law. The law of the State of Washington governs all warranties and all exclusions and limitations of warranties and remedies. There may be other rights which vary from state to state. If this tool ever fails to give complete satisfaction, it may be returned, along with original sales receipt, for a free replacement of like grade and quality, postage prepaid to: PERFORMANCE TOOL, P.O. Box 88259 Tukwila, WA 98138. These warranties exclude blades, bits, punches, dies, bulbs, fuses, grinding wheels, belts and other consumables which must be replaced under normal use and service. These warranties shall not apply to any product or part which is used for a purpose for which it is not designed, or which has been repaired or altered in any way so as to affect adversely its performance or reliability, nor shall these warranties apply to any product or part which has been subject to misuse, neglect, accident or wear and tear incident to normal use & service.

PERFORMANCE TOOL® does not authorize any other person to make any warranty or to assume any liability in connection with its products.

Except for warranties of title and the limited express warranties set forth above, PERFORMANCE TOOL® makes no express or implied warranties of any kind with respect to its products. In particular, PERFORMANCE TOOL® makes no implied warranty of merchantability and no implied warranty of fitness for any particular purpose, except that for goods purchased primarily for personal, family or household use and not for commercial or business use, PERFORMANCE TOOL® makes an implied warranty of merchantability (and, if otherwise applicable, an implied warranty of fitness for a particular purpose), but only for the particular qualities or characteristics, and for the duration, expressly warranted above.

The laws on limitation of implied warranties may differ from state to state, so the above limitations may not apply in all cases.

PERFORMANCE TOOL® shall not be liable for consequential, incidental or special damages resulting from or in any manner related to any product, or to the design, use, or any inability to use the product. The sole and exclusive remedy for a defective product or part shall be the repair or replacement thereof as provided above. The laws on limitation of remedies or on consequential, incidental or special damages may vary from state to state, so the above limitations may not apply in all cases.

These Terms constitute the complete and exclusive statement of the mutual understanding of the parties and supersede and cancel all previous written and oral agreements and communications relating to the subject matter hereof. No failure or delay in exercising, on the part of either party, any privilege, power or right hereunder will operate as a waiver thereof.

P.O. Box 88259 • Tukwila, WA 98138 • 1-800-497-0552 • © Copyright 2021 • www.wilmarcorp.com