






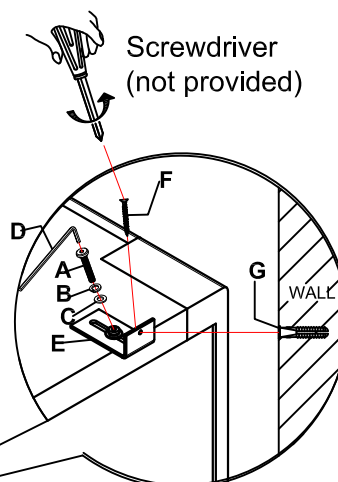


ITEM: 6820-75906-80 Display Cabinet
6820-75906-85 Display Cabinet
6820-75906-99 Display Cabinet


Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.

| HARDWARE PACK | | | | |
|---------------|---|----------------|------------|-------|
| NO. | DRAWING | DESCRIPTION | SIZE | Q'TY |
| A |  | Bolt | 1/4"x19mm | 2 PCS |
| B |  | Lock washer | Ø1/4" | 2 PCS |
| C |  | Flat washer | Ø1/4"x16mm | 2 PCS |
| D |  | Allen Wrench | 4mm | 1 PC |
| E |  | Hanger | 75*30*38mm | 2 PCS |
| F |  | Screw | 8#*11/4 | 2 PCS |
| G |  | Plastic Anchor | | 2 PCS |



STEP 1:
Mount the hanger (E) to top of the cabinet, then attach the cabinet to a wall.

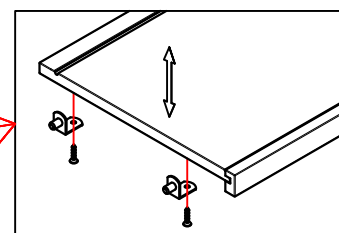

STEP 2:
The adjustable shelves are screwed in place to avoid damage during transit. To adjust the shelf height, remove screws then place shelf pins in the desired level.

Adjust leveler if needed to level cabinet on uneven floor.

