


WOODEN DECORATIVE WHEELBARROW PLANTER DSL-674


Review all assembly and care information before using this product. Save this manual for future reference.
Assemble components on a soft, clean surface to avoid damaging the finish.

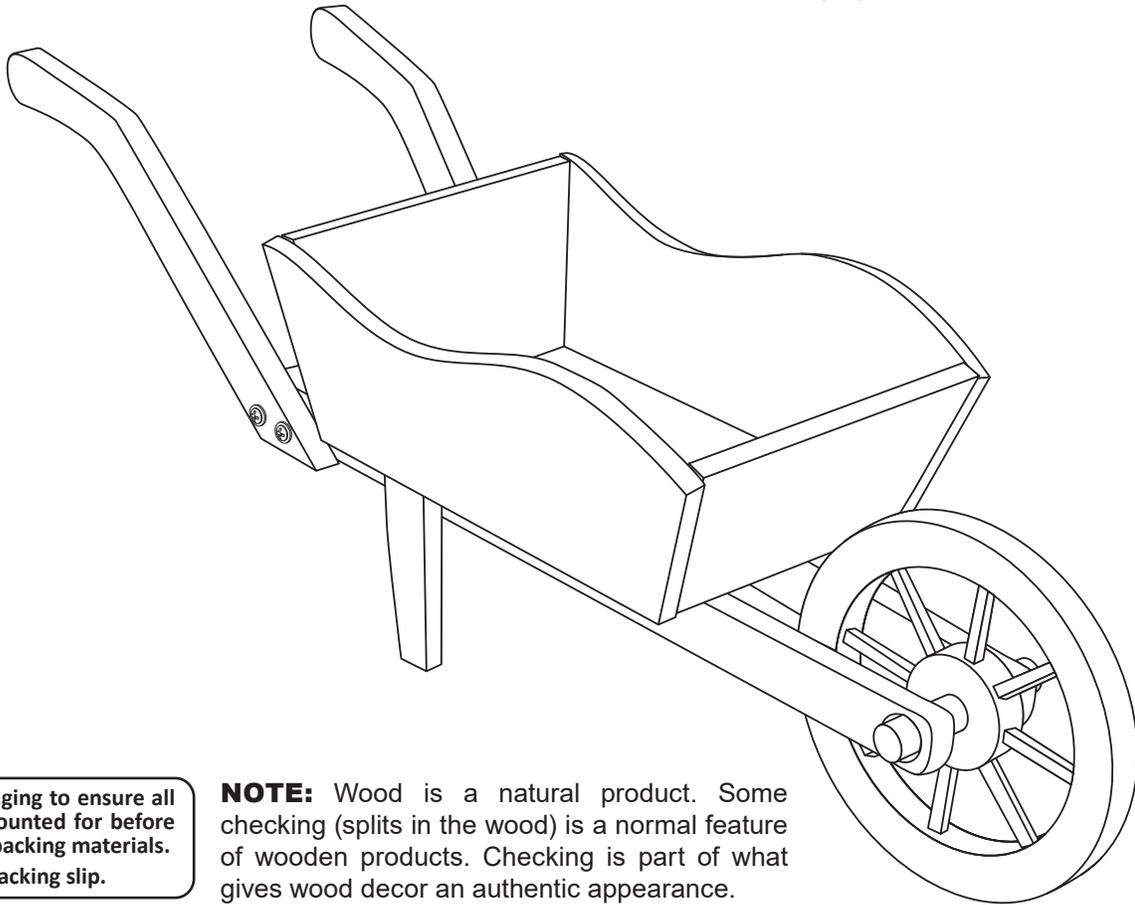


Inspect packaging to ensure all parts are accounted for before disposing of packing materials.
Save the packing slip.

NOTE: Wood is a natural product. Some checking (splits in the wood) is a normal feature of wooden products. Checking is part of what gives wood decor an authentic appearance.

10
pounds
4.5 kg
Weight Capacity

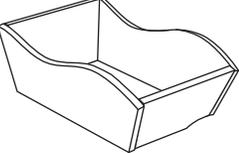No.	PARTS	QTY.
A	 Wheel	1
B	 Planter Box	1
C	 Handle	2
D	 Front Support	2
E	 Back Leg (L/R)	2

No.	HARDWARE	QTY.
F	 M6x55mm Bolt Set	6
G	 M6x45mm Bolt Set	4

 TOOLS REQUIRED (not included)	
	Phillips Screwdriver

⚠ WARNING ⚠
CHOKING HAZARD — This item contains small parts that can be swallowed. Keep children and pets away during assembly.



SCAN THIS CODE WITH YOUR SMARTPHONE TO VIEW OUR ASSEMBLY VIDEO


ASSEMBLY

Review all steps and understand assembly before beginning.

Do not fully tighten hardware until all components have been loosely assembled.

STEP 1 **IMPORTANT:** Before beginning, identify the correct direction and placement of each component; the back leg must be installed facing the outside of the planter box and the front support must extend beyond the front of the planter box.


B: 1
D: 1
E: 1
F: 3

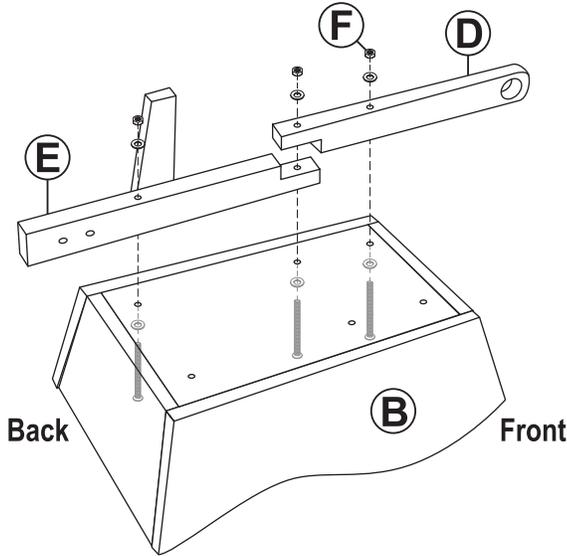

Loosely fasten one Back Leg (E) and one Front Support (D) to the bottom of Planter Box (B) by hand-tightening three M6x55mm Bolt Sets (F).

STEP 2


A: 1

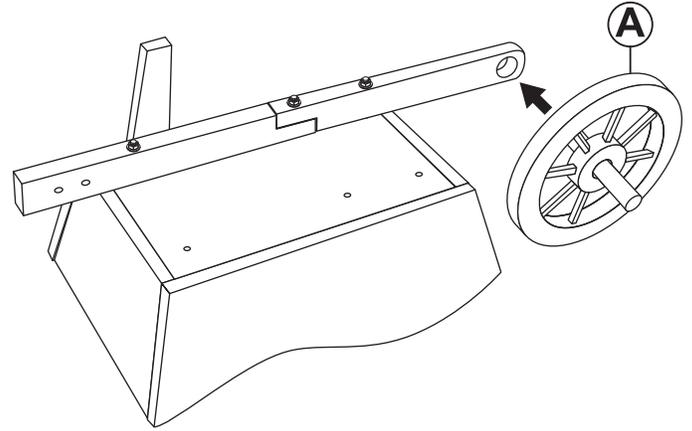

Position Wheel (A) into the hole on the front support.

STEP 3

D: 1
E: 1
F: 3

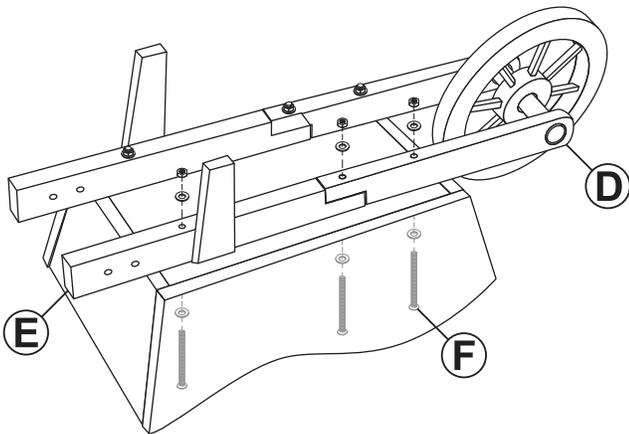


Loosely secure remaining Front Support (D) and Back Leg (E) by hand-tightening three M6x55mm Bolt Sets (F).

Tighten all hardware until snug; do not over-tighten as doing so may damage the wood.

STEP 4

C: 2
G: 4

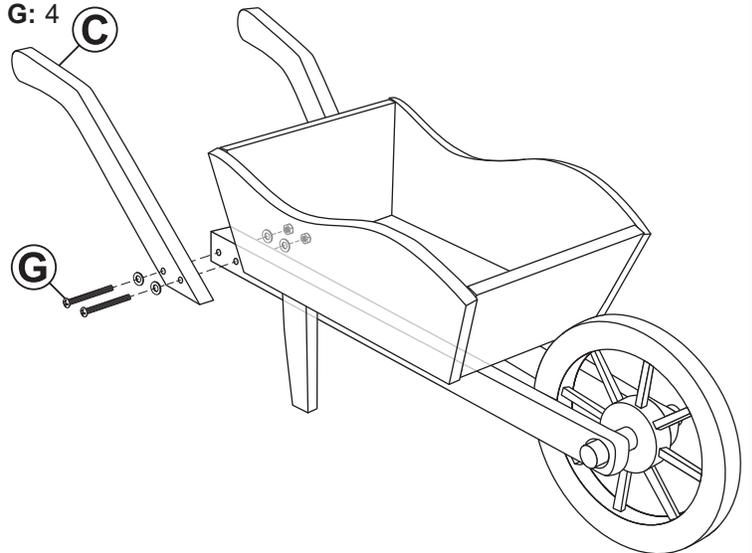

Secure one Handle (C) to the outside of a back leg using two M6x45mm Bolt Sets (G).

Repeat on the opposite side.

Care & Maintenance

SAFE USE: Only use on a flat, level surface. Do not stand or climb on any part of this unit.

INSPECT: Periodically check hardware and tighten as necessary.

MOVING: Do not move the planter while it is full or in use. Do not let the wooden components drag when moving the unit as doing so will weaken assembly points and could cause breakage.

CLEANING: Follow the woodgrain with a soft brush or cloth to remove dust, dirt and debris. Do not use chemicals or abrasive materials as they will damage the wood and/or finish.

WINTER CARE & STORAGE: Maintain the appearance and prevent damage by emptying and storing this item indoors when not in use.

Wood expands when wet and contracts when it dries. Repeated and excessive exposure to moisture, rain or snow can cause damage to the product. Resulting damage includes, but is not limited to, assembly points becoming loose, wood cracking, mold and mildew growth, and hardware rust.

MAINTENANCE: If left untreated, the wood may weather. To maintain the appearance, apply a suitable penetrating Wood, Teak or Linseed Oil (not included) yearly, or when the wood looks particularly dry.

Clean the unit and bring it into a dry, warm, indoor location. Allow the unit to thoroughly dry before applying oil; drying may take several days. Only apply oil to wooden surfaces. Apply oil as directed by the wood oil manufacturer.

WARNING: THE ONE-YEAR WARRANTY DOES NOT COVER DAMAGES OR DEFECTS CAUSED BY THE APPLICATION OF CHEMICAL TREATMENTS, PROTECTIVE COATINGS, OR CLEANING PRODUCTS.

SAFETY STATEMENTS & WARNINGS

- Do not exceed the weight capacity of each tier.
- For decorative purposes only; not intended for use as a cart — empty all tiers before attempting to move the planter.
- Inspect hardware often and tighten loose hardware as necessary.
- Do not step or climb on any part of this unit.
- Keep this unit a safe distance from heat sources such as, but not limited to, fire pits, patio heaters, and grills.
- Do not allow children to use this product.
- Do not use harsh chemicals or abrasive materials to clean the furniture.

Any modification to the product or failure to follow recommended care will void the product warranty.

If you experience issues with assembly or the product was damaged during shipping, please contact our customer service team through one of the methods mentioned at the top of page 1.

Please have the item number and order information ready to expedite response time.

WARNING:

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.