

## 3-TIER CORNUCOPIA OUTDOOR WATER FOUNTAIN LZH-087

Review all assembly and care information before using this product. Save this manual for future reference.

Select a smooth, level surface to place the fountain. Assemble components on a soft, clean surface to avoid scratching or damaging the finish.



Inspect packaging to ensure all parts are accounted for before disposing of packing materials.  
Save the packing slip.




Cascading  
water sounds

No.	PARTS	QTY.
A	Pedestal	1
B	Large Tier	1
C	Electric Submersible Pump	1
D	Pump Cover	1
E	Large Column	1
F	Medium Tier	1
G	Small Column	1
H	Small Tier	1
I	Decorative Topper	1

### IMPORTANT NOTES:

- The water tubing is built into the fountain topper. Take care when handling the water tube; detaching the water tube from the fountain will damage the unit and void the warranty.
- Familiarize yourself with the flow control valve on the pump, maximum (+) and minimum (-). This may need to be adjusted to achieve optimal water flow.
- Rattling noise inside the fountain? Due to the casting process, there may be loose pieces of casting material inside the fountain.


## ASSEMBLY

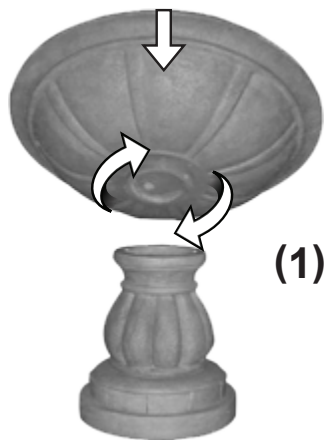

(1)




(2)


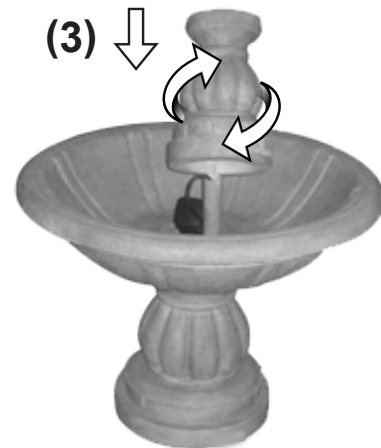


(3)

- Align the tabs on the bottom of Large Tier (B) with the notches on top of Pedestal (A), twist clockwise to lock in place.
- Feed the Electric Submersible Pump (C) power cord through the tube in Large Tier (B). Rest Pump (C) on the bottom of Large Tier (B). Pull the power cord out through the groove on the back-side of Pedestal (A).
- Align the notches in Large Column (E) with the tabs on Large Tier (B) and twist the column clockwise to lock in place.

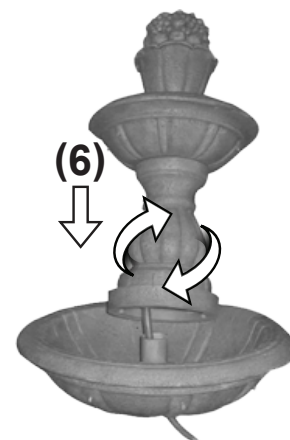

4. Route the water tube that is built into Decorative Topper (I) through Small Tier (H). Align the notches in Decorative Topper (I) with the tabs on Small Tier (H) and twist the topper clockwise to lock in place.
5. Route the water tube from the assembled top section (I and H) through Small Column (G). Align the tabs of Small Tier (H) with the notches in Small Column (G) and twist the column clockwise to lock in place.
6. Route the water tube from the assembled top pieces (I, H and G) through Medium Tier (F). Align the tabs of Small Column (G) with the notches in Medium Tier (F) and twist the medium tier clockwise to lock in place.

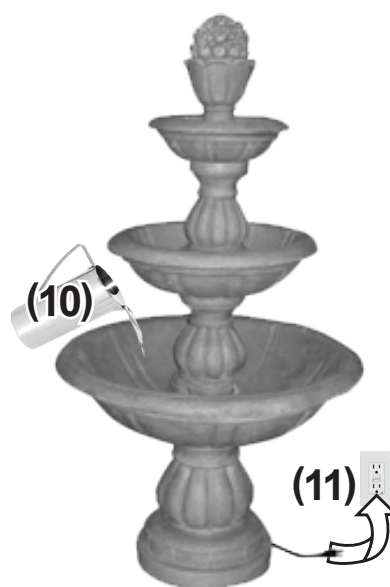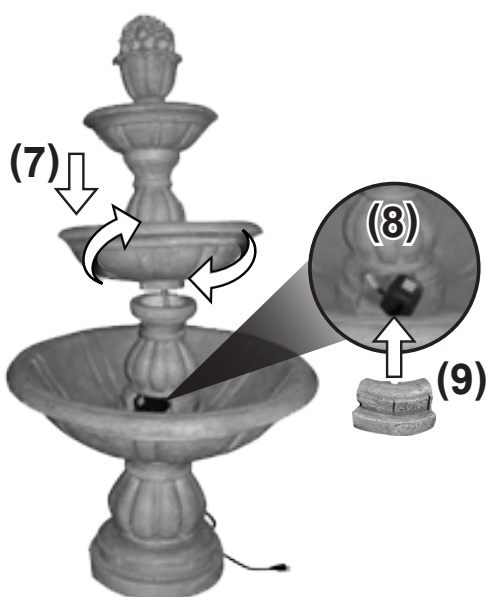

7. Route the water tube from the assembled top pieces (I, H, G and F) into assembled Large Column (E). Align the tabs of Medium Tier (F) with the notches in Large Column (E) and twist clockwise to lock in place.
8. Through the opening of Large Column (E), connect the water tube to the hose adapter of Pump (C); make sure the connection is tight.
9. Place Pump Cover (D) onto the opening of Large Column (E).
10. Fill each tier with enough clean water to ensure the pump will remain submerged during operation, approximately 5 gallons (19L).
11. Plug the power cord into a properly grounded GFCI outlet.

**NOTE:** When first plugged in, there may be air trapped in the pump. It may take several minutes for trapped air to escape, allowing water to flow.

# Care & Maintenance

- Some splashing may occur; adjust the flow rate on the pump if the water rate is too low or too high.
- Some climates and weather conditions increase water evaporation, requiring water to be added more frequently. Frequently check water levels during times of high temperatures, wind, and long-term exposure to direct sunlight to ensure the pump remains underwater. Never allow the pump to run dry as it will burn out the motor.
- Only use water in this fountain. Distilled water will help prevent mineral buildup but is not required. Tap water is okay to use, but avoid heavily chlorinated water as it may damage the fountain finish and the pump.
- Over time, the finish may gradually mellow in color due to sun exposure; this is part of the natural aging process and is not cause for return.
- Periodically change the water to help keep the fountain and pump clean. Remove scale and buildup regularly.
  - DO NOT use harmful additives such as bleach, chlorine, etc.
  - DO NOT use anything that is abrasive to scrub the fountain.
  - DO NOT use a pressure washer to clean the fountain.
- Always unplug the power supply before cleaning and maintaining the fountain and the circulating pump. Take care when handling the pump; only pick it up by the body of the pump, never the power cord.
- During freezing weather, drain the fountain, disconnect the pump and store indoors; allowing ice to form may damage the fountain in such ways as, but not limited to, fountain cracking and permanent pump damage.

**WARNING:** THE ONE-YEAR WARRANTY DOES NOT COVER DAMAGES OR DEFECTS CAUSED BY THE APPLICATION OF CHEMICAL TREATMENTS, PROTECTIVE COATINGS, TOUCH-UP PAINT, OR CLEANING PRODUCTS.

## Troubleshooting


- If water is not flowing within several moments of the fountain being plugged in, ensure that the pump is fully submerged underwater. Add water to the reservoir if necessary. The pump may have air bubbles trapped inside, which can prevent water from circulating properly. Unplug the power supply for a few moments and plug it back in.
- Check the flow control on the body of the pump, it may need to be adjusted to achieve the desired water flow rate.
- Inspect the pump and tubing for obstructions.
- Pump noise can be caused by trapped air, low water level, or the pump being too close to the walls of the fountain. While the pump is fully submerged, try gently tapping the pump with your finger to help release the trapped air. Also, check if adding water or moving the pump helps to reduce noise.
- Check to make sure the power outlet is working; consult a certified electrician if in doubt about electrical connections.



## IMPORTANT SAFETY INFORMATION



- Fountains may splash or leak; always protect surfaces that can be damaged by water. Do not use fountain in areas that can be damaged if water splashes or leaks.
- Prevent water loss or damage to electrical sockets by ensuring the power cord has a drip loop; a diagram of a drip loop is shown on the right.
- Keep fountain out of reach of children and pets.
- Make sure the power cord is away from traffic areas.
- Keep power cord away from all heat sources. Do not use electrical cords in areas with high temperatures.
- Check the water level frequently to ensure the pump remains fully submerged; never allow the pump to run dry as it will burn out the motor.
- Always unplug the power supply before cleaning and maintaining the fountain and the pump.
- Always empty and store the fountain and pump indoors during freezing weather.

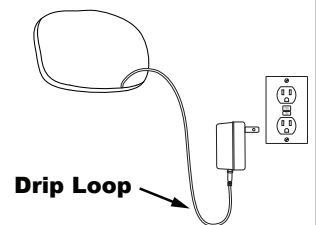

*Drawing is for visual reference only, power cord access and adapter vary by fountain.*

**Any modification to the product or failure to follow recommended care will void the product warranty.**

*If you experience issues with assembly or the product was damaged during transit, please contact our customer service team through one of the methods mentioned at the top of page 1. Please have the item number and order information ready to expedite response time.*

### **WARNING:**

**Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.**