

#### 20 05436 0762

 
## Closet Wall Shelf Unit


#### **IMPORTANT**


Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.



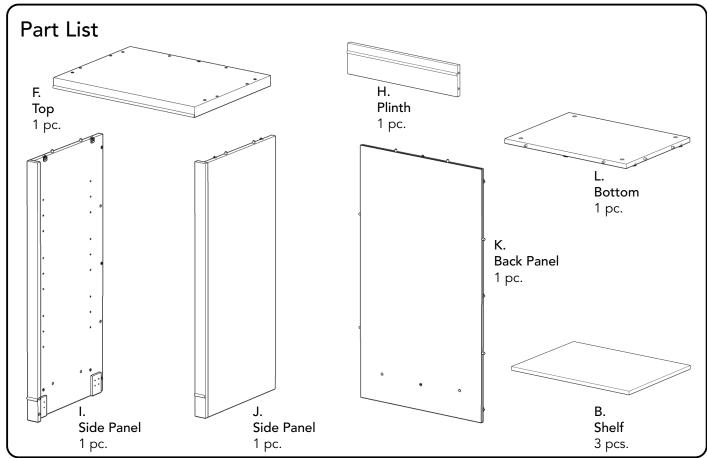

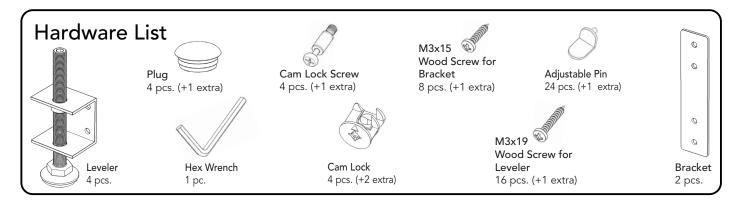

## Carton 20 05436 0761 is also needed for assembly.


Tool(s) required for assembly: Phillips screwdriver, Level, Drill (8 volts or less), 3/8" Drill Bit

Home Styles Customer Service: www.homestyles-furniture.com, servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

### Assembly Instructions 2/7

#### **IMPORTANT**

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the bolts until each part is properly assembled.
- The unit must be level to work properly. Use the included adjustable levelers to level.
- Keep Hex Wrench as the bolts may need to be tightened in the future.

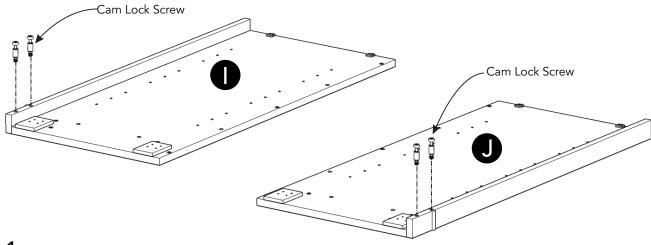

#### STEP 1

Insert Cam Lock Screws into pre-drilled holes in Side Panels (I) and (J), then tighten. (See Figure 1)

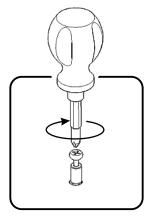


Figure 1

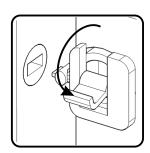


Figure 2


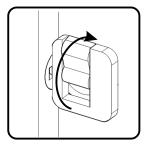


Figure 3

#### STEP 2

Attach Plinth (H) to Bottom (L), then flip Lock. (See Figures 2 and 3)

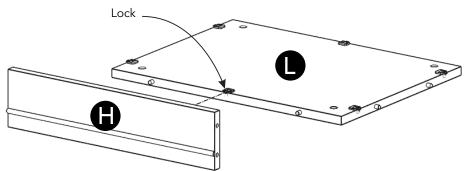

## Assembly Instructions 3/7


#### STEP 3

Attach unit to Side Panel (J) with Cam Locks, then flip Locks. (See Figure 4)


Attach Back Panel (K) to unit, then flip Locks.

Attach Side Panel (I) to unit with Cam Locks, then flip Locks.




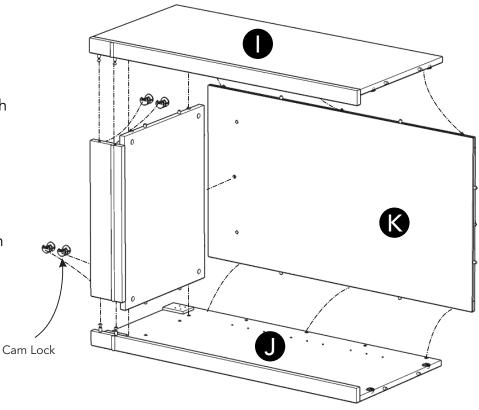

STEP 4

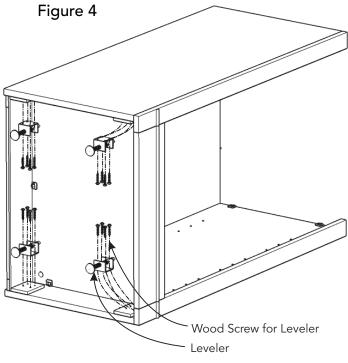

Attach Levelers to bottom of unit with Wood Screws for Levelers into pre-drilled holes. (See Figure 5)

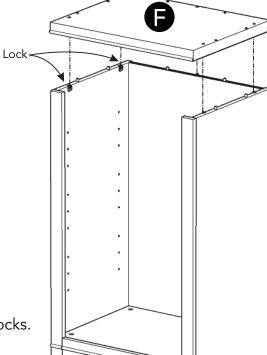

#### STEP 5

Attach Top (F) to unit, then flip Locks.

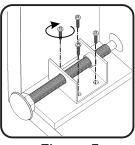



Figure 5


## Assembly Instructions 4/7

### STEP 6

Attach Back Panel (E) to Side Panel (C), then flip Locks.

Attach Side Panel (D) to unit, then flip Locks.

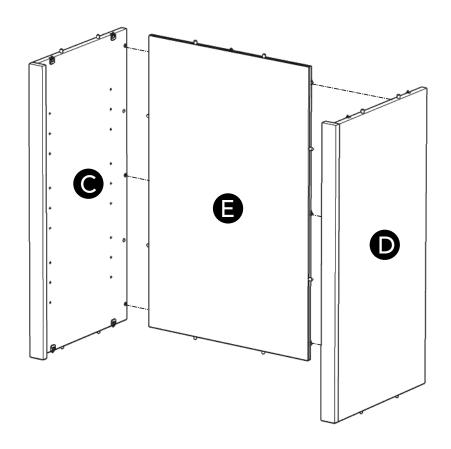

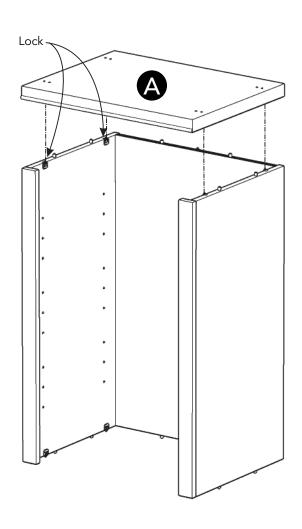

STEP 7

Attach Top (A) to unit, then flip Locks.

#### Assembly Instructions 5/7

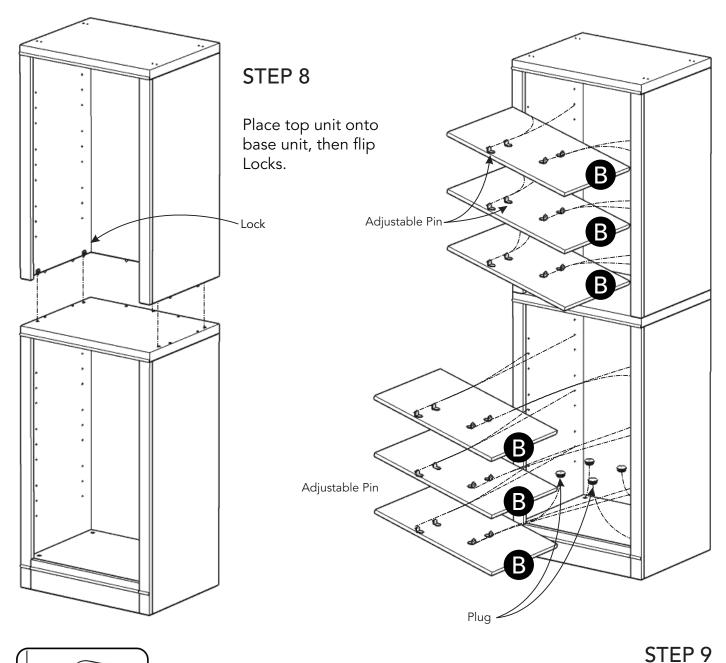


Figure 6

Place unit at desired location.

Note: If assembling multiple Closet Wall Units together, place all units at desired location.

Level unit(s) by adjusting the adjustable levelers on bottom of unit(s). (See Figure 6)

Note: Unit(s) must be level to proceed.

Cover all holes with Plugs. (See Figure 7)

Insert Adjustable Pins into side panels at desired level.

Place Shelves (B) into position.

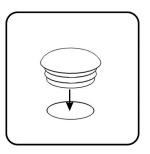


Figure 7

#### Assembly Instructions 6/7

#### **IMPORTANT**

To help reduce the risk of the unit tipping over, the Tip-over Restraint must be installed following these instructions exactly.

#### **STEP 10**

Place unit at desired location.

Drill a 3/8" hole in wall in-line with the pre-drilled hole at top of unit.

Move unit.

Insert Anchor into the wall hole and attach Bracket with Wall Screw.


Attach Bracket at pre-drilled hole at top of unit with Wood Screw.


Move unit back into place.


If assembling multiple Closet Wall Units together, go to and complete Step 11 now, then return to and complete Step 10.

Slide Tip-over Restraint through Bracket on wall and Bracket on unit. (See Figure 8)


Put tie end of Tip-over Restraint into lock end of Tip-over Restraint and pull until tight.

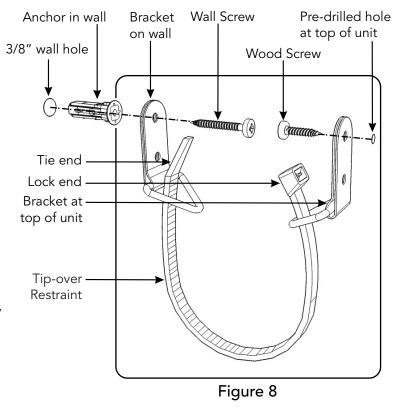

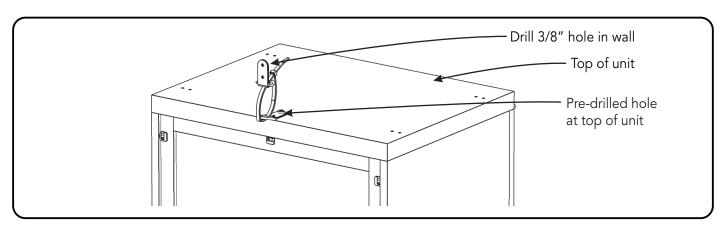

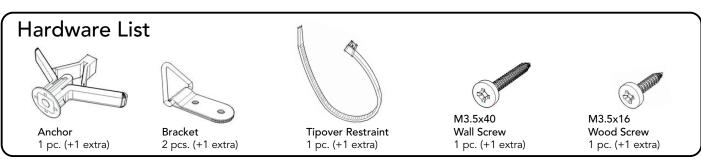

## Assembly Instructions 7/7

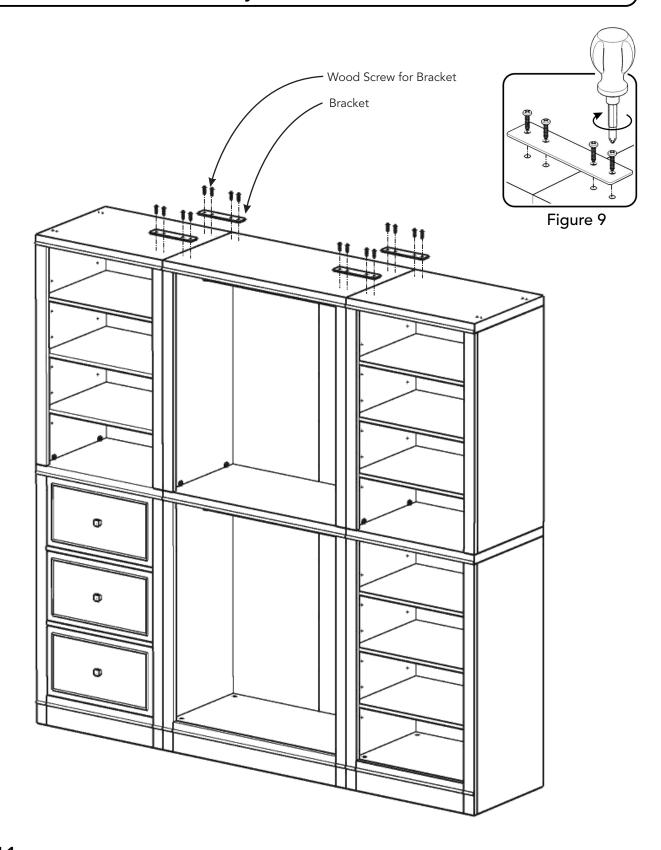

#### **STEP 11**

Note: If assembling multiple Closet Wall Units together, complete Step 11.

Attach tops of units together with Brackets and Wood Screws for Brackets into pre-drilled holes. (See Figure 9)

Return to and complete Step 10.

# CARE INSTRUCTIONS

## **NEVER**

allow liquids to remain on furniture. Absorption causes parts to warp and split and finishes to delaminate.

## **NEVER**

use glass cleaners on finished furniture. Ammonia chemically attacks the finish.



Do not use power tools above 8 volts to assemble.

PREVENT

CRACKING



Do not place in direct sunlight.

PREVENT

**FADING** 



Do not write directly on surface.

PREVENT

MARKING



Do not place hot objects on surface.

PREVENT
FINISH DAMAGE



Do not use rubber based placemats.

PREVENT

DISCOLORING



Do not use commercial waxes and polishes.

PREVENT

YELLOWING

## **CLEAN**

with a soft cloth moistened in lukewarm soap and water. Buff with a dry clean cloth.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

www.homestyles-furniture.com/customer-service/replacement-parts

Home Styles Customer Service: www.homestyles-furniture.com, servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319