


## INSTALLATION INSTRUCTIONS

### SB-3103 Single Lever Faucet

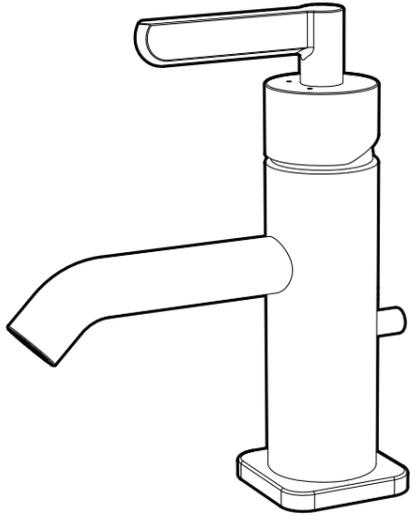

92-SB-3103-01

## TOOLS & SUPPLIES NEEDED



## IMPORTANT

### SAFETY TIPS:

Be sure to read and understand all instructions before beginning installation.

Inspect all connections after installation.

Cover the drain to avoid loss of parts.

Be sure to wear proper eye protection.

Do NOT over tighten any connections or damage may occur.


This faucet has an operating range of 20-80psi

### FINISH MAINTENANCE:

Your new product is designed for years of trouble-free performance. Keep it looking new by cleaning it periodically with a soft cloth. Avoid abrasive cleaners, steel wool, and harsh chemicals as these will dull the finish and void your warranty.


## VERIFY GASKET PLACEMENT

- 1 Verify the Base Flange Gasket is properly in place.

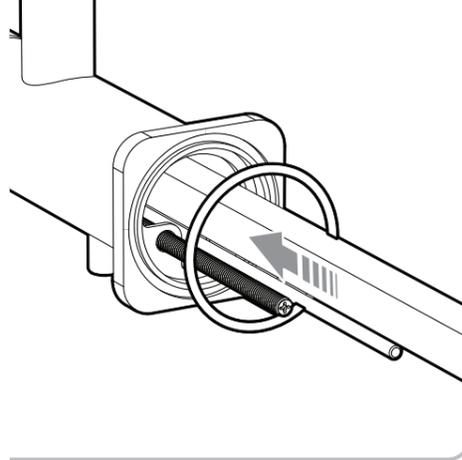


## POSITION FAUCET

- 2 Place Hoses, one at a time, through hole in mounting surface. Lower Faucet into position.

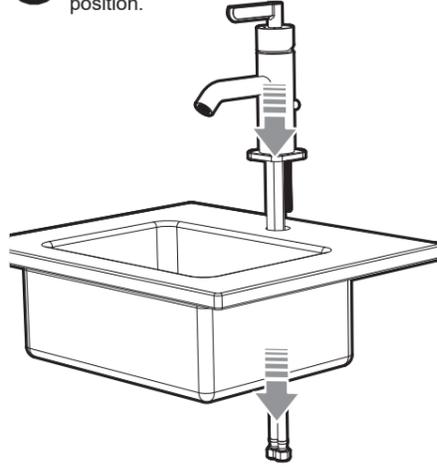


## OPTIONAL DECKPLATE

If installing an optional deckplate, remove existing Base Flange and replace with deckplate.

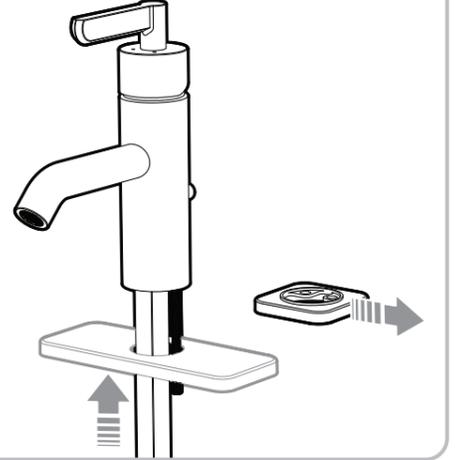

## SECURE INTO POSITION

- 3 From below, install Rubber Washer (A), Metal Washer (B), and secure with Mounting Nuts (C). Align Faucet to desired position and wrench tighten Mounting Nuts (C).

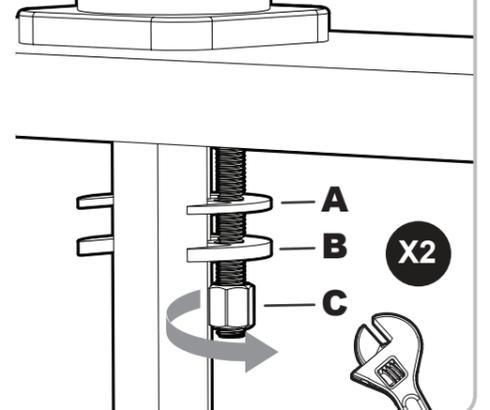

### NEED HELP?

For additional assistance or service please contact:




800-537-2107



www.speakman.com


## MAKE WATER CONNECTIONS

- 4 Make connections to water supplies. The inlet threads of the faucet are 9/16"-24 UNEF and will accept a 3/8" Compression Fitting. HOT and COLD hoses are clearly marked. Wrench Tighten.

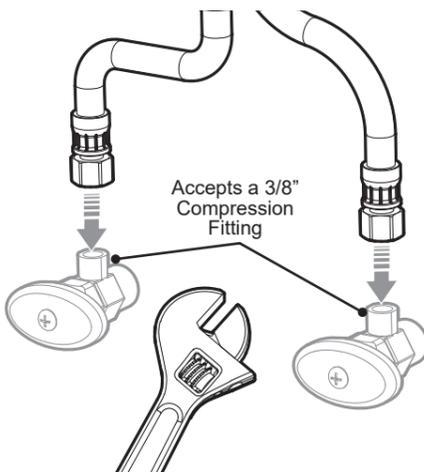


## INSTALL DRAIN ASSEMBLY


- 5 Remove Stopper (A), Flange Nut (B) and Flange Washer (C) from Drain Assembly

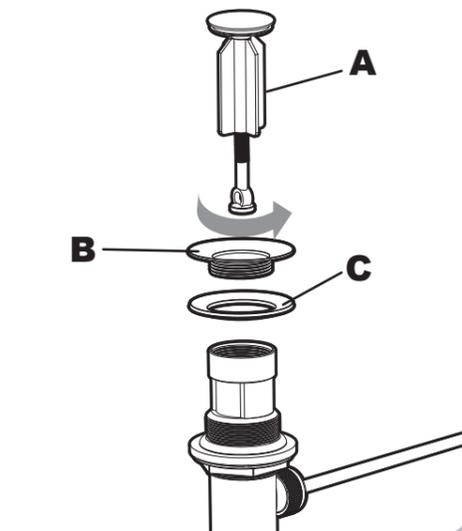

- 6 From below, insert Drain Assembly through drain hole in sink. Attach supplied Flange Washer (A) or plumber's putty to the underside of the Flange (B). Secure Flange (B) to the Drain Assembly. Align the Drain Assembly as shown below.

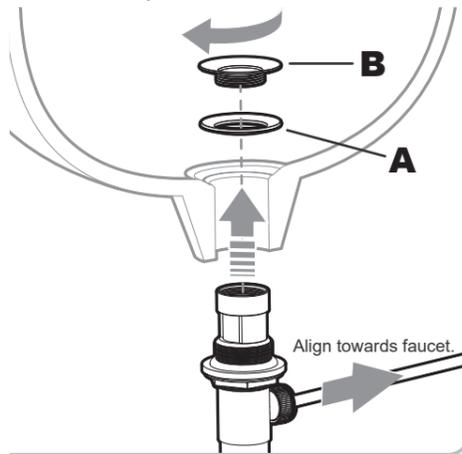


- 7 From beneath, secure Rubber Washer (A), Plastic Washer (B), and Mounting Nut (C). Wrench tighten.

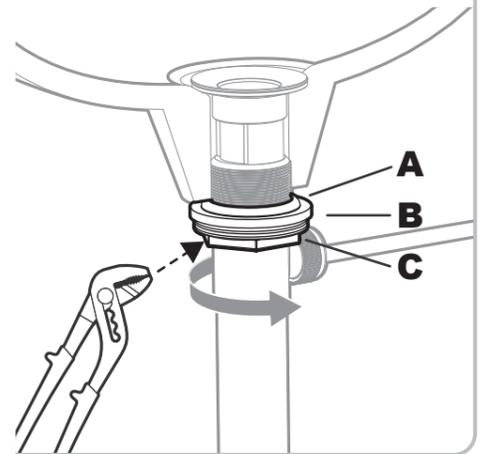


## INSTALL DRAIN ASSEMBLY


- 8 Remove Pivot Nut (A), from Drain Assembly. Install Outer Pivot Washer (B), and Pivot Rod (C). Ensure that Inner Pivot Washer (D) is retained in Drain Assembly. Insert Pivot Rod into Drain Assembly and install Stopper (E) as non-removable. Secure Pivot Rod to Drain Assembly by tightening Pivot Nut (A).

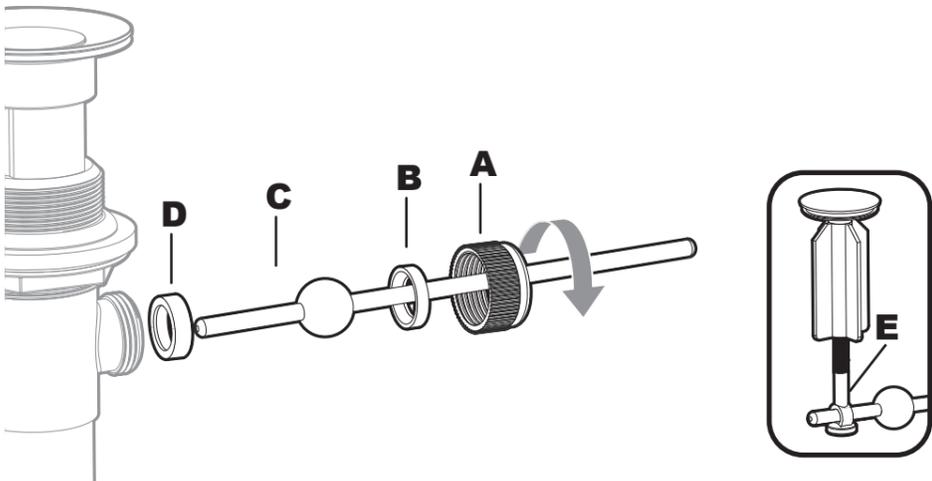

- 9 Place one end of Spring Clip (A), on Pivot Rod (B). Insert Pivot Rod (B) through a hole in the Lift Rod Strap (C). Secure with Spring Clip (A).

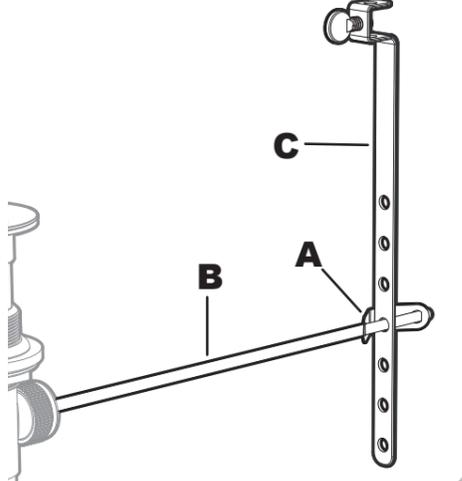


- 10 Place Drain into the open position by pressing downward on the Pivot Rod (A). Insert Lift Rod (B) into Strap (C). Adjust height of Lift Rod (B), and tighten Thumb Screw (D).

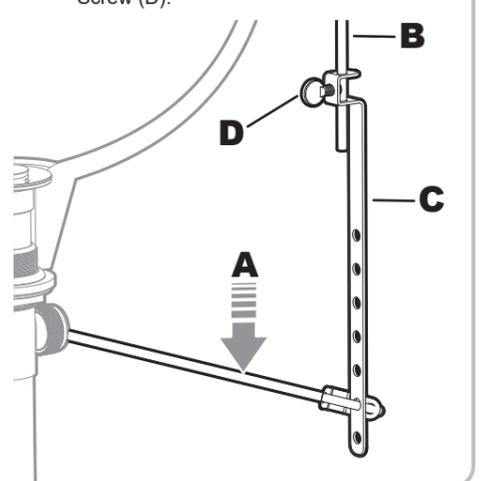


## INSTALL DRAIN ASSEMBLY

- 11** Additional adjustments can be made to ensure a proper seal between the Drain Stopper (A) and Drain Assembly. Remove Pivot Nut (B), from Drain Assembly. Slide out Pivot Rod Assembly (C). Remove Drain Stopper (A). Additional adjustments can be made by either threading in or out the eyelet portion of the Drain Stopper (A).

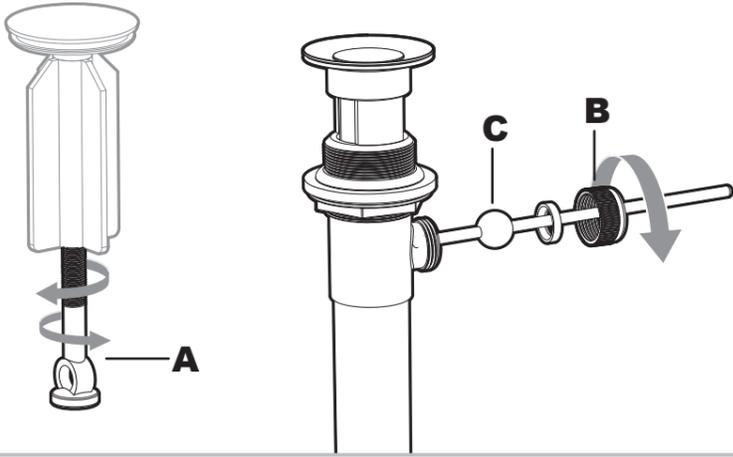


## FLUSH SYSTEM

- 12** Turn ON Water Supplies and check for leaks. Activate faucet and flush both HOT and COLD water for 1 minute.

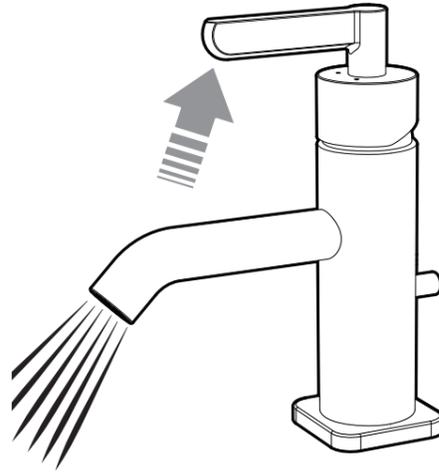


## INSTALL AERATOR


- 13** Turn OFF Faucet. Install Aerator with included Aerator Wrench.

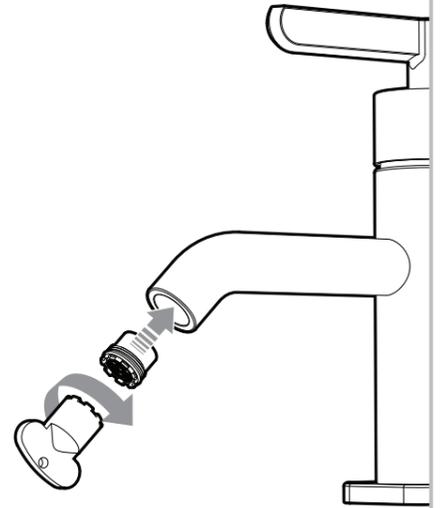


## REPAIR PARTS

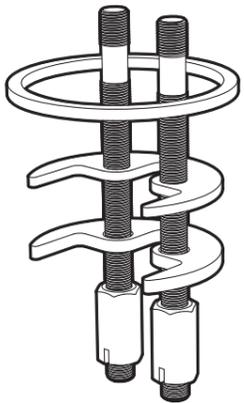


**RPG05-106202**  
MOUNTING HARDWARE

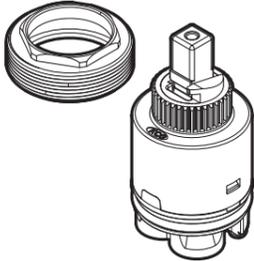

**RPG05-1112**  
CARTRIDGE AND  
RETAINING NUT

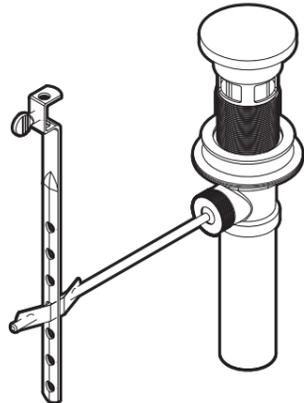

**RPG24-0134-XX**  
DRAIN ASSEMBLY  
(XX = FINISH)

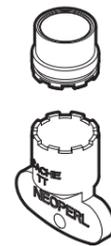

**RPG05-114666**  
AERATOR AND WRENCH

## PRODUCT WARRANTY

For additional information please go to [www.speakman.com](http://www.speakman.com).

## CALIFORNIA PROPOSITION 65



### CALIFORNIA PROPOSITION 65:

**WARNING:** This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

Wash hands after installation, repair, or removal of this product.

## SB-3103 ROUGH IN DIAGRAM

### COMPLIANCE:

ASME A112.18.1/CSA B125.1  
NSF/ANSI 61  
NSF/ANSI 372  
CEC  
WATERSENSE


### FLOW:

Flow Rate: 1.2 gpm (4.5 L/min max)  
Flow Type: Aerated


### CONNECTIONS:

Hot Supply- 9/16"-24 (3/8 compression)  
Cold Supply- 9/16"-24 (3/8 compression)

Contractor to supply necessary connections  
not included with product.

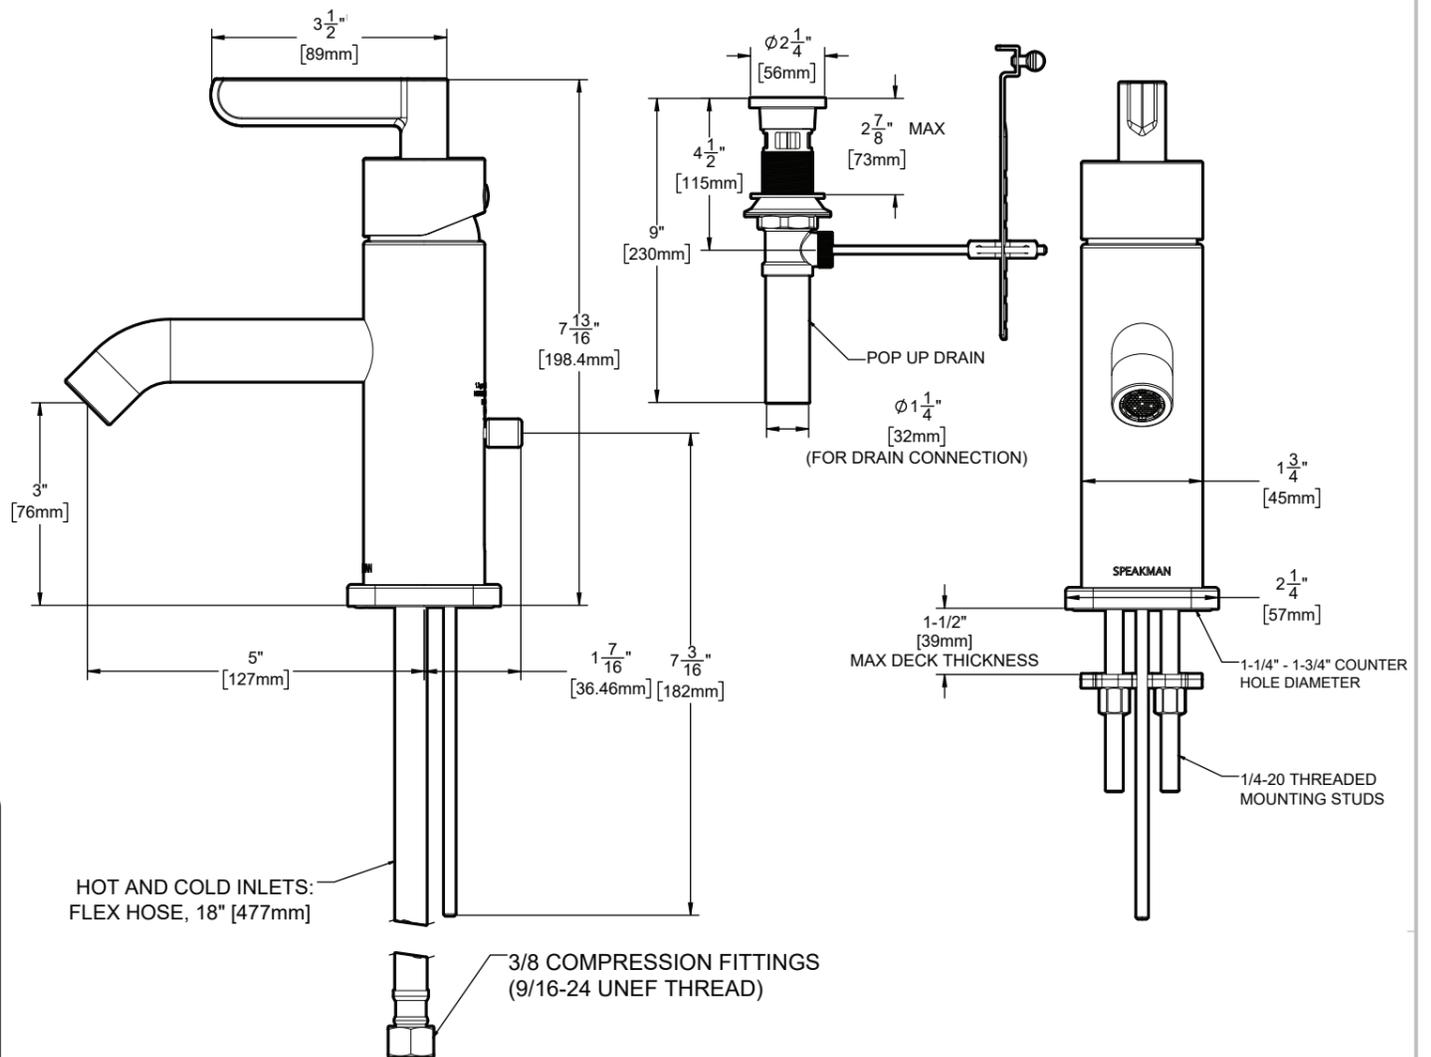

## LAVATORY ROUGH-IN

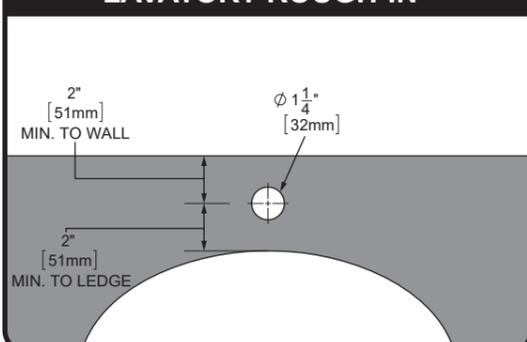

DIMENSIONS SUBJECT TO CHANGE WITHOUT NOTICE. FOR ADA MOUNTING LOCATIONS, CONSULT ADAAG, ANSI A117.1, AND LOCAL/STATE REGULATIONS.