
ASSEMBLY INSTRUCTION

Outdoor Fire Pit Table User Guide


ITEM#: P014-776

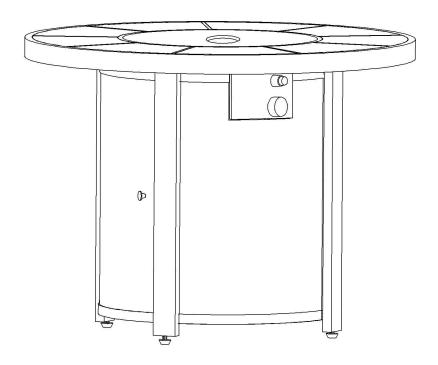

SAVE THESE INSTRUCTIONS

Product has been CSA tested and certified.

THIS PRODUCTWAS MANUFACTURED BY JIAXING HERO IMP & EXP CO, LTD FOR ASHLEY FURNITURE INDUSTRIES, INC.

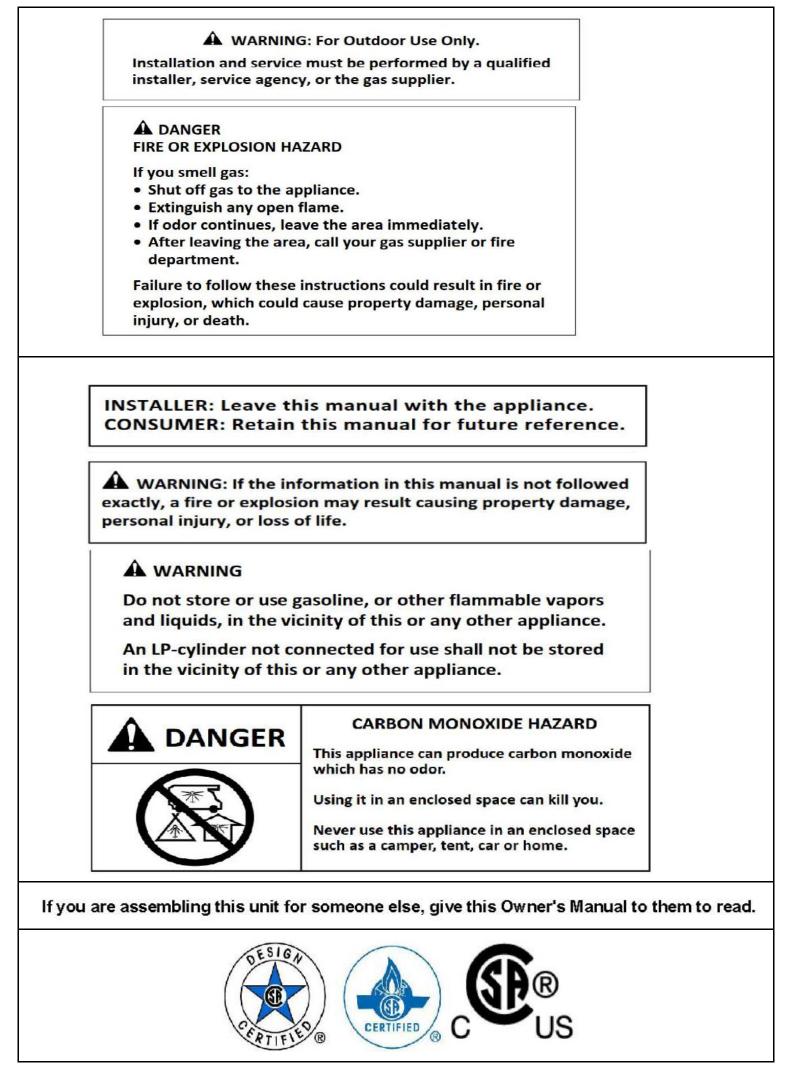



\Lambda DANGER

EXPLOSION-FIRE HAZARD

Keep solid combustibles, such as building materials, paper of cardboard, a safe distance away from the fire pit as recommended by the instructions. Provide adequate clearances around air openings into the combustion chamber.

Never use the fire pit in spaces which do or may contain volatile or airborne combustibles, or products such as gasoline, solvents, paint thinner, dust particles or unknown chemicals.

During operation, this product can be a source of ignition. Keep fire pit area clear and free from combustible materials, gasoline, paint thinner, cleaning solvents and other flammable vapors and liquids. DO not use fire pit in areas with high dust content.

A DANGER

EXPLOSION - FIRE HAZARD

Never store propane near high heat, open flames, pilot lights, direct sunlight, other ignition sources or where temperatures exceed 120 degrees F (49°C). Propane vapors are heavier than air and can accumulate in low places. If you smell gas, leave the area immediately.

Never install or remove propane cylinder while fire pit is lighted, near flame, pilot lights, other ignition sources or while fire pit is hot to touch.

The fire pit is red hot during use and can ignite flammables too close to the burner. Keep flammables at least 2 feet from sides & 2 feet from rear, 6 feet from ceiling. Keep gasoline and other flammable liquids and vapors well away from fire pit.

Store the propane cylinder outdoors in a well-ventilated space out of reach of children. Never store the propane cylinder in an enclosed area (house, garage, etc.). If fire pit is to be stored indoors, disconnect the propane cylinder for outdoor storage and allow the fire pit to fully cool down prior to move indoors.

WARNING

We cannot foresee every use which may be made of our fire pit.

Check with your local fire safety authority if you have questions about fire pit use.

Other standards govern the use of fuel gases and heat producing products for specific uses. Your local authorities can advise you about these.

If no local codes exist, follow National Fuel Gas Code, ANSI Z223. 1. In Canada, installation must conform to local codes. If no local codes exist, follow the current National standards of CANADA CAN/CGA-B 149.2.



CARBON MONOXIDE HAZARD

This fire pit is a combustion appliance. All combustion appliances produce carbon monoxide (CO) during the combustion process. This product is designed to produce extremely minute, non-hazardous amounts of CO if used and maintained in accordance with all warnings and instructions. DO not block air flow into or out of the fire pit. Carbon monoxide (CO) poisoning produces flu-like symptoms, watery eyes, headaches, dizziness, fatigue and possibly death. You can't see it and you can't smell it. It's an invisible killer. If these symptoms are present during operation of this product get fresh air immediately!

For outdoor use only.

Never use inside house, or other unventilated or enclosed areas.

This fire pit consumes air (oxygen). Do not use in unventilated or enclosed areas to avoid endangering your life.

WARNING

USE FACTORY APPROVED REPLACEMENT PARTS AND ACCESSORIES ONLY. USE OF UNAPPROVED PART OR ACCESSORIES CAN VOID THE WARRANTY ON THIS PRODUCT AND RESULT IN AHAZARDOUS\ CONDITION. PLEASE CONTACT US FOR INFORMATION REGARDING REPLACEMNT HOSES, THERMOCOUPLES, ELECTRODES, IGNITION MODULES, LAVA ROCKS, LOGS, FIRE ICE, ETC.

FOR USE WITH 20LB (9KG) PROPANE CYLINDER WITH TYPE 1 CONNECTION OR FOR USE WITH NATURAL GAS AFTER CONVERSION KIT IS INSTALLED (MUST BE PROFESSIONALLY INSTALLED) ALSO THE LP REGULATOR MUST BE SUPPLIED BY THE MANUFACTURER.

1 DANGER

Failure to comply with the precautions and instructions provided with this fire pit can result in death, serious bodily injury and property loss or damage from hazards of fire, explosion, burn, asphyxiation, and/or carbon monoxide poisoning. Only persons who can understand and follow the instructions should use or service this fire pit.

TABLE OF CONTENTS

1. Importan	t Safety Information	5
2. Informati	on about Propane	7
3. Specifica	itions	7
4. Parts Lis	t	3
5. Installatio	on	9
6. Natural C	Gas Conversion1	3
7. Batteries		4
8. Lighting I	nstructions1	5
9. Maintena	ance1	16
10. Trouble	shooting Guide	16

IMPORTANT SAFETY INFORMATION A

The installation must conform with local codes or, in the absence of all applicable local codes, including, without limitation, with the National Fu el Gas Code, ANSI Z223.1/NFP A 54; International Fuel Gas Code; Natural Gas and Propane Installation Code, CSA B149.1; or Propane Storage and Handling Code, B149.2, as applicable.

The appliance and its appliance main gas valve must be disconnected from the gas supply piping system during any pressure testing of that system at test pressures in excess of 1/2 psi (3.5kPa).

The appliance must be isolated from the gas supply piping system by closing its equipment shutoff valve during any pressure testing of the gas supply system at test pressure equal to or less than 1/2 psi (3.5kPa).

The appliance area must be kept clear and free from combustible materials, gasoline and other flammable vapors and liquids.

Do not use this appliance if any part has been damaged or under water. Immediately call a gualified service technician to inspect. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control which has been damaged or under water.

WARNING

Do not sit or stand on appliance even when not in use and do not touch appliance while in use or for at least 45 minutes after use as the appliance is very hot during use and can cause serious burns.

- WARNING The appliance will remain hot for up to 45 minutes after use. Do not touch or move appliance for at least 45 minutes after it has been completely shut off.
- WARNING Children and adults should be alerted to the hazards of high surface temperatures and kept at a safe distance to avoid burns or clothing ignition.

WARNING All children should be kept away from the appliance and should not be allowed near the product unless carefully supervised by an adult.

- WARNING Clothing, any other object or flammable material should not be hung from the appliance, placed on, near or underneath the appliance.
- WARNING Any screen or guard removed for servicing an appliance must be replaced prior to operating the appliance.
- WARNING Keep children away from this appliance. This appliance contains small parts that can be swallowed by children resulting in serious bodily injury or death.

WARNING Installation and repair should be done by a qualified service person. The appliance should be inspected before use and at least annually by a professional service person. More frequent cleaning may be required as necessary. It is imperative that the control compartments, burners and circulating air passageways of the appliance be kept clean.

Do NOT burn solid fuels in this gas fireplace.

Do NOT ignite the burner before pouring all of the burner media (lava rock or fire ice) into the burner pan. The media must be evenly distributed over the burner.

If during initial firing of fire pit, please stay away from the fire pit for 20 minutes as fire media (lava rock or fire ice) may pop and hit someone on the face or eyes

Do NOT ignite or use the fire pit if the burner media (lava rock or fire ice) are wet. Ensure the burner media are completely dry before igniting as intense heat could cause the media to crack and pop. Always place the cover on the appliance when not in use in order to avoid water contacting the media.

$\mathbf{\Lambda}$ IMPORTANT SAFETY INFORMATION $\mathbf{\Lambda}$

It is UNSAFE to use this product for any purpose except as described in this document including, without limitation, cooking.

CAUTION: The propane gas pressure regulator provided with this appliance must be used. This regulator is set for an outlet pressure of 11 inches water column.

This outdoor gas appliance is not intended to be installed in or on recreational vehicles and/or boats.

Before each use of this gas appliance, open the LP (Liquid Propane) Tank Drawer and inspect the LP Hose. If there is evidence of excessive abrasion or wear, or the hose is cut, it must be replaced prior to the gas appliance being put into operation. Use only the replacement hose assembly specified in this manual. Inspect the burner before each use of the appliance. The burner must be replaced prior to the appliance being put into operation if it is evident that the burner is damaged. Use only the burner listed in these instructions.

Keep the fuel supply hose away from any heated surfaces.

If you have any questions regarding the use of this unit, or find that your fire pit unit needs service, please contact manufacturer.

IMPORTANT SAFETY INFORMATION ABOUT PROPANE (LP) GAS



A self-contained LP-gas cylinder for use with this appliance must have a capacity of 20 lbs. and must be equipped with a Type 1 connector and an OP D (overfill protection device). See Figure 1.

The LP-gas supply cylinder to be used must be constructed and marked in accordance with the specification for LP- gas cylinders of the U.S. Department of Transportation (DOT) or the National Standard of Canada, *CAN/CSA-B339, Cylinder, Sphere and Tubes for the Transportation of Dangerous Goods.*

- The cylinder supply system must be arranged for vapor withdrawal.
- The cylinder used must include a collar to protect the cylinder valve.
- This appliance shall be used only outdoors in a well-ventilated space and shall not be used in a building, garage or any other enclosed space.
- When this appliance is not is use, the gas must be turned off at the supply cylinder.
- Storage of this appliance indoors is permissible only if the cylinder is disconnected and removed from the appliance.

WARNING Cylinders must be stored outdoors in a well-ventilated area out of the reach of children .Disconnected cylinders must have threaded valve plugs tightly installed and must not be stored in a building, garage or any other enclosed areas. Storing cylinders indoors or in poorly ventilated spaces outdoors can result in serious bodily injury and/or death.

CSA (Canadian Standards Association) certified to ANSI Z21.97•CSA 2.41-

2017 "Outdoor Decorative Gas Appliances".

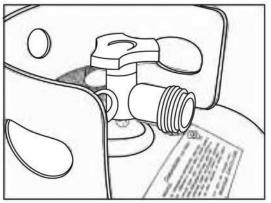



Figure 1

SPECIFICATIONS

INPUT	30,000 Btu/hr	
Propane Regulator	11 inches water column	
Pressure		
Clearances to	Sides: 35.88in. / 88cm	Top: 72 in. / 182 . 9 cm
combustible surfaces		

1

PARTS IDENTIFICATION LIST

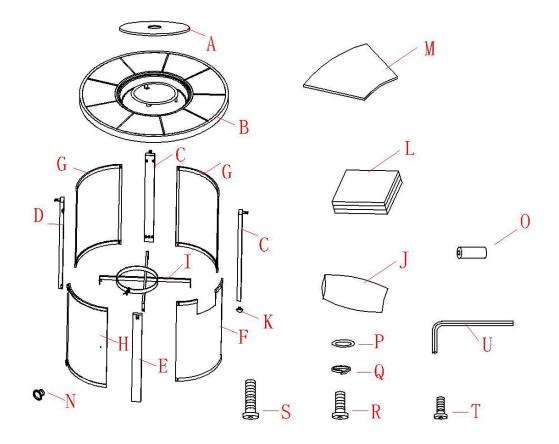


ltem	Description	Qty
А	Burner Cover	1
В	Тор	1
С	Back Post	2
D	Front Right Post	1
E	Front Left Post	1
F	Ignition Side	1
G	Side	2
Н	Door	1
1	Cylinder Holder	1
J	Lava Rock	1 Box
К	Adjustable Leveler	4
L	PVC Cover	1
М	Slate	9
N	Knob	1
0	Battery (AAA 1.5V)	1
Ρ	Flat Washer	24

Q	Spring Washer	24
R	1/4 in x 15 mm Bolt	8
S	1/4 in x 20 mm Bolt	16
Т	#4 x 20 mm Screw	1
U	Allen Wrench	1


INSTALLATION

Note: DO NOT tighten any bolts until all bolts have been started; Philips screw driver NOT included.


 Connect the front right post (D), side (G), back post (C), side (G) with 6 bolts (S), 6 spring washers (Q) and 6 flat wahsers (P) as shown on the right.

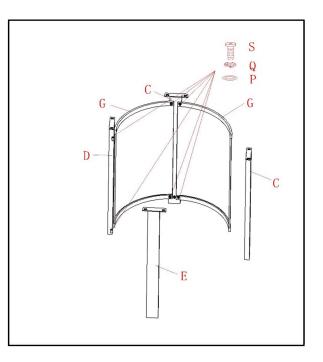


 Secure the side (G), back post (C), ignition side (F), front left side (E) with 6 pieces ¼ in x 20 mm bolts (S), 6 spring washers (Q) and 6 flat wahsers (P).

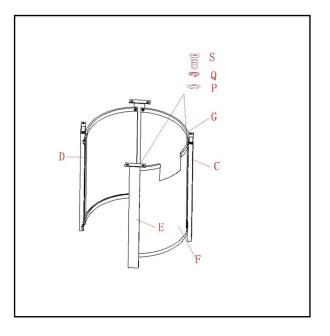

3. Secure the cylinder holder (I) and front left post (E), front right post (D), back post (C) with 4 pieces ¼ in x 20 mm bolts (S), 4 spring washers (Q) and 4 flat wahsers (P) just as right shown.

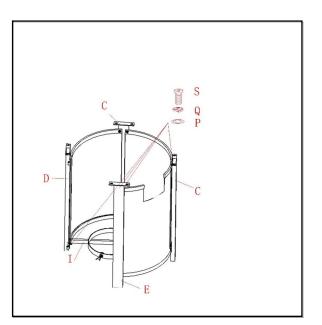


4. Place the door in the body, and install the knob with screw #4 x 20mm (T) attaching from back of door.

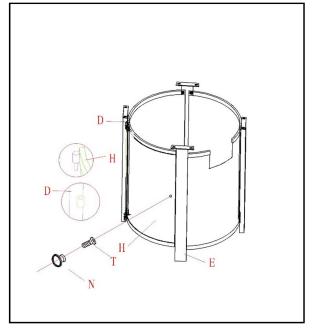




Assemble the base frame to the top with 8 pieces ¼ in x 20 mm bolts (R), 8 spring washers (Q) and 8 flat wahsers (P).

6. Use the adjustable leveler (K) to adjust the level.

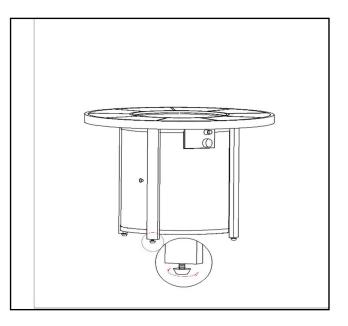

7. Put the 9 pieces inlay slates (M) on the top.

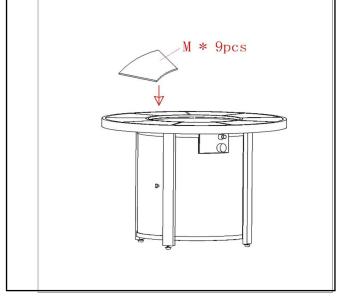


INSTALLATION

8. Pour the box of lava rocks (J) into the fire table body around (B).

Note: (A) Cover must be removed when burner is in operation.


DANGER


WARNING To ensure proper function, the guard on this burner should be free of lava rocks at all times.

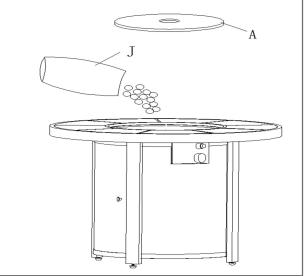

9. Turn the cylinder valve on the tank clockwise to close the propane tank. Attach the preassembled regulator to the cylinder valve by turning the regulator coupling nut clockwise. Make sure it is fastened securely and tighten connections by hand only. Open the tank valve. Apply a solution of soapy water to the tankregulator connection and to the valve-hose connection to check for leaks. If soap bubbles continue to form, the connection has a leak. If a leak is found, close the tank valve and tighten all connections. **NEVER USE A FLAME TO CHECK FOR** LEAKS AS DOING SO CAN CAUSE AN **EXPLOSION OR FIRE RESULTING. IN PROPERTY DAMAGE, SERIOUS** BODILY INJURY OR DEATH.


10. Place the 20-pound cylinder into the main body and tighten it as shown on the right, so the gas cylinder cannot move and fall down, close the door, cover the fire pit with PVC cover (L) when not in use to protect it from the elements or when fire pit is cool COMPLETELY after the use

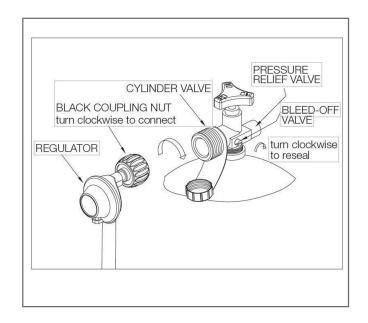

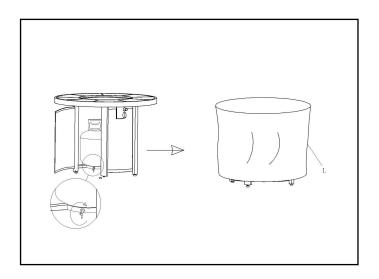

BATTERIES

Make sure the control knob is in the "OFF" position. Unscrew the push button cap on the ignition module located on the control panel to access the battery compartment. The ignition module requires one AAA size battery.

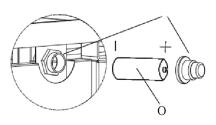



Prior to turning gas on and attempting to light the appliance, make sure the appliance is outside, in a well ventilated area and free of any debris and is not in contact with or near any people, animals, materials or structures. Failure to adhere to the above instruction may result in property damage, serious bodily injury or death.



LIGHTING INSTRUCTIONS

To Light

- 1. Read instructions before lighting.
- 2. Control knob must be in the "OFF" position.
- 3. Connect propane cylinder (See Manual), open cylinder valve.
- 4. Push and turn control knob counter clockwise to "LOW".
- 5. Press the igniter button repeatedly to light burner.
- 6. Release control knob after 45 seconds.
- 7. If ignition does not occur in 45 seconds, push and turn burner control knob to "OFF", wait 5 minutes, fan with newspaper or magazine, and repeat lighting procedure.
- 8. If igniter does not light burner, use a long match or long butane lighter.
- 9. After burner ignites, adjust flame to desired flame with the control knob.

To Extinguish

- 1. Turn and push the control knob clockwise to the OFF position.
- 2. Close cylinder valve, disconnect propane cylinder

MAINTENANCE

- Before performing any maintenance always disconnect propane gas tank.
- Keep the heating item free and clear from combustible materials.
- Visually inspect burner for obstructions and keep tank enclosure free and clear from debris.
- Use a soft brush to get rid of the mild stains, loose dirt and soil after the burner is completely cooled down. Wipe down with a soft cloth.
- Harsh weather conditions may cause stubborn stains, discoloration and possibly rust pitting.
- Permanent damage may occur if powder or solvent comes in contact with painted or plastic components on this heating unit.
- Keep the heating unit stored away from direct sunlight.
- If storing this unit inside, disconnect the propane gas tank from the gas valve.
- Not using manufacturer approved or supplied parts/accessories may result in a defective condition and void the warranty of this heating unit.

• Carbon deposits may pose as a fire hazard; clean the reflector and inside of the glass tube with soap and water if any carbon deposits are present.

TROUBLESHOOTING GUIDE

It is recommended that you contact a qualified service technician if you believe the appliance is not functioning properly.

PROBLEM	CAUSE	REMEDY
	No Propane Gas at Burner	Check that gas tank valve is open. Turn control knob to "ON" and push control knob in. Make sure tank has propane gas.
Burner won't light	No Spark at Electrode	Check that AAA battery is installed with negative (-) end first and has a charge. Check that the wire is connected to the ignition module. Check that the electrode is not cracked or broken.
	Lack of oxygen	Remove excess lava rocks or fire ice from around the ignition well.
	Thermocouple not in flame	Check that the tip of the thermocouple is even with the top of the ignition well. Remove any lava rock s from the ignition
Burner won't stay lit after lighting	Thermocouple connection at the main control valve is loose	Tighten the thermocouple nut at the back of the valve.
	No lava rocks on Burner	Cover the burner with fire ices per the instructions