# HDMI Extender over Cat5e/Cat6 (HD BaseT)


**User manual** 

VER: 1.1s

Thank you for purchasing this product. For optimum performance and safety, please read the instruction carefully before connecting, operating or adjusting this product. Please keep the manual for future reference.

## Caution


The extender using UTP termination, which follows the standard of direct interconnection method.

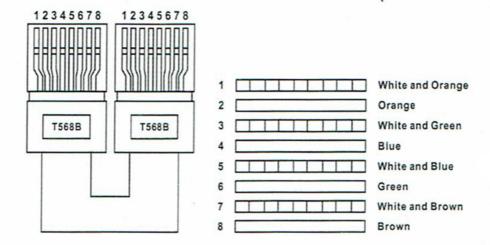

Direct interconnection method

## Advanced:

The extender will start protection mode automatically when using UTP termination, which follows the standard of cross interconnection method.

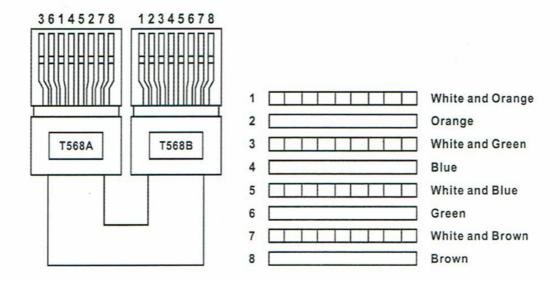

Cross interconnection method

## I. Introduction

The cat5e/cat6 HDMI Extender is a tool which can extend your HDMI signal over 230fts/70meters to a compatible display. It is designed to convert HDMI signal to standard HD BaseT signal which can be transmitted by LAN cable. It also supports Transfer Bidirectional Infrared control signal together with the HDMI signal, so you can control the Source in the Sink side which is 230fts outside, also you can control the Sink in the Source side which is 230fts outside by using the HDMI Extender.

## II. Features

- POE (Power Over Ethernet) function is supported, either TX or RX is powered by24V@1A power supply, the another does not need power supply from the DC jack. POE Power consumption is less than 10W. X See the description 1
- Use single UTP LAN cable (CAT-5E/6) to substitute HDMI cable to achieve long distance transmission.
- 3. UTP termination follows the standard of direct interconnection method.
- 4. Transmission distance: X Over CAT6 cable

70 meters: 1080P @60Hz36bit; 3D1080P@30Hz36bit;

40 meters: 1080P @60Hz@48bit; 1080P @120Hz@24bit; 3D1080P@60Hz@36bit; 4K x 2K@30Hz@24bit.

- 5. Support display resolutions up to 4K x 2K@30Hz
- 6. Full HD support: 1080p@60Hz@48 bit/pixels, 1080p@120Hz@24 bit/pixels, 3D 1080P60Hz and 4K x 2K@30Hz@24bit
- 7. Transfer Bidirectional Infrared control signal together with the HDMI signal.※ See the description 2.
- Transfer Bidirectional RS232 control signal together with the HDMI signal.
   See the description 3.

#### III. Package


1.	HDMI Extender Transmitter	1PC
2.	HDMI Extender Receiver	1PC
3.	Wideband IR Tx	2PCS
4.	Wideband IR Rx	2PCS
5.	24V1A DC Power Supply	1PC
6.	Operation Manual	1PC
7.	Mounting ears	4PCS

# IV. Specifications

1.	Frequency Bandwidth	297MHz[10.2Gbps]
2.	Transmitter Input/Output	1x HDMI Female port/1xCAT6
	٣	1x IR Tx/1x IR Rx/1xPhoenix
3.	Receiver Input/Output Ports	1xHDMI Female port/1xCAT6
		1x IR Tx/1x IR Rx/1xPhoenix
4.	Power Supply	DC 24V 1A
5.	ESD Protection	± 8kV (air-gap discharge)
	Human Body Model:	± 4kV (contact discharge)
6.	Dimensions (mm)	65(W) X 115 (D) X 17 (H)
7.	Weight	200g x 2
8.	Operating Temperature	$0^{\circ}\text{C} \sim 40^{\circ}\text{C} \ / \ 32^{\circ}\text{F} \sim 104^{\circ}\text{F}$
9.	Storage Temperature	-20°C ~ 60°C / -4°F ~ 140°F
10.	Relative Humidity	20~90% RH (Non-condensing)
11.	Power Consumption (Max)	20W

## V. Operation controls and Functions

### **Transmitter**

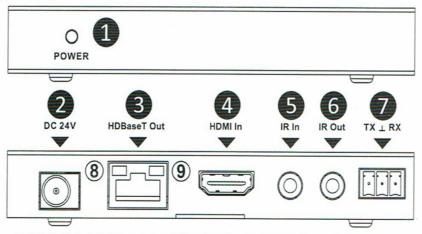

- 1. POWER: This LED illuminates when the device is connected with power supply.
- 2. DC 24V: Plug the 24V DC power supply into the unit.
- 3. HD BaseT OUT: Standard HD BaseT signal output port. Connect HD BaseT

receiver with a UTP cable following the standard of direct interconnection method.

- **4. HDMI IN:** HDMI input port. This slot is where you connect the HDMI source.
- 5. IR IN: Channel 2 IR Receiver. Connect with Wideband IR Rx.
- 6. IR OUT: Channel 1 IR Transmitter. Connect with Wideband IR Tx.
- 7. **RS232:** Phoenix jack provide Serial port control signal from receiver or to receiver.


#### 8. Connection Signal Indicator Lamp

- XIlluminate: The Transmitter and Receiver are in good connections status.
- \*Flashing: The Transmitter and Receiver are in poor connections status.
- \*Dark: The Transmitter and Receiver are not connected.

#### 9. Data Signal Indicator Lamp

- ※Illuminate: The HDMI signal with HDCP.
- ※Flashing: The HDMI signal without HDCP.
- ※Dark: No HDMI signal.

#### Receiver

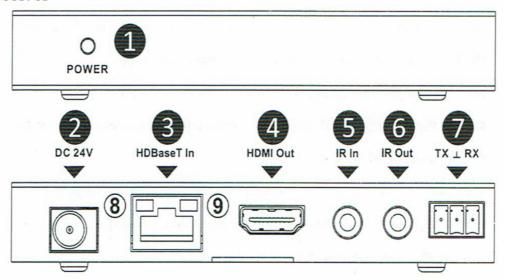

- 1. **POWER:** This LED illuminates when the device is connected with power supply
- 2. **DC 24V:** Plug the 24V DC power supply into the unit.
- HD BaseT IN: Standard HD BaseT signal input port. Connect HD BaseT transmitter
  with a UTP cable following the standard of direct interconnection method.

- 4. **HDMI OUT:** HDMI output port. This slot is where you connect the HDTV or monitor with HDMI cable.
- 5. IR IN: Channel 1 IR Receiver. Connect with Wideband IR Rx.
- 6. IR OUT: Channel 2 IR Transmitter. Connect with Wideband IR Tx.
- 7. RS232: Phoenix jack provide Serial port control signal from receiver or to receiver.

#### 8. Connection Signal Indicator Lamp


- $\divideontimes$ Illuminate: The Transmitter and Receiver are in good connections status.
- **%** Flashing: The Transmitter and Receiver are in poor connections status.
- \*Dark: The Transmitter and Receiver are not connected.

#### 9. Data Signal Indicator Lamp

- ※Illuminate: The HDMI signal with HDCP.
- ※Flashing: The HDMI signal without HDCP.
- \*\*Dark: No HDMI signal.


# **X** Description 1

POE(Power Over Ethernet) Application Example

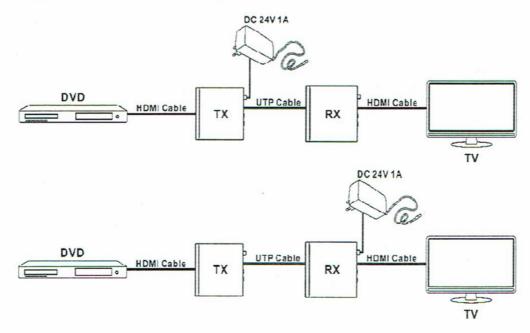


## **X** Description 2

 Bidirectional Infrared control Application Example



# $\times$ Description 3

Bidirectional RS232 control Application Example

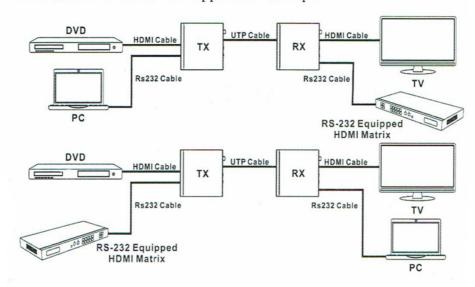

# VI. Application Example

