



SKLZ®

QUICKSTER® LACROSSE GOAL

GETTING STARTED



Thank you for choosing the SKLZ Quickster Lacrosse Goal. We are dedicated to providing you with the best tools and instruction possible to help you prepare for your sport. If there is anything else we can do to help, don't hesitate to send us an email at help@4implus.com or give us a call toll-free at **800-729-5954**.

BEFORE YOU BEGIN:

- Read all instructions carefully before using. Failure to do so may result in injury or damage to the product.
- Always check for wear and tear before use. If any is found, do not use the product.
- If you are missing any Quickster Lacrosse Goal components, please contact Implus customer service toll-free at **800-729-5954**.
- Adult assembly required.

⚠️WARNING:

CHOKING HAZARD: Contains small parts. Not for children under 3 years of age.

- Quickster Lacrosse Goal is under tension when assembled. Please take the utmost care when releasing the tension during disassembly. Failure to do so may result in injury.
- Do not climb or hang on the Quickster Lacrosse Goal.
- Regularly check for wear and tear. Stop using Quickster Lacrosse Goal if any part of it breaks. Failure to do so could result in injury.
- When in use, make sure the Quickster Lacrosse Goal is set up in a clear area to avoid injury.
- Athletes under 18 years of age should use only under adult supervision.
- Not suitable for children under 3 years of age.
- Any alteration of this product or its components will result in a disclaimer of liability.

⚠️CAUTION:

- Keep away from fire and heat sources.
- Do not leave Quickster Lacrosse Goal outdoors for extended periods of time.
- Avoid storing the Quickster Lacrosse Goal in extremely hot or cold environments, as this could reduce the life span of the product.
- When done, disassemble Quickster Lacrosse Goal and store after use. Do not leave Quickster Lacrosse Goal outdoors.
- When in use, make sure the Quickster Lacrosse Goal is set up in a clear area to avoid damage to property.

US Patent #8,246,496

1-YEAR LIMITED WARRANTY

This warranty does not cover damages resulting from accident, misuse, abuse or lost merchandise, and is only valid in the USA. Need proof of purchase for warranty coverage. **Questions? Email help@4implus.com or call toll-free 800-729-5954.**

Made in China. ©2019 Implus Footcare, LLC. Manufactured and distributed by Implus Footcare, LLC: 2001 T.W. Alexander Drive, Box 13925, Durham, NC 27709-3925. SKLZ and Quickster are trademarks or registered trademarks of Implus Footcare, LLC in the U.S. and/or other countries. Product features, appearance and specifications may be subject to change without notice. Unauthorized duplication is a violation of applicable local and international laws.

V1




IN THE BOX


A NET




B BASE FRAME POLE

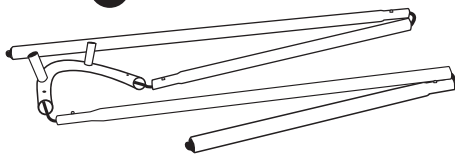


C TENSION-TITE ARM POLES (2)

 

D GROUND STAKES (4)

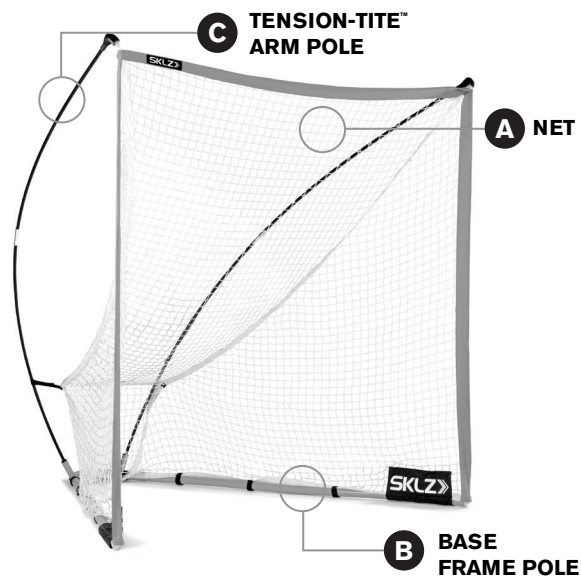

GETTING STARTED




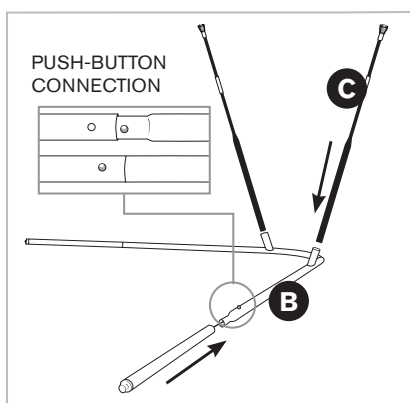


STEP 1: BASE FRAME & TENSION-TITE™ ARM POLE

NOTE: Tension-Tite Arm Poles come pre-attached by elastic cords.

1. Lay out the Base Pole (B) and link together to form a V shape. Make sure to secure the poles with the push buttons. Repeat on the other side.
2. Lay out one Tension-Tite Arm Pole (C) and link together to form a straight pole. Repeat with second Tension-Tite Arm Pole.
3. Slide the Arm Poles into each side of the Base Frame (B).


NOTE: Ensure Arm Poles are fully inserted. Failure to do so may result in damage to the product.

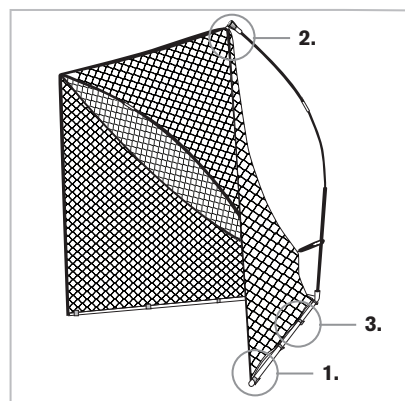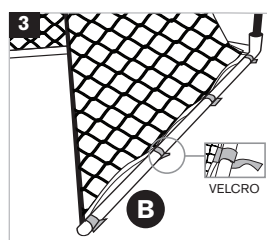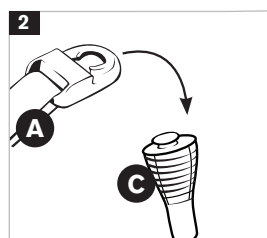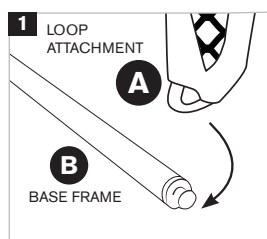

STEP 2: CONNECT THE NET TO THE FRAME

1. Unfold the Net (A) and make sure that the top Quickster logo on the Net is facing away from the frame. Connect the Net loops on the bottom of the Net to each side of the frame.
2. Attach Net to top of each Tension-Tite Arm Pole (C) by inserting the pins at the top of the pole into the clips attached to the Net. Repeat on the other side.
3. Use the hook and loop straps to secure the bottom of the Net to the Base Frame (B).

NOTE: Check the frame to make sure it is securely and fully assembled with the Net before securing to the ground.

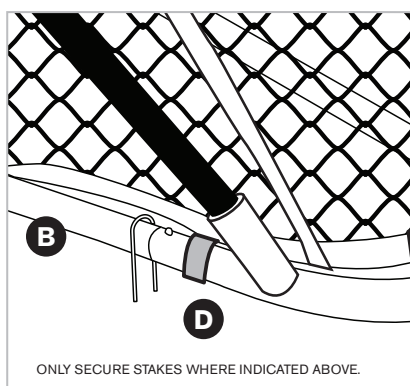

ONLY SECURE STAKES WHERE INDICATED ABOVE.


STEP 3: SECURE THE QUICKSTER

Place the goal in the desired location and ensure it is on level ground. Secure frame with included Ground Stakes (D). Ground Stakes can be secured with hand, foot or rubber mallet.

NOTE: Do not use Ground Stakes on the back of the base frame. Poles will bend and tension system will not function properly.

NOTE: Care should be taken when pressing in the Ground Stakes. Poles can be bent if driven too far into the ground or hard surface.

CAUTION: Make sure the goal is secured into the ground before play. During play, make sure that the Ground Stakes are secured, as a loose Ground Stake may cause injury.

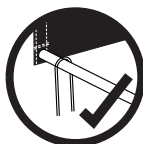

VISIT SKLZ.COM TO LEARN MORE