

OWNER'S MANUAL

5" RECHARGEABLE USB FAN





DIAGRAM


PLEASE SAVE THESE INSTRUCTIONS

WARNING READ THIS OWNER'S MANUAL CAREFULLY BEFORE USE.

PRODUCT DIAGRAM

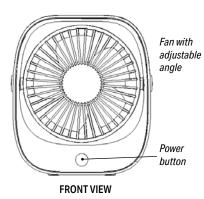

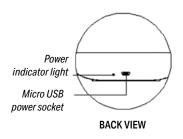

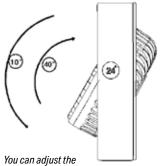

fan head angle from 10° to 40° as your want.

CHARGING STATUS

- Connect the fan with power through USB cable
- 2. Power indicator light is on the back of the unit, next to the micro USB power socket.
 - A RED LED light represents charging status
 - When the LED light turns BLUE, it is fully charged
 - When the fan is in use status, the LED light will turn BLUE color.

OPERATING THE FAN

- Push power button once, and the fan starts operating at its highest speed.
- 2. Push power button a second time, and the fan operates at its medium speed.
- Push power button a third time, and the fan operates at its lowest speed.
- 4. Push power button a fourth time, and the fan will turn off.

WORKING HOURS - when fully charged

- At the lowest fan speed, the fan works for about 5.5-6 hours.
- At the middle fan speed, the fan works for about 4.5-5 hours.
- At the highest fan speed, the fan works for about 2.5-3 hours

MAINTENANCE

 
WARNING

- Don't disassemble the product by yourself
- · Don't put the product in wet place
- · Don't put the product near hot place
- · Don't put the product near any liquid
- Children should be supervised by adults when using

CLEANING AND MAINTENANCE:



Make sure the fan is off. Open the front grill at anti-clockwise direction, take the front grill off.



Clean the front grill and blade with soft cloth.



After washing, follow at clockwise direction to assemble the front grill back.

SPECIAL ATTENTION:

- When operating, the fan blade revolves at a high speed. Please don't put a finger or other objects in the fan blades.
- Please don't use the fan in humid and wet weather or wet environment, as it could cause the product damage or to malfunction.
- 3. Please charge the fan with standard DC 5V voltage. Remove the USB cable when charging is completed.
- 4. Don't place the fan on flammables when charging.
- If the fan gets too hot or out of shape, or if the battery is leaking while charging, please stop charging immediately.
- 6. Please keep the product at 32°F-104°F degrees Fahrenheit.
- Please don't place the product in a fire, otherwise the battery will explode.
- 8. Please don't hit or smash the product. Repeated hitting may damage the product.
- Please don't dismantle, change or repair the product by yourself.
- Please don't replace battery by yourself, and replace followed by professional guidance.

WHAT'S IN THE BOX

- Fan (1)
- USB Cable (1)
- User Manual (1)

PRODUCT SPECIFICATIONS:

Input: DC 5 Volts – 1 Amp

Speed Level: 3 Speeds -

High / Medium / Low

Battery capacity: 2000 mAh

For your records, staple your sales receipt to this manual and record the following:

Date of Purchase:	
Place of Purchase: _	

NOTE: Proof of purchase is required for all warranty claims.

NOTE: As a result of continual improvements, the design and specifications of the product within may differ slightly to the unit illustrated on the packaging.



SCAN CODE TO LEAVE A REVIEW

THANK YOU FOR YOUR PURCHASE!

As a small business, reviews are everything!

We'd love to hear how you are enjoying your Denali Aire product! Please take a minute to tell us (and others) about your experience.

Thanks (again!)



5401 Dansher Road Countryside, IL 60525

888-433-6254 | support@denali-aire.com | www.denali-aire.com