


SHIMANO

CURADO MGL S A-RB

CUMGL71HGK

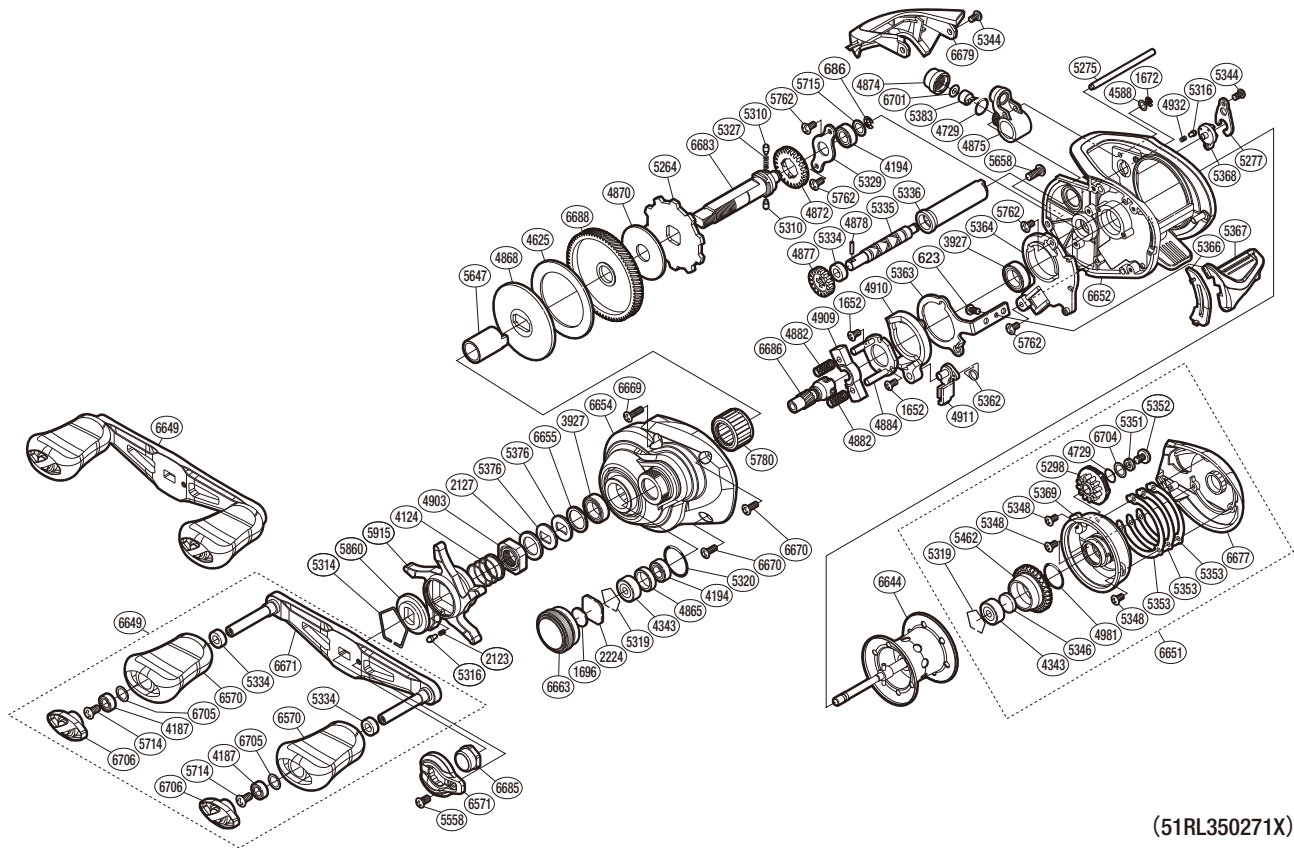

(51RL350271X)

Please note that the number of adjusting washers may not be the same as shown in the exploded views.
(Adjustment will vary with each individual product.)

Part No.	Description	Part No.	Description	Part No.	Description
BNT0623	Screw	BNT5264	Anti-Reverse Ratchet	BNT5658	Screw
BNT0686	E Lock	BNT5275	Stabilizer Bar	BNT5714	Screw
BNT1652	Screw	BNT5277	Cam Lever Retainer	BNT5715	Washer
BNT1672	E Lock	BNT5298	Brake Dial	BNT5762	Screw
BNT1696	Cast Control Spacer (B)	BNT5310	Idle Gear Pin	BNT5780	Roller Clutch Bearing
BNT2123	Click Spring	BNT5314	Click Plate Retainer	BNT5860	Star Drag Click Plate
BNT2127	Star Drag Spacer	BNT5316	Click Pin	BNT5915	Star Drag
BNT2224	Cast Control Spacer (A)	BNT5319	Bearing Retainer	BNT6570	Handle Knob
BNT3927	Ball Bearing	BNT5320	O Ring	BNT6571	Handle Nut Plate
BNT4124	Star Drag Spring	BNT5327	Idle Gear Spring	BNT6644	Spool Assembly
BNT4187	Ball Bearing	BNT5329	Drive Shaft Retainer	BNT6649	Handle Assembly
BNT4194	Ball Bearing	BNT5334	Bushing	BNT6651	Right Side Plate Assembly
BNT4343	Ball Bearing	BNT5335	Worm Shaft	BNT6652	Frame Assembly
BNT4588	Washer	BNT5336	Level Wind Guard	BNT6654	Left Side Plate Assembly
BNT4625	Drag Washer C	BNT5344	Screw	BNT6655	Washer
BNT4729	O Ring	BNT5346	Bearing Spacer	BNT6663	Cast Control Cap
BNT4865	Bearing Spacer	BNT5348	Screw	BNT6669	Screw
BNT4868	Key Washer	BNT5351	Brake Dial Spacer	BNT6670	Screw
BNT4870	Drag Washer A	BNT5352	Screw	BNT6671	Handle Shank Assembly
BNT4872	Idle Gear A	BNT5353	Washer	BNT6677	Right Side Plate
BNT4874	Pawl Cap	BNT5362	Clutch Pawl Spring	BNT6679	Level Wind Protector
BNT4875	Line Guide Assembly	BNT5363	Clutch Plate	BNT6683	Drive Shaft
BNT4877	Idle Gear C	BNT5364	Clutch Guard	BNT6685	Handle Nut
BNT4878	Worm Shaft Pin	BNT5366	Clutch Bar Guide (B)	BNT6686	Pinion Gear
BNT4882	Yoke Spring	BNT5367	Clutch Lever	BNT6688	Drive Gear
BNT4884	Clutch Cam Retainer	BNT5368	B Side Plate Cam Lever	BNT6701	Washer
BNT4903	Star Drag Nut	BNT5369	Brake Case	BNT6704	Washer
BNT4909	Yoke	BNT5376	Washer	BNT6705	Washer
BNT4910	Clutch Cam	BNT5383	Line Guide Pawl	BNT6706	Handle Knob Seal
BNT4911	Clutch Pawl Assembly	BNT5462	Brake Ring Gear		
BNT4932	Click Spring	BNT5558	Screw		
BNT4981	O Ring	BNT5647	Roller Clutch Inner Tube	BNT4692	B-100 Oil (Accessory)

(201130)_002