


Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products can be requested with the 1-year warranty period. Proof of purchase must be provided. This includes the date of the purchase as well as photos of the product defect. Photos are used to determine the cause of the defect and to provide future quality control. The request will be reviewed, and replacement pieces will be sent at our discretion. For warranty information, visit <https://tiny.cc/SunnydazeWarranty>. If you have any questions, comments or concerns, feel free to contact us by phone at 833-982-1977, by email: [customerservice@sunnydazedecor.com](mailto:customerservice@sunnydazedecor.com), or via our contact us page at <https://tiny.cc/SunnydazeContact>



### **Large Bowl Fountain FC-22631**

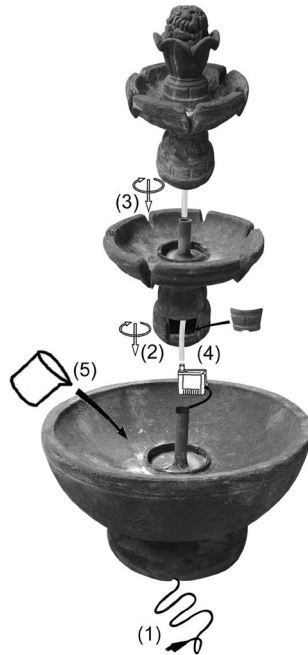

#### **ASSEMBLY INSTRUCTIONS:**

**Please read the assembly and operating instructions carefully and observe the safety instructions. Keep these details in a safe place for future reference.**

Place the fountain on a level surface, away from areas where it is likely to get clogged with leaves and make sure that the cable will reach the socket.

**Follow the assembly steps below for this fountain as shown in the illustration above.**

**Step (1)** Get pump wire through the plastic pipe on the centre of Basin. Place the pump in center of the basin, make sure the wire put into the cavity of base fountain. Lastly insert the EVA stopple in the top of the plastic tube.

**Step (2)** Insert, twist and lock the pillar to the basin.

**Step (3)** Put the rubber hose through the hole of pillar. Insert, twist and lock the upper reservoir to the pillar.

**Step (4)** Connect the rubber hose to pump outlet. Please close the small door to the pillar.

**Step (5) (6)** Fill the reservoir with water and make sure the water can submerge the pump fully to prevent pump damage. Plug the pump then water will start to flow soon.

- Adjust the pump flow rate to achieve the desired effect and to minimize any splashing. Splashing can occur if the flow rate is too high or the reservoir is too full. The flow rate can be increased or decreased by moving the flow rate control slider on the pump body. Moving the switch towards '+/ Max.' will increase the flow rate and moving it towards '-/Min' will decrease it.  
On some type of pumps, flow regulator may be turned clockwise or anticlockwise to adjust.

#### **Troubleshooting**

-- TURN OFF THE POWER BEFORE YOU CHECK FOLLOWING --

If pump does not run --

- (1) Check the circuit breaker, try another outlet.
- (2) Check the water level in the fountain. Running the pump without sufficient water can damage the pump.
- (3) Check the setting of the flow control on the pump and adjust the flow.
- (4) Check the pump discharge and intake for dirt and debris.
- (5) Check the fountain feature tubing for kinks and obstructions.
- (6) The pump might be "air locked". Plug and unplug the pump several times to release the air inside the pump.
- (7) Check and reconnect all the cords and try again.