

ITEM# 83285

Black Rub 46" Folding Corner TV Cart

Leick
Home
SINCE 1910

2219 S. 19th St.

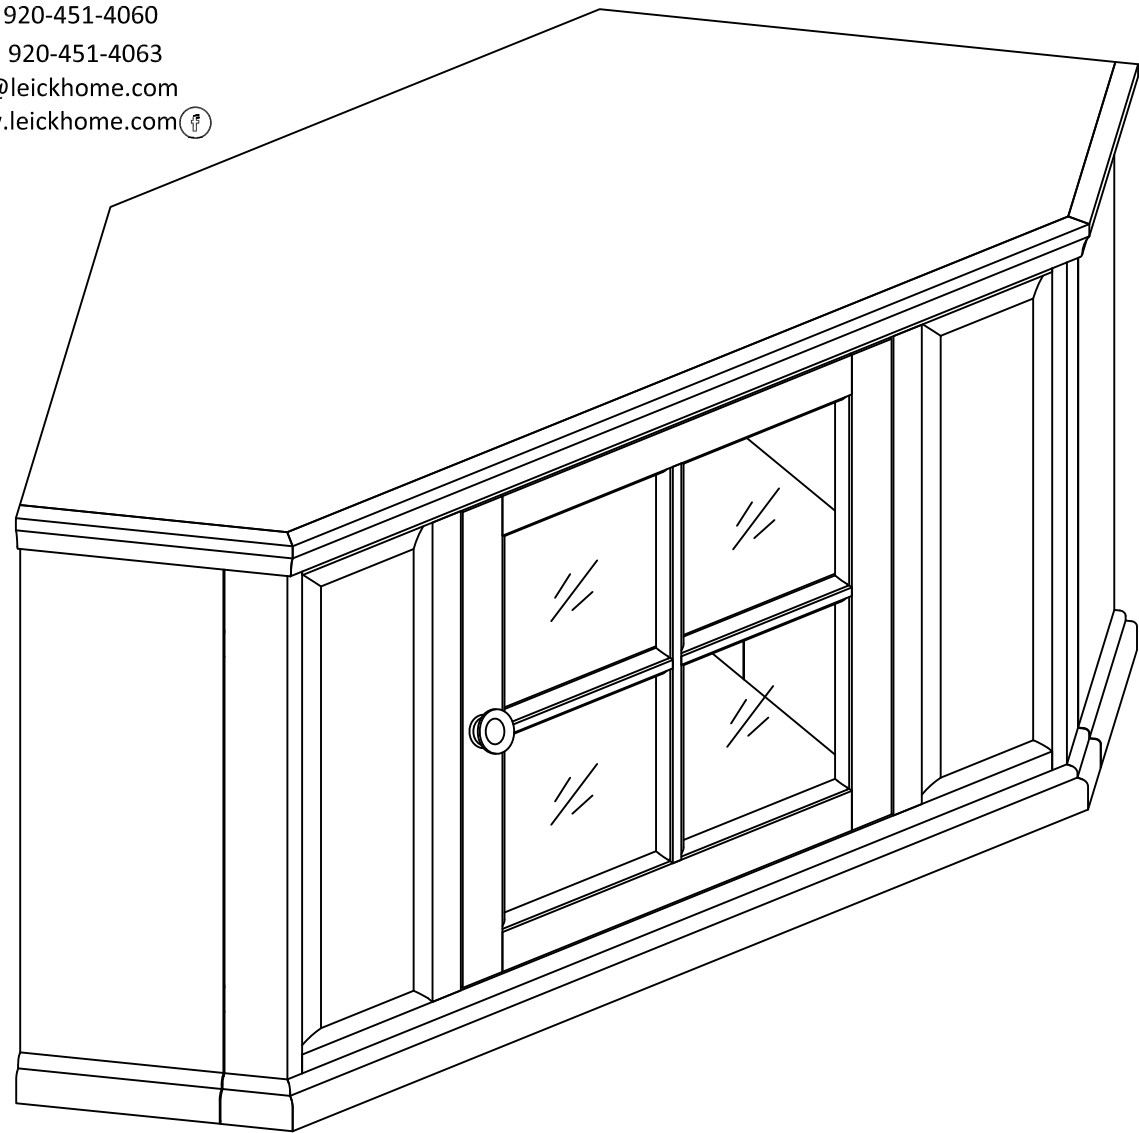
Sheboygan, WI 53081

Ph: 920-451-4060

Fax: 920-451-4063



 
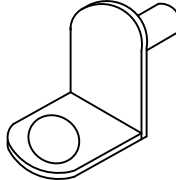
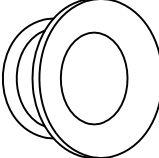


info@leickhome.com

www.leickhome.com



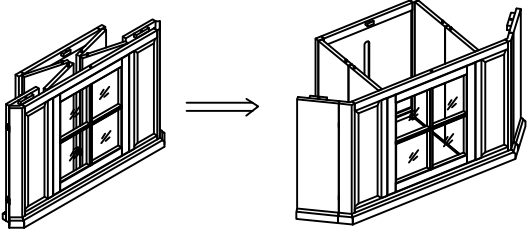
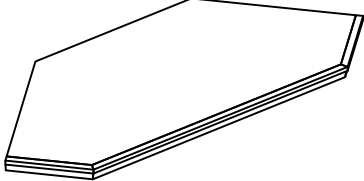
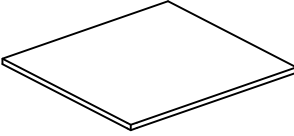
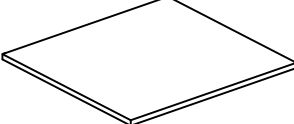
1

Hardware List

Item	Description	Qty
a	 Bolt 1/4"X1-1/8"	4PCS
b	 Allen wrench	1PC
c	 Washer 1/4"X12mm	4PCS
d	 Flat Shelf Supports	4PCS
e	 Door Pull	1PC
f	 Machine screw for door pull 5/32"X3/4"	1PC
g	 Rounded Shelf Supports	4PCS

2

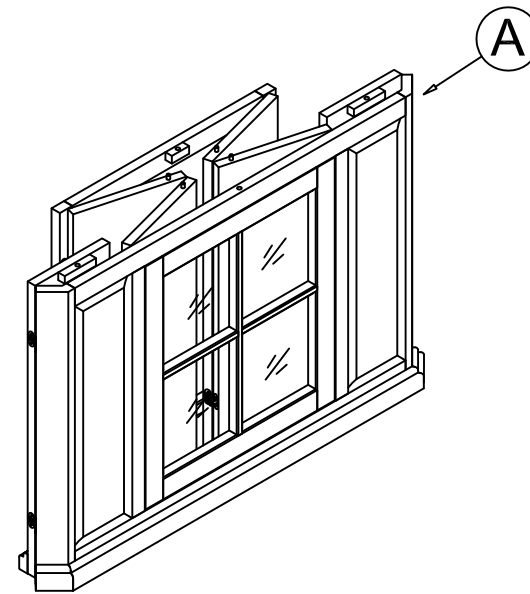
Parts List

Item	Description	Qty
A	 Cabinet	1PC
B	 Top Panel	1PC
C	 Bottom Shelf	1PC
D	 Middle Adjustable Panel	1PC

Assembly Instructions

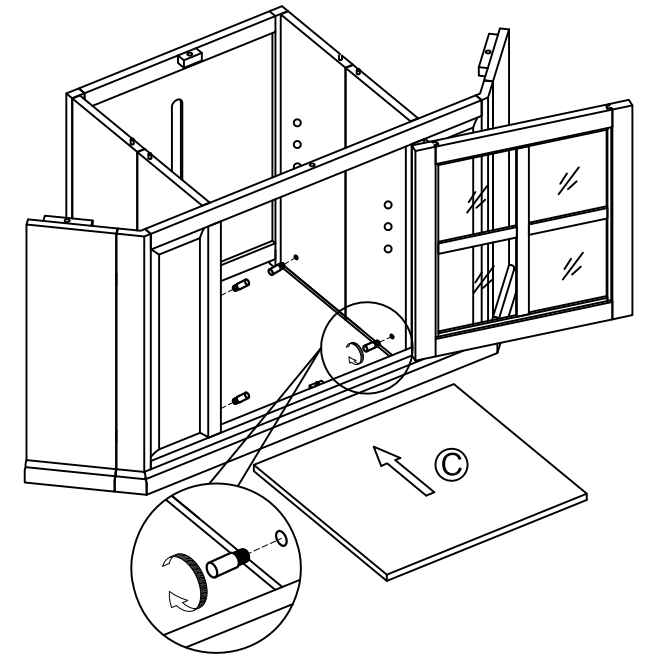
Step 1

Pull the face frame to unfold the cabinet.



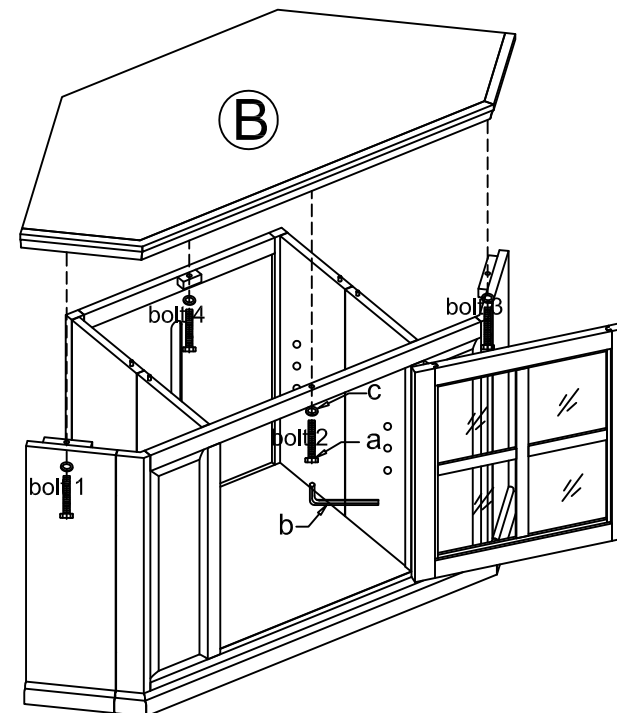
Step 2

Open the door and screw-in four round shelf supports onto vertical panels, insert the bottom panel.



Step 3

Put the top panel on and fasten with 4 bolts.



Step 4

Insert the flat shelf supports onto vertical panels, put the shelf on and install the door pull.

