


# SOLAR<sup>®</sup>TEK<sup>®</sup> REPLACEMENT AUTOMATIC FOUNDATION VENT

# INSTALLATION INSTRUCTIONS


Part #RABL

*If your new foundation vent came with retaining springs then please follow these installation steps below.*


1. Remove the old vent and clean the foundation opening so that the vent fits easily and loosely.

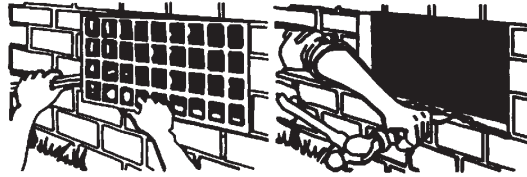


2. Insert barb end of retaining springs into slots on top or bottom or both. **NOTE:** Usually 2 retaining springs on the bottom and 1 on the top will be best. Extra slots are provided to allow for irregularities in the foundation opening.

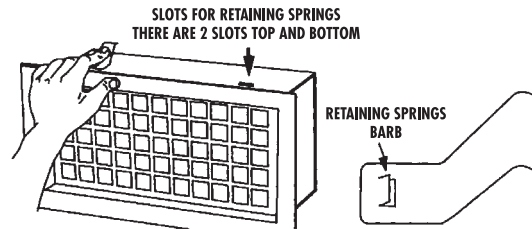

3. Put a hex nut into each corner from the outside. Screw a set screw into each hex nut from the inside. Insert the vent into the wall while depressing the springs by hand to help them slide in. Press the vent tightly against the wall and align. Tighten screws to produce moderate pressure. Do not over tighten.

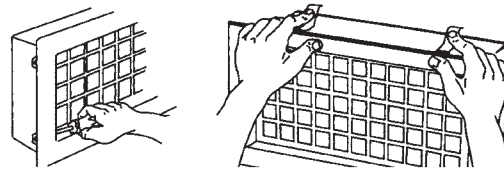

4. If a retaining spring has to be moved from one slot to another or not used at all, pliers should be used to extract the retaining spring. Force is required and doing this by hand is not recommended.

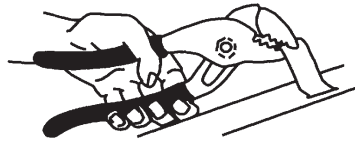

5. Check for free movement of the louvers using a wire which will pass through the screen.



*If your new foundation vent did not come with retaining springs this means you have our new model. Please follow these easy installation steps below.*


1. Remove old vent and clean foundation opening so that the vent fits easily and loosely.




2. Screw a set screw into each threaded hole at the corners of the vent from the inside.



3. Insert the vent into opening and press flanges tightly against wall.

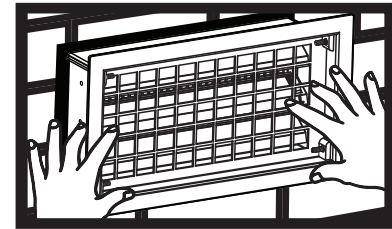

4. Tighten screws to produce moderate pressure. Do not over tighten.

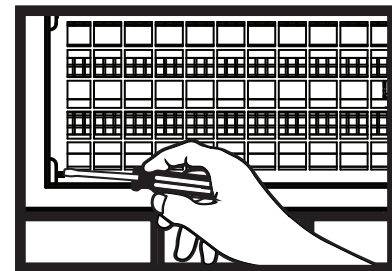

## 5-Year Limited Warranty

The Air Vent Replacement Automatic Foundation Vent has a limited warranty from the date of purchase against defects in workmanship and material under normal use and service for a period of 5 years. During such 5-year period, we will replace without charge any defective part or at our option replace with a new vent. This warranty is in lieu of all other warranties, expressed or implied, and recovery of any kind shall not be greater than the purchase price of the vent.

## Conditions of Warranty:

1. This warranty is limited to the original purchaser. Dated sales receipt required.
2. This warranty does not cover external marring whether from misuse or weather, damage incurred in shipping, or damage from use of this product.
3. This warranty is void if the vent is altered or tampered with in any way.

For questions regarding this product, please call our customer service at 1-800-525-3271