

Installation Guide

Replacement Filter Cartridge

Français, page "Français-1"
Español, página "Español-1"


THE BOLD LOOK
OF **KOHLER**®

1414186-2-A

Tools and Materials



Permanent
Marker

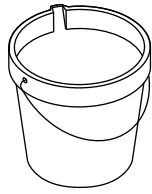

Bucket



Rags

Before You Begin



WARNING: Risk of personal injury. Do not use with water that is microbiologically unsafe or of unknown quality without adequate disinfection before or after the system.


- Observe all state and local plumbing and building codes.
- Contaminants or other substances removed or reduced by this filtration system may not be present in your water. Refer to the Performance Data Sheet (available at us.kohler.com) for contaminants and reduction performance.
- System is not intended to convert wastewater or raw sewage into drinking water.

NOTE: The overall filter height is 16" (406 mm).

- Replace the filter cartridges every 6 months and the membrane cartridge every 12 months, when the capacity has been exceeded, or when a noticeable decrease in water flow is observed.
- Flush the filter system thoroughly after prolonged periods of nonuse. Allow the water to flow for 5 or 6 minutes before use.
- If the filter cartridges are not maintained and operated as specified in the Performance Data Sheet, there is a risk of exposure to contaminants.
- Record your model number and installation date below. Also mark the installation date on the filter head and filter cartridges.
Model number: _____ Replacement date: _____
- Keep this manual for future reference.

Before You Begin (cont.)


To learn more about other KOHLER water filtration systems, replacement cartridges, subscription services, and recycling program visit kohler.com.

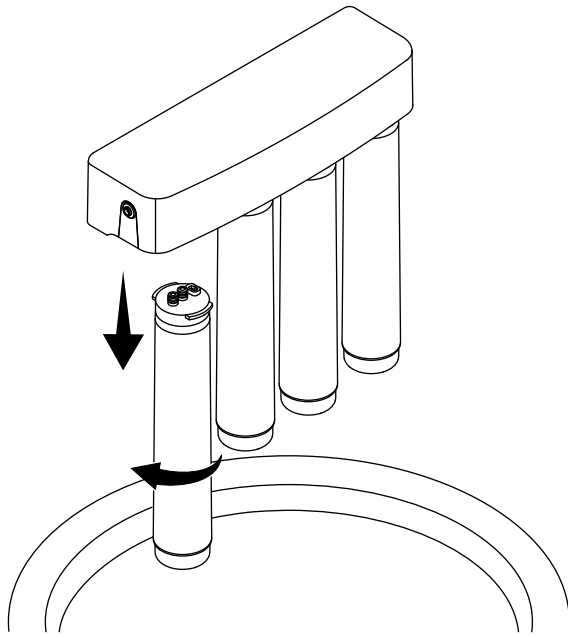

1. Remove Existing Filter Cartridge

NOTE: Used filter cartridges can be recycled **in the U.S. only**. Follow the instructions on the recycling card provided. Drain as much water as possible from the used filter cartridge before shipping.

- Position a bucket, pan, or rag under the filtration system to catch residual water.
- Turn the filter cartridge 90° clockwise, and pull-down gently to remove.
- Discard or recycle the used filter cartridge.

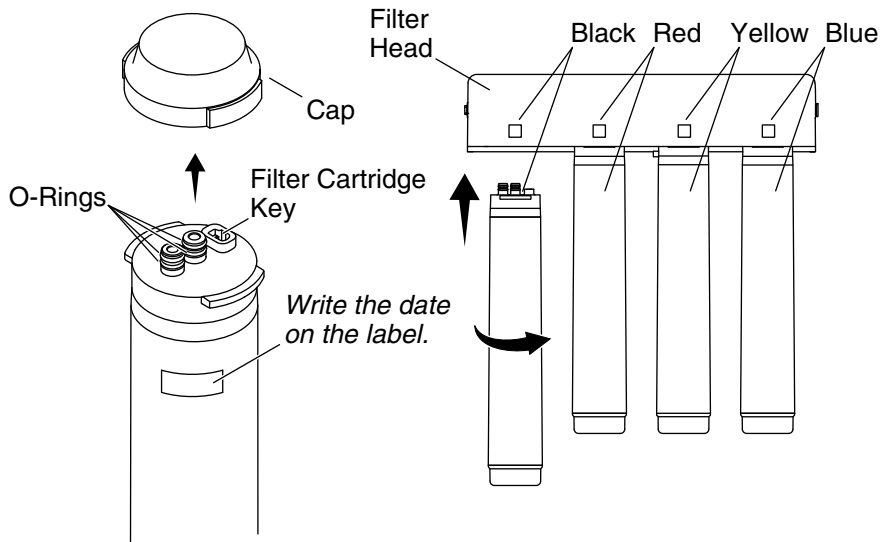

2. Install New Filter Cartridge


IMPORTANT! Replace all of the cartridges at the same time to maintain proper performance.

NOTE: See the "Condition New Cartridges" section for cartridge orientation and conditioning instructions.

- Write the installation date on the new filter cartridge labels.
- Remove and discard the cap from the filter cartridges.
- Inspect the filter cartridges for damage.
- Verify that both sets of O-rings are present and are positioned correctly in the grooves.

NOTE: The filter cartridge will only engage into the filter head one way. Do not force the components.

- Align the filter cartridge so the label is to the left, and press upward so the filter cartridge key engages into the filter head.
- Use your hand to rotate the filter cartridge counterclockwise 90° until it stops and is securely engaged into the filter head.

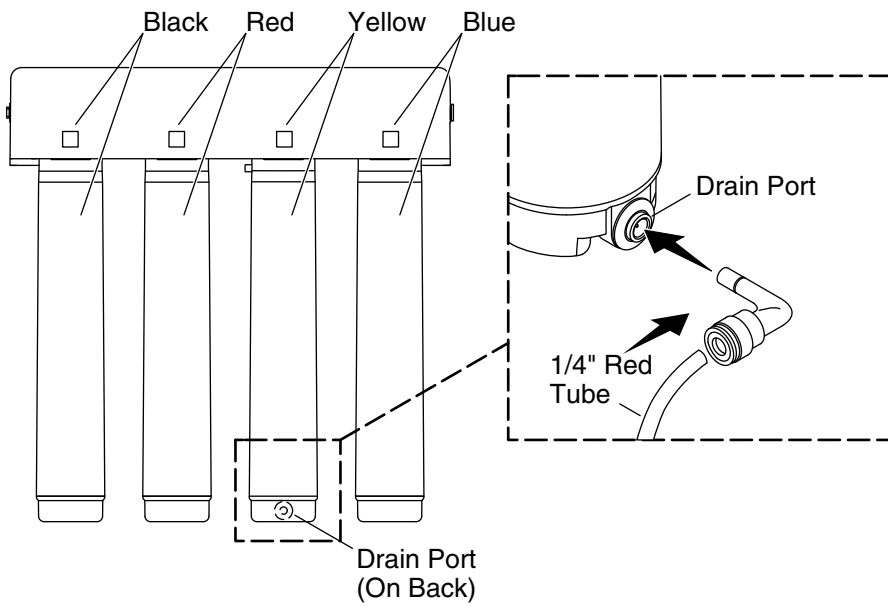

3. Condition New Cartridges

- Insert the elbow into the cartridge drain port.
- Insert the 1/4" red tube with the flow restrictor into the elbow. Verify that the connection is secure.
- Turn on the cold water supply and check all connections for leaks.
- Run water through the faucet for 10 minutes to remove any air and carbon particles from the system.
- Turn off the water.

4. Installation Checkout

- Check the filter cartridge connections for leaks. Repair as needed.
- Run water through the faucet for at least 5 minutes to remove any air and carbon particles in the system.

Troubleshooting

This troubleshooting guide is for general aid only. For warranty service, contact your dealer or wholesale distributor.

For service parts and replacement filter cartridges, visit your product page at kohler.com.

Symptoms	Probable Causes	Recommended Action
1. Water leaks between the filter head and the filter cartridge.	A. An O-ring is damaged, dirty, or out of place.	A. Turn off the water supply, and relieve water pressure. Remove the filter cartridge and inspect the O-rings for damage or debris, and ensure that the O-rings are in place. Replace or reinstall the filter cartridge, turn on the water supply, and check for water leakage.
2. Water leaks at a tubing connection.	A. Tubing is not cut square, or is damaged or crimped.	A. Turn off the water supply, and relieve water pressure. Press in the collar around the fitting at the leak, and pull the tubing to remove. Use a sharp utility knife to cut 1/2" (13 mm) off the end of the tubing. Reinsert the tubing into the fitting. Turn on the water supply and check for leakage.

Troubleshooting (cont.)

Symptoms	Probable Causes	Recommended Action
3. Water leaks at a threaded connection.	A. The connection is damaged or dirty.	A. Turn off the water supply, and relieve water pressure. Disconnect the fitting, and inspect the seal for damage or debris. Remove any debris or replace the damaged fitting. Securely reconnect the fitting, but do not overtighten. Turn on the water supply and check for leakage.