


IMPORTANT


Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.


Do not use power tools above 8 volts to assemble.

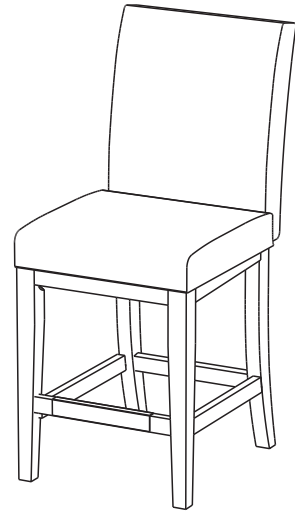


Part List

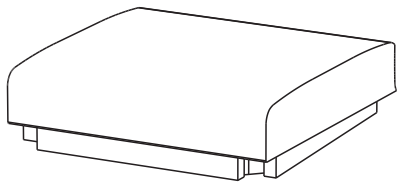

 A.
Seat
1 pc.



 E.
Side Stretcher
1 pc.



F.
Side Stretcher
1 pc.




B.
Leg
1 pc.



C.
Leg
1 pc.




G.
Front Stretcher
1 pc.

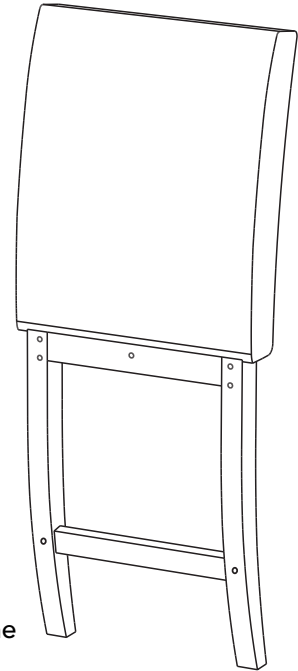


D.
Back Frame
1 pc.


Hardware List

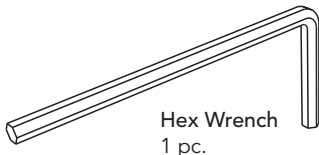


Hex Wrench
1 pc.

 

Small Hex Wrench
1 pc.

 

 M8x76
Head Cap Bolt (long)
4 pcs. (+1 extra)



M8x57
Head Cap Bolt
4 pcs. (+1 extra)



M8x35
Head Cap Bolt (short)
1 pc. (+1 extra)



Spring Washer
9 pcs. (+1 extra)



M3.5x40
Wood Screw
6 pcs. (+1 extra)



Flat Washer
9 pcs. (+1 extra)

Tool(s) required for assembly: Phillips screwdriver

Assembly Instructions 2/3

IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Make sure unit is level before tightening these screws.
- Do not tighten all the bolts until each part is properly assembled.
- Keep Hex Wrench as the bolts may need to be tightened in the future.

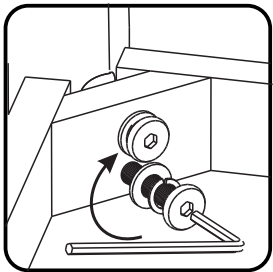
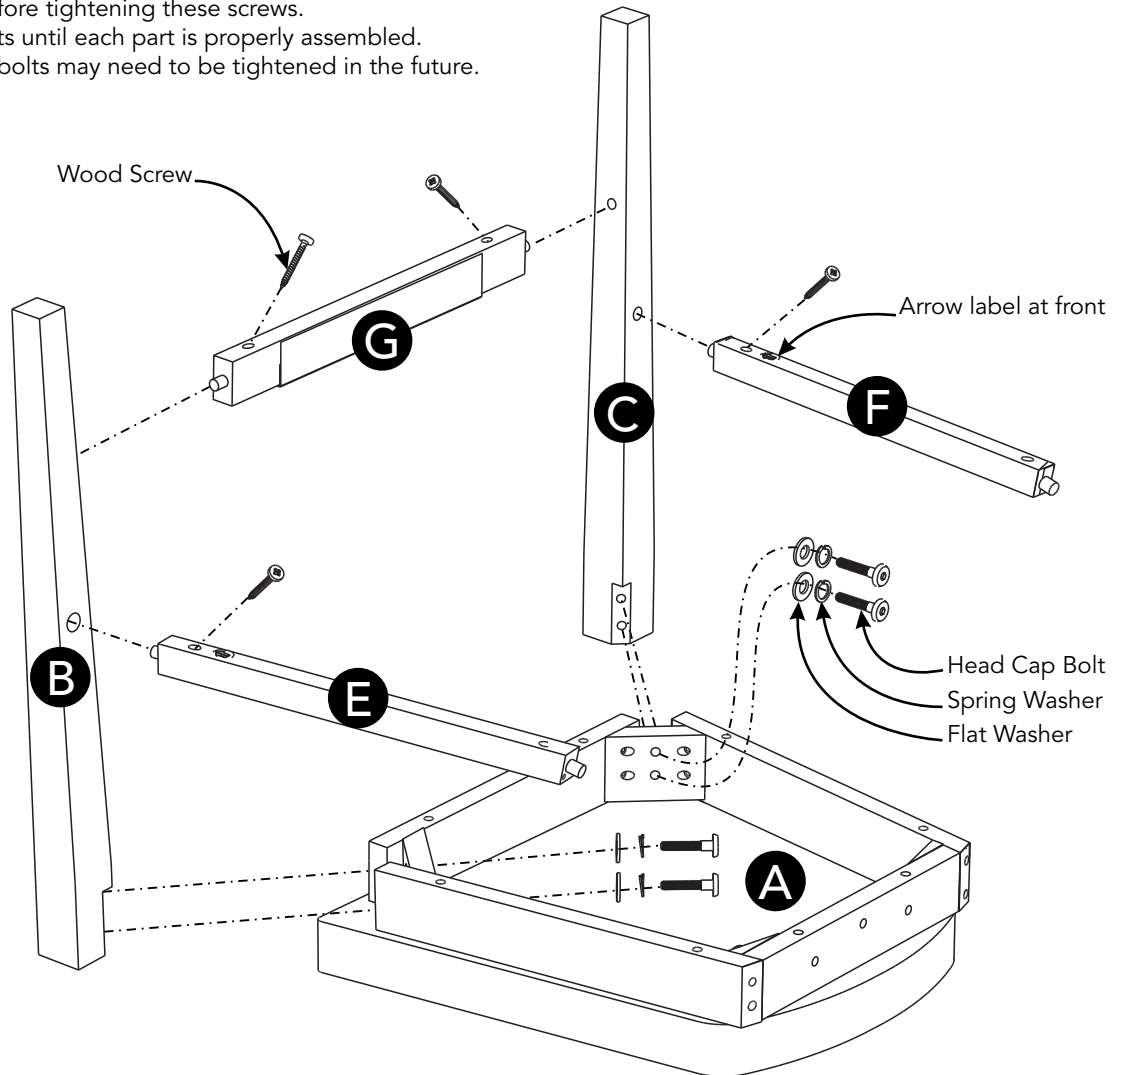


Figure 1

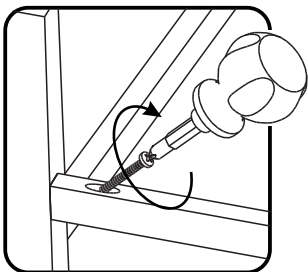


Figure 2

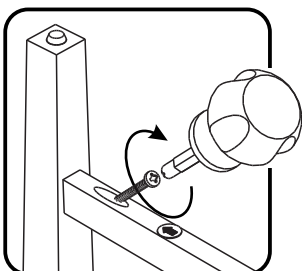


Figure 3

STEP 1

Place Seat (A) upside down on a soft cloth.


Attach Legs (B) and (C) to Seat (A) with Flat Washers, Spring Washers and Head Cap Bolts, tightening bolts only halfway. (See Figure 1)

Attach Stretcher (G) to unit with Wood Screws. (See Figure 2)

Orientate Stretcher (E) so Arrow label is at front of unit, then attach Stretcher (E) to Leg (B) with Wood Screw. (See Figure 3)

Orientate Stretcher (F) so Arrow label is at front of unit, then attach Stretcher (F) to Leg (C) with Wood Screw.

Assembly Instructions 3/3

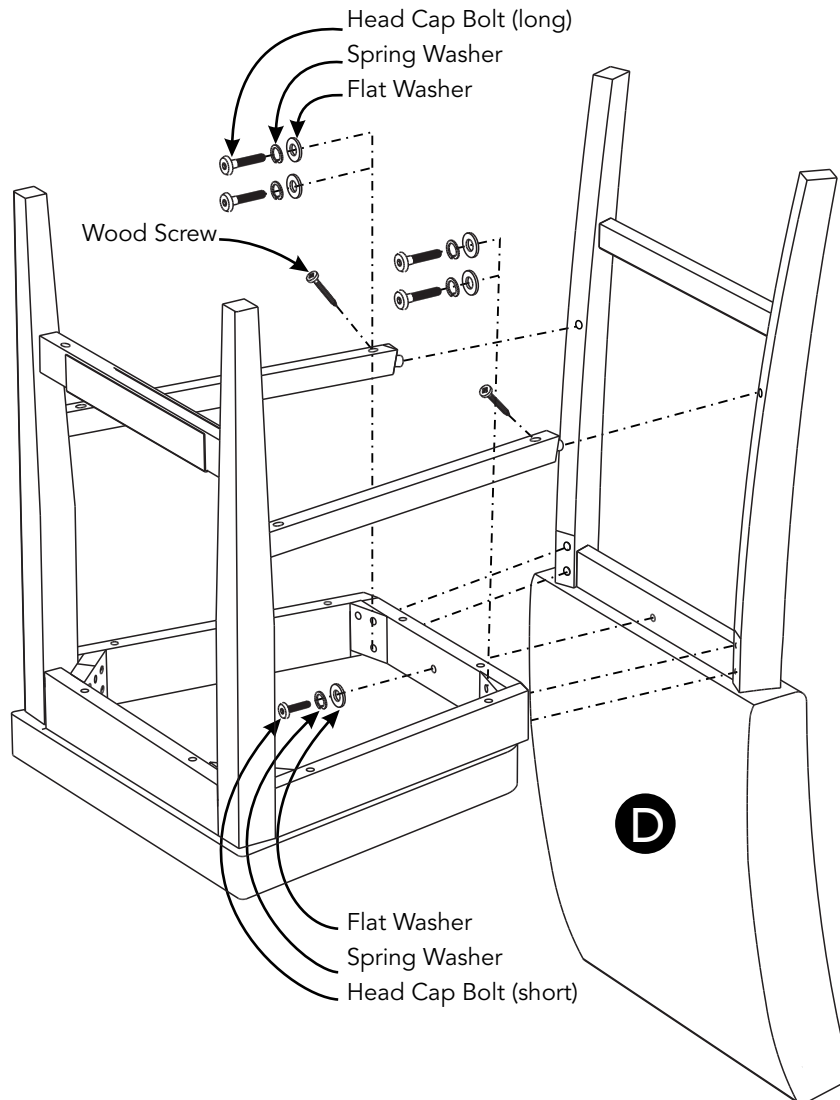

STEP 2

Attach Back Frame (D) to unit with Flat Washers, Spring Washers, Head Cap Bolts (short) and Head Cap Bolts (long), tightening bolts only halfway. (See Figures 4 and 5)

Tighten all bolts used in Steps 1 and 2.

Insert Wood Screws into pre-drilled holes in unit, then tighten.

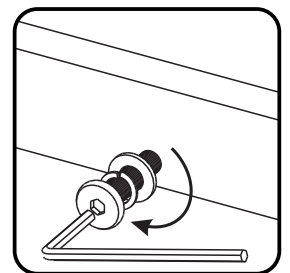


Figure 4

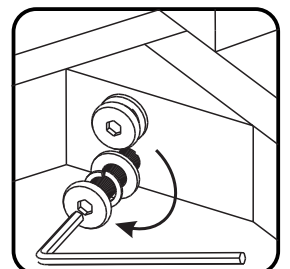


Figure 5

CARE INSTRUCTIONS

NEVER

allow liquids to remain on furniture.
Absorption causes parts to warp
and split and finishes to delaminate.

NEVER

use glass cleaners on
finished furniture. Ammonia
chemically attacks the finish.



Do not use power tools
above 8 volts to assemble.

**PREVENT
CRACKING**



Do not place
in direct sunlight.

**PREVENT
FADING**



Do not write
directly on surface.

**PREVENT
MARKING**



Do not place hot
objects on surface.

**PREVENT
FINISH DAMAGE**



Do not use rubber
based placemats.

**PREVENT
DISCOLORING**



Do not use commercial
waxes and polishes.

**PREVENT
YELLOWING**

CLEAN

with a soft cloth moistened
in lukewarm soap and water.
Buff with a dry clean cloth.



homestyles will provide replacements free of charge for missing or damaged parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retailer, **homestyles** is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged parts may be requested via contact info below.

homestyles Customer Service: www.homestylesfurniture.com,
servicedesk@homestylesfurniture.com, 888-680-7460