 



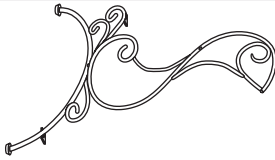 


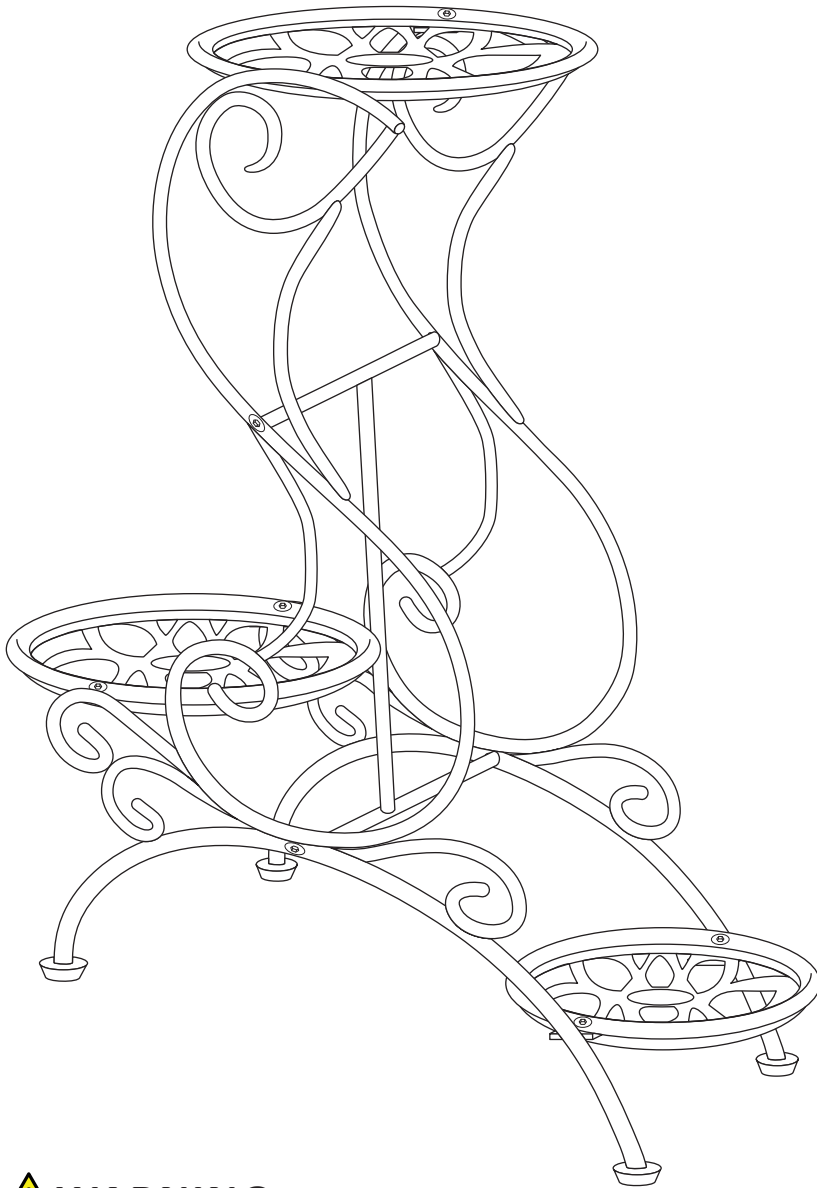

3-TIER VICTORIAN PLANT AND FLOWER STAND KF-3VFS

Review all assembly and care information before using this product. Save this manual for future reference.

Assemble components on a soft, clean surface to avoid damaging the finish.



Inspect packaging to ensure all parts are accounted for before disposing of packing materials.
Save the packing slip.

No.	HARDWARE	QTY.
A	 Tier	3
B	 Left Panel	1
C	 Right Panel	1
D	 Center Bar	1
T	 Bolt	10
V	 Nut	6

TOOLS REQUIRED (included)



Hex Key



Wrench

! WARNING !

CHOKING HAZARD — This item contains small parts that can be swallowed. Keep children and pets away during assembly.

! WARNING:

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.



**SCAN THIS CODE
WITH YOUR
SMARTPHONE
TO VIEW OUR
ASSEMBLY VIDEO**

 
ASSEMBLY

Review all steps and understand assembly before beginning.

Do not fully tighten hardware until all components have been loosely assembled.

STEP 1


B: 1
C: 1
D: 1
T: 4

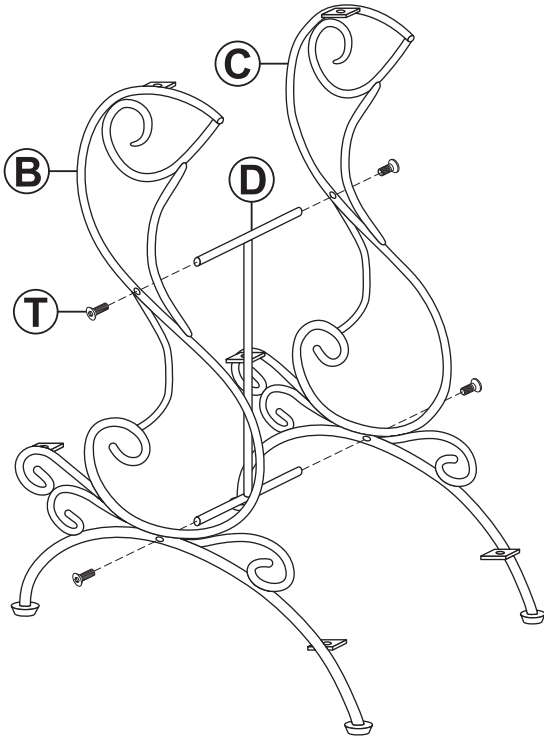

Loosely secure Center Bar (D) to Left Panel (B) using two Bolts (T). Then, loosely secure Right Panel (C) to the center bar.

STEP 2

 A: 3
T: 6
V: 6

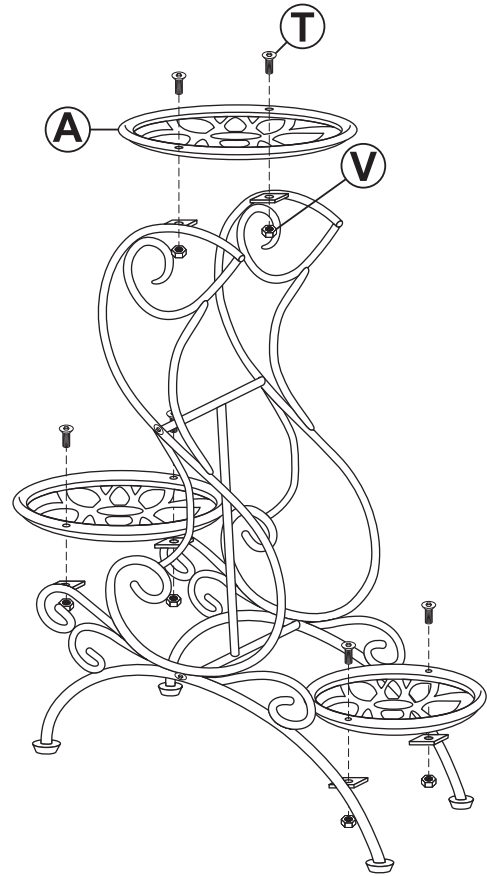

Loosely secure each Tier (A) to the side panels using two Bolts (T) and Nuts (V).

Finish tightening all bolts.

Care & Maintenance

LOCATION: Only use on a flat, level surface. Be mindful of where the unit is placed, leaks and/or run-off from planters can damage surfaces.

MOVING: Always remove plants before moving this stand. Do not drag the stand as doing so will damage the finish and could weaken assembly points.

CLEANING: Wipe with a soft, damp cloth. For stubborn dirt, mix 1 part distilled vinegar with 4 or 5 parts warm water. Gently scrub the stand using the solution and a soft cloth. Thoroughly rinse the unit. Use a soft, lint-free cloth to dry the unit or allow it to air dry.

EXPOSURE: Over time, sunlight and weather elements may degrade and change the color of this product. Exposure to moisture may also cause hardware to rust. Manufacturer is not liable for damage caused by exposure to weather elements.

Periodically check all bolts and tighten as necessary.

MAINTENANCE: During winter & freezing temperatures, move unit to a dry, indoor location. Cover unit to prevent dust build-up.

SCRATCHES: The powder coating is tough and durable but, even under normal use, some scratching is inevitable. Scratches can be repaired with rust-resistant paint (not included).

WARNING: THE ONE-YEAR WARRANTY DOES NOT COVER DAMAGES OR DEFECTS CAUSED BY THE APPLICATION OF CHEMICAL TREATMENTS, PROTECTIVE COATINGS, TOUCH-UP PAINT, OR CLEANING PRODUCTS.

SAFETY STATEMENTS & WARNINGS

- Ensure all fittings are tight before use. Periodically check fittings to ensure they remain tight.
- Only use this unit on a flat, level surface.
- Do not exceed the capacity of the unit.
- Never sit, stand, or climb on the unit.
- Never use chemical cleaning products or polishes as doing so may damage the finish.

Any modification to the product or failure to follow recommended care will void the product warranty.

If you experience issues with assembly or the product was damaged during shipping, please contact our customer service team through one of the methods mentioned at the top of page 1. Please have the item number and order information ready to expedite response time.

WARNING:

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.