



Purchase Date: \_\_\_\_ / \_\_\_\_ / \_\_\_\_ Order/Customer Reference Number: \_\_\_\_\_


Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products will be sent at our discretion within the 1-year warranty period. Proof of purchase, with the date of purchase as well as photos of the merchandise defect, must be provided. Photos are used to determine the cause of defects and for future quality control. Register your warranty at <https://tiny.cc/SunnydazeWarranty>. If you have any questions, comments or concerns, feel free to contact us by phone at 833-982-1977, by email: [customerservice@sunnydazedecor.com](mailto:customerservice@sunnydazedecor.com), or via our contact us page at <https://tiny.cc/SunnydazeContact>

# HOLIDAY GLOW PRE-LIT ARTIFICIAL CHRISTMAS TREE LSR-655

Read this manual carefully before use and save it for future reference. Save the box for storage.

## SHAPING

Top View

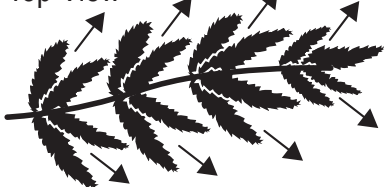

Side View



The fullness of your tree will depend upon the amount of time spent shaping it. The more time spent shaping the tree, the more realistic it will look. "Fluff" the branches and tips starting from the bottom.


Start with tips closest to the pole. Gently pull the individual tips upward and outward in a staggered pattern; one to the right, one to the left, one to the center. Stagger the tips, so they offset from the previous tips.

Curling some of the tips slightly upward is recommended to give the best support for hanging decorations.


After shaping the entire tree, step back to see if any branches or tips need to be reshaped to help fill gaps. Decorations will also help fill slight gaps. Decorations are not included.

## INSTALLING BATTERIES

**REQUIRES (4) 'AA' BATTERIES  
(BATTERIES NOT INCLUDED)**

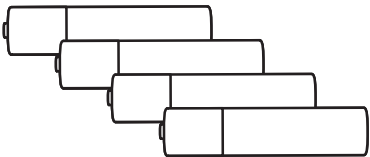

**TIP:** Use quality batteries for maximum illumination time; low-quality batteries will need to be replaced more frequently.

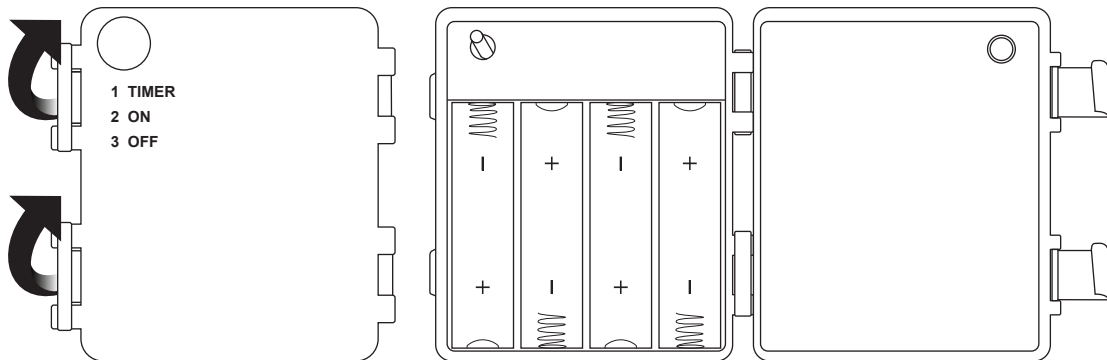

- Release the latches on the side of the battery box and flip the cover open.
- Paying attention to the positive and negative terminals, gently insert four 1.5-Volt 'AA' batteries (not included).
- Close the cover and engage the latches.

## OPERATION

- 1. TIMER:** Press the power button once to activate the timer function. When the timer function is on, the lights will illuminate for 6 hours then turn off automatically for 18 hours.
- 2. ON:** Press the power button a second time to turn the lights on. Lights will remain illuminated until the battery power has been expelled, or the unit is manually turned off.
- 3. OFF:** Pressing the power button a third time will turn the lights off.

# GENERAL USE & CARE

**SAFE USE:** For indoor use only. Only use on a flat, level surface. Avoid high-traffic areas such as locations where children and pets play. Keep the tree a safe distance away from all heat sources such as, but not limited to, heat vents, gas or electric heaters, fireplaces, candles, etc.

**EXPOSURE:** Over time, sunlight may degrade and change the color of the unit.

**CLEANING:** Clean the tree every couple of weeks to keep it dust-free.

**STORAGE:** This unit is not intended for permanent installation. When not in use, maintaining the product integrity by storing it as directed.

## Cleaning

**Do not use water, harmful additives, or abrasive materials to clean any part of this unit.**

- Ensure the power button is turned to the 'OFF' position before cleaning.
- Gently dust with a soft, dry cloth or a clean feather duster.

## Storage

1. Remove batteries from the battery box.
2. Remove all decorations.
3. Carefully place the unit in the original box and tape it shut.
4. Store in a cool, dry place away from sunlight. Note, exposure to excessive heat or humidity may damage the tree and/or lighting system.

## Troubleshooting

- Ensure the power button is turned to the 'ON' position.
- Make sure the batteries are installed correctly, observe polarity, and ensure contact is good.
- Install new batteries (not included). Do not mix old and new batteries.
- Do not use rechargeable batteries.
- Inspect the lights, wiring and battery box for signs of damage. If the lighting system is damaged, do not use.

## SAFETY STATEMENTS & WARNINGS

- Recommended for indoor use only; can be used in covered outdoor areas with limited exposure to elements.
- For decorative purposes only — this item is not a toy!
- Keep the tree a safe distance away from all heat sources such as, but not limited to, heat vents, gas or electric heaters, fireplaces, candles, etc.
- Remove batteries before the unit is stored or if it will not be used for long periods of time.
- Promptly remove expelled batteries. Do not mix old and new batteries. Mixing batteries could cause leakage of the acid inside batteries, damaging the unit.
- Do not use rechargeable batteries.
- LED lights are not replaceable.
- Do not use the lights if there are signs of damage to the bulbs, wiring or battery box.
- Supervise children and pets at all times. Pulling or climbing on the tree may cause it to tip over.

**Any modification to the product or failure to follow recommended care will void the product warranty.**

## WARNING!

**Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.**