Redmond / Mansfield / Stanwick

Medium Storage Cabinet

Model # AXCRED15-BL



brooklyn + max





It's time to register your product warranty.

It's quick and easy. And you'll be happy you did.



- ✓ Activate your **1-year** warranty
- ✓ Automatic entry to win a \$500 gift certificate
- ✓ Earn instant rewards and save



 
simpli-home.com/product-registration

Review your product and collect rewards!

Thank you for your purchase! We hope you enjoy it. We'd love your feedback. Please share a review and get instant rewards!










Share photos and get your cash back!



 Send us images or share them on social and qualify for instant rewards. You may even receive store credit on your entire purchase!





simpli-home.com/share-images

For Fastest Customer Service:



- 1. Open your phone's camera.
- 2. Point your phone's camera at the QR code to scan.
- 3. Click on the pop up.
- 4. You'll be taken to our customer service page.
- 5. Fill the form with your order information and issue.
- 6. Submit form.
- 7. A customer service associate will contact you.

Other ways to contact us...



Email Us

customer service@simpli-home.com



Visit Us

Visit our site directly at www.simpli-home.com



Call Us

1-866-518-0120 Monday to Friday 9am to 5pm EST

*If you've purchased from a retailer and you wish to return the product, please contact the retailer directly.

IMPORTANT: Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

Safety Information

CAUTION: Injuries and damage can occur from furniture tip over if product is not properly anchored to the wall. Use the Furniture Anti-Tipping Restraint provided with the product. Consult our assembly instructions for help.

If the Furniture Anti-Tipping Restraint kit is not in the box, please contact our customer service department in order to obtain another kit before using the furniture.

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all of the parts and hardware required. Hardware package may have spare parts.

WARNING: This item contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets. We recommend that you assemble this unit on a carpeted floor to avoid scratches. If using power tools, set the tool to low torque to avoid damage.

May require 2 people for ease of assembly.

Care & Maintenance

This furniture is designed for indoor use.

Perhaps the greatest environmental damage to wood furniture comes from wide swings in relative humidity (RH) in our homes. Wood absorbs and desorbs water as relative humidity rises and falls, and in doing so it swells and shrinks. Making matters worse, it expands and contracts unequally along different grain directions. As humidity changes, the components of wooden objects are continually pushing and pulling against each other. This pressure often results in parts of furniture no longer fitting together closely or becoming distorted or breaking from their own internal stresses.

The response to relative humidity changes begins with determining the annual average RH for your particular space. Then try to keep the RH in the space where your furniture is as close to that average as possible, generally within about 10% up or down. De-humidify in the summer and humidify in the winter.


Be aware that raising the temperature lowers the humidity and vice versa. Thus, modern heating systems, which can drive down interior RH in the winter, almost invariably cause problems for furniture. To counteract their effect, you can either modify the RH by keeping furniture containing spaces cooler in the winter or most importantly, have a good working humidifier for your home. A humidistat automatically works to balance the humidity in your home so it is constant. Dry indoor air can suck enough moisture from its surroundings to do permanent damage to wood, causing it to crack or split.

Remember, that not all woods are created equal. Two factors that help determine how rapidly a wood will lose moisture are pore size and surface hardness. A piece made from a dense and hard wood will dry less rapidly than pieces made from softer woods.

Furniture that is sealed and lacquered will lose moisture more slowly than an unfinished piece while pieces with veneer finishes are not only stronger but lose moisture more slowly than other finishes.

To help protect your wood furniture, take these steps:

- Use a humidifier, preferably one with an automatic control system that can sense the humidity level and adjust itself accordingly
- Don't over-humidify; that can damage wood by causing it to expand and contract
- Keep furniture out of direct sunlight, which can cause it to dry out, crack and warp
- If you can avoid it, don't put furniture near heating vents; if you can't, keep the item 3 to 4 inches away from the wall, giving the heat and air space to circulate
- Dust with soft dry cloth
- Do not use liquid or aerosol products
- To avoid marking, do not place rubber on surface (foot pads, etc.)
- For soil build-up, wipe with damp cloth & dry
- Do not use abrasive cleaners

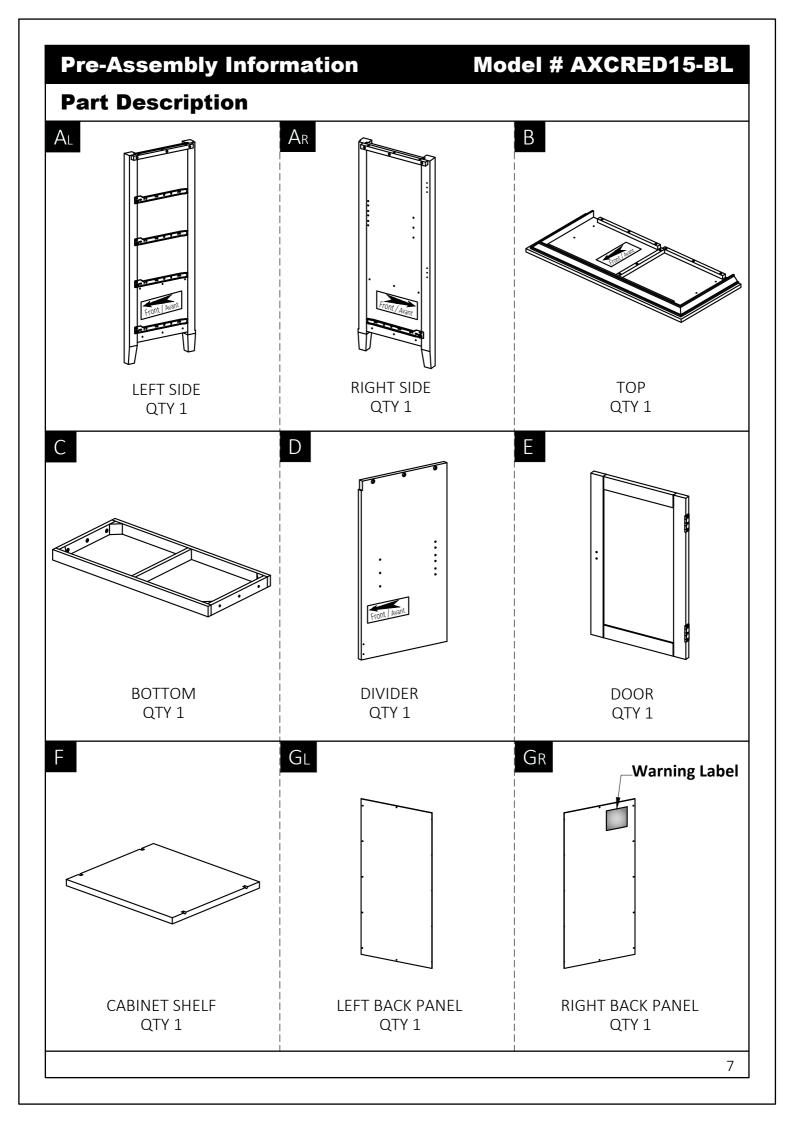


Model # AXCRED15-BL **Pre-Assembly Information Part Description** Н TOP SHELF LARGE DRAWER FRONT SMALL DRAWER FRONT QTY 1 QTY 1 QTY 3 K_R KL LEFT DRAWER SIDE RIGHT DRAWER SIDE SMALL DRAWER BACK QTY 4 QTY 4 QTY 3 M LARGE DRAWER BACK SMALL DRAWER BOTTOM LARGE DRAWER BOTTOM QTY 1 QTY 3 QTY 1 DRAWER BOTTOM SUPPORT QTY 1


Model # AXCRED15-BL Pre-Assembly Information Hardware Description ALLEN KEY SCREW M6 X 30mm ALLEN KEY SHELF SUPPORT **QTY 34** QTY 1 QTY 6 5 6 4 PHILLIPS SCREW PHILLIPS SCREW PHILLIPS SCREW **ROUND HEAD** M3 X 12mm M3 X 15mm M4 X 15mm QTY 6 QTY 4 QTY 19 **CAM LOCK PIN HANDLE CAM LOCK** MAGNET AND PLATE M4 X 22mm QTY 23 SETS QTY 1 SET QTY 1 SET 10 11 12 M4 X 25mm - QTY 2 (1 is extra) b. **I** M4 X 15mm - QTY 1 c. M4 X 25mm - QTY 1 PHILLIPS SCREW **HANDLE** M4 X 10mm M4 X 30mm FURNITURE TIP OVER RESTRAINT QTY 5 SETS QTY 2 QTY 1 SET Required -Flathead screwdiver Phillips screwdriver **Not Included**

Components - Key Diagram

Model # AXCRED15-BL

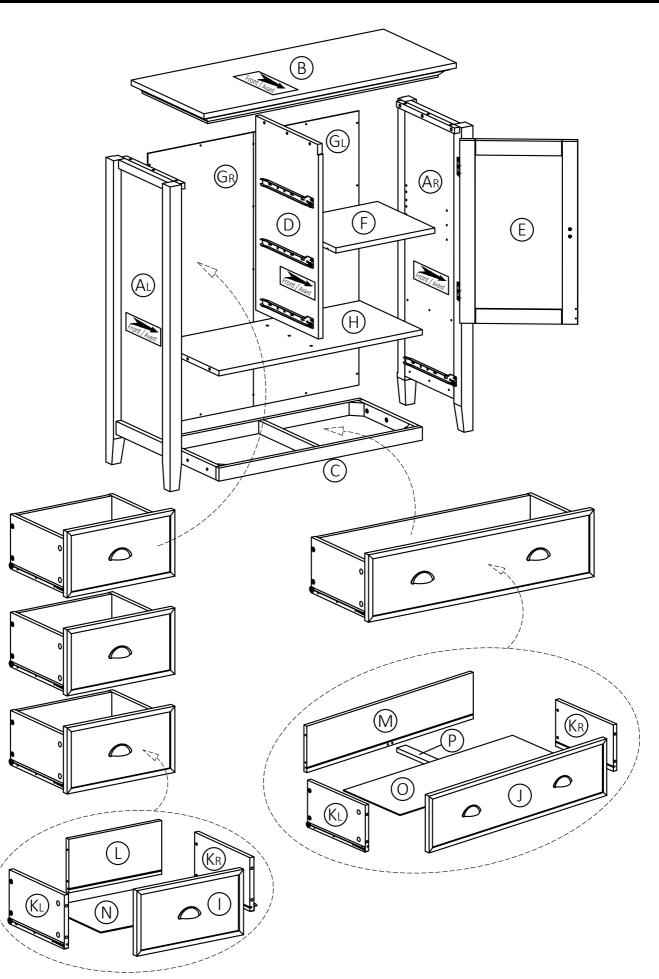


Step 1

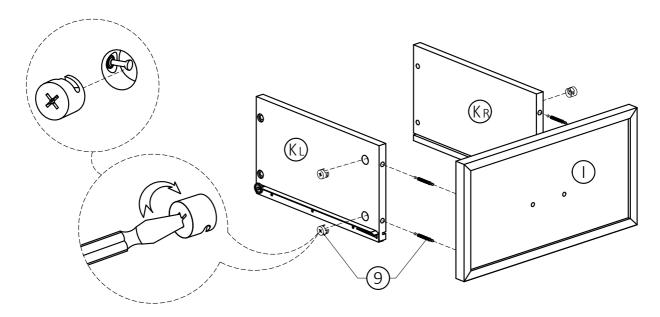


- 1. Attach four Cam Lock Pins (9) to back of Small Drawer Front (1).
- 2. Align Cam Lock Pins with pre-drilled holes and attach Drawer Sides (KL), (KR).
- 3. Insert two Cam Lock (9) into pre-drilled holes on each Drawer Side (KL), (KR).
- 4. Use flathead screwdriver to secure Cam Locks.

Step 2

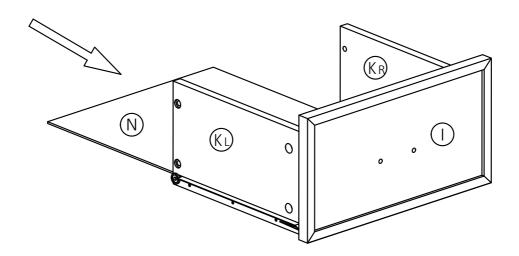


1. Slide Small Drawer Bottom (N) firmly into slots on Drawer Sides (CL), (CR) and Small Drawer Front (T).



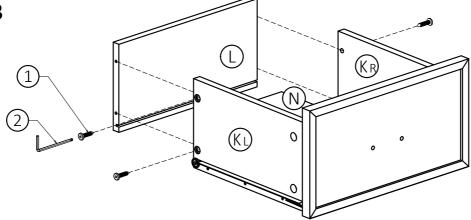

- 1. Align Small Drawer Back(L)with Small Drawer Bottom (N) and press firmly into slot.
- 2. Attach Small Drawer Back(L) using two Allen Key Screws(1) through pre-drilled holes on each Side (KL), (KR).
- 3. Use Allen Key(2) to tighten Screws. Do not over-tighten.



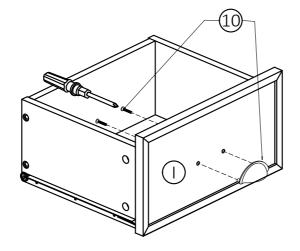





NOTE: The screwdriver is not included in the hardware pack.

1. Use phillips screwdriver to attach Handle (10) to Small Drawer Front (1).

Repeat Step 1 - 4 for the remaining drawers.

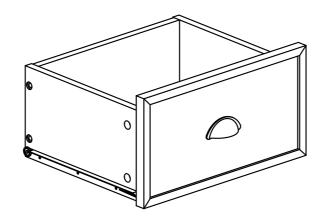


Model # AXCRED15-BL

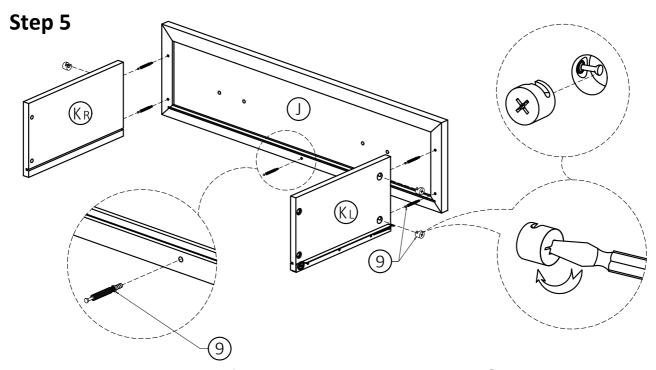


- 1. Attach five Cam Lock Pins (9) to back of Large Drawer Front (1).
- 2. Align Cam Lock Pins with pre-drilled holes and attach Drawer Sides (L), (R).
- 3. Insert two Cam Lock(9) into pre-drilled holes on each Drawer Side (KD), (KR).
- 4. Use flathead screwdriver to secure Cam Locks.


Step 6

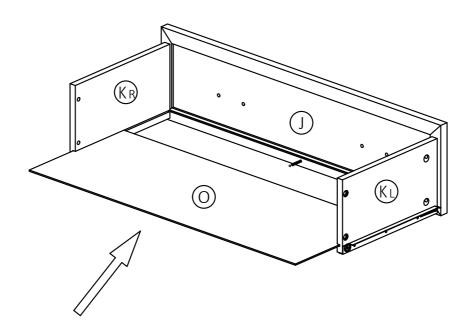

1. Slide Large Drawer Bottom O firmly into slots on Drawer Sides (L), (R) and Large Drawer Front (J).

 Step 7




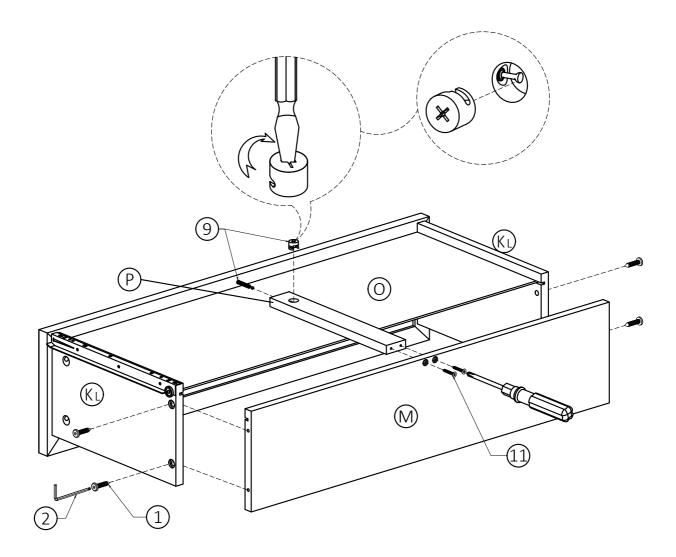


- 1. Align Cam Lock Pins with pre-drilled holes and attach Drawer Bottom Support (P).
- 2. Insert one Cam Lock (9) into pre-drilled holes on Drawer Bottom Support (P).
- 3. Use flathead screwdriver to secure Cam Locks.
- 4. Attach Large Drawer Back (M) to Drawer Bottom Support (P) using two Phillips screws (11).
- 5. Use Phillip Screwdriver to snugly tighten screw.
- 6. Align Large Drawer Back (M) with Large Drawer Bottom (O) and press firmly into slot.
- 7. Attach Large Drawer Back (M) using two Allen Key Screws (1) through pre-drilled holes on each Side (KL), (KR).
- 8. Use Allen Key (2) to tighten Screws. Do not over-tighten.

Step 8




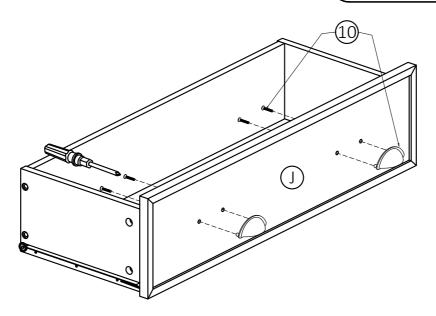


1. Use phillips screwdriver to attach two Handles 10 to Large Drawer Front 1.

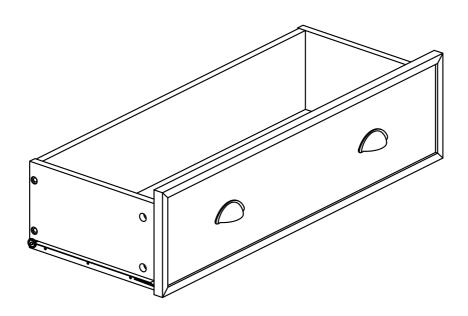

Model # AXCRED15-BL

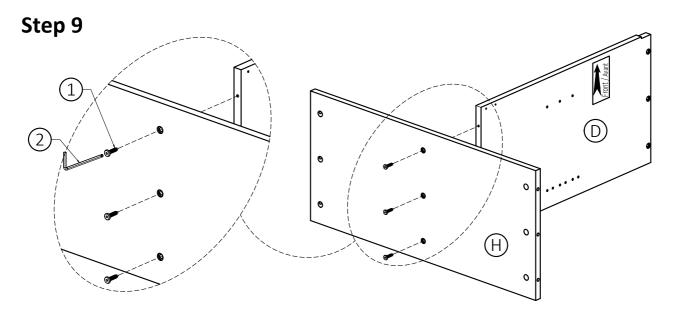


- 1. Attach Divider (D) to Top Shelf (H) using three Allen Key Screws (1).
- 2. Use Allen Key (2) to tighten. Do not over-tighten.

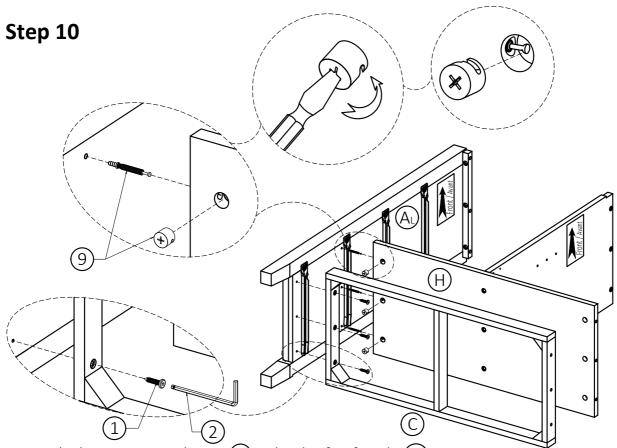


- 1. Attach three Cam Lock Pins (9) to back of Left Side (AL).
- 2. Align Cam Lock Pins with pre-drilled holes and attach Top Shelf (H).
- 3. Insert three Cam Lock 9 into pre-drilled holes on Top Shelf (H).
- 4. Use flathead screwdriver to secure Cam Locks.
- 5. Attach Bottom C to Left Side (A) using three Allen Key Screws 1.
- 6. Use Allen Key 2 to tighten Screws. Do not over-tighten.

Step 11

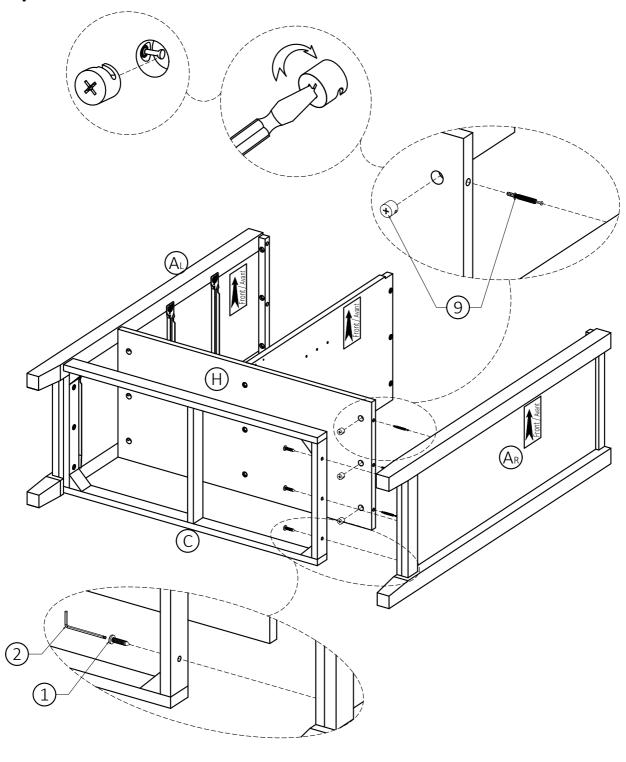

1. Repeat Step-10 for The Right Side (A_R) .

Step 12

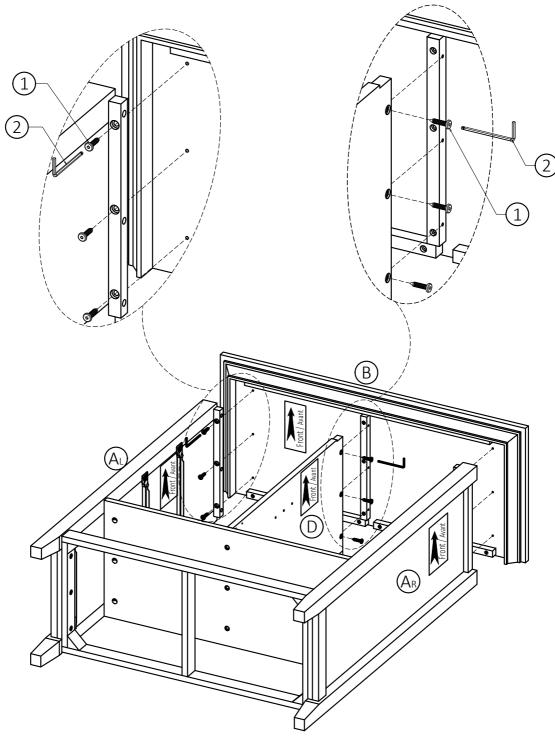

- 1. Attach Top B to Side A, A and Divider D using nine Allen Key Screws (1) (three screws on each Side and Divider).
- 2. Use Allen Key 2 to tighten screws. Do not over-tighten.


Step 13



NOTE: The screwdriver is not included in the hardware pack.




The back of the cabinet frame does not have pre-drilled holes to attach the back panels.

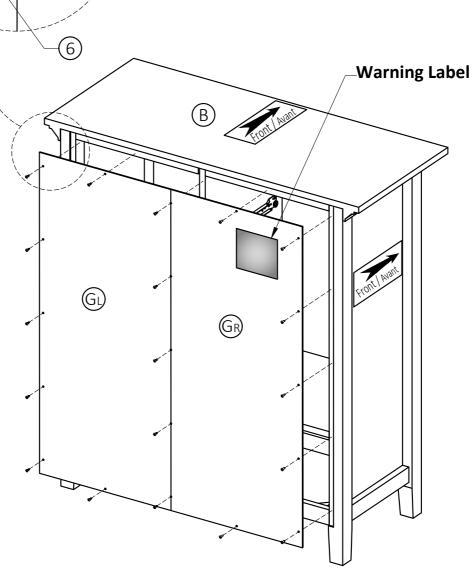


- 1. Attach Back Panels (GL), (GR) to back frame of cabinet using nineteen Phillips Screws Round Head (6) through pre-drilled holes.
- 2. Use Phillips Screwdriver to tighten screws.

Model # AXCRED15-BL

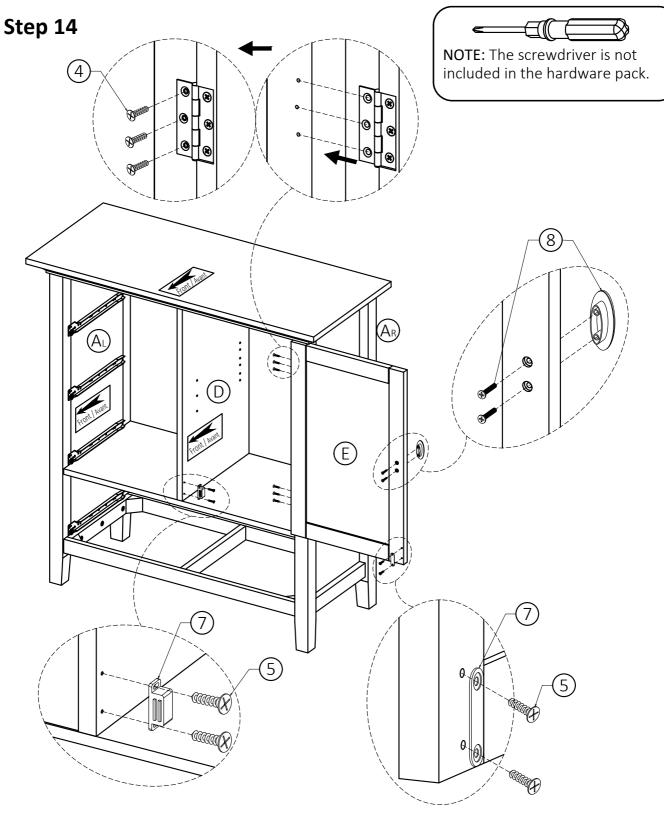

- 1. Attach hinges on Door (E) to Rihgt Side (AR) using Phillips Screws (4) into guide holes.
- 2. Attach Magnet Plates 7 to bottom corner of Door (E) using Phillips Screws (5) into guide holes on Door (E).
- 3. Attach Magnets 7 using Phillips Screws 5 into guide holes on Divider D.
- 4. Use Phillips screwdriver to snugly tighten screw.
- 5. Use Phillips screwdriver to attach Handle 8 to Door E.

Step 15

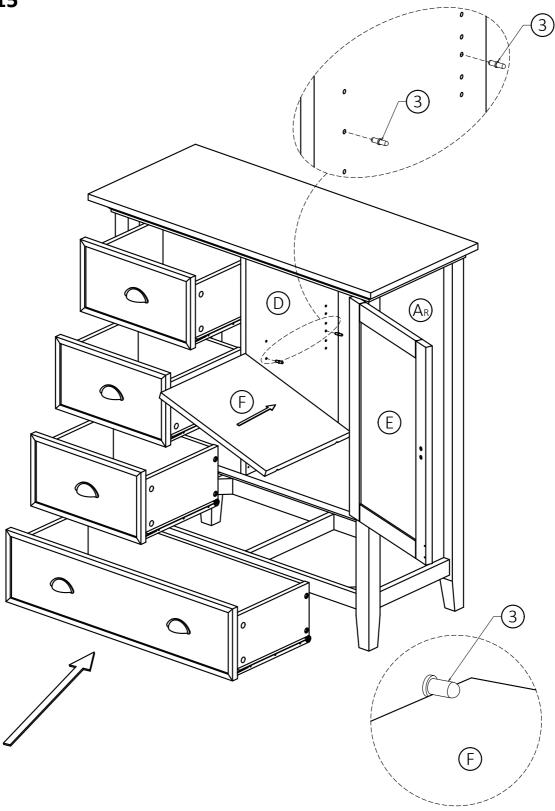

- 1. Use four Shelf Supports 3 for each Cabinet Shelf F in desired location.
- 2. Two Shelf Supports (3) may be used on back top of each Cabinet Shelf (F) as a tipping restraint.
- 3. Insert assembled drawer into glides on assembled medium storage.

 
Furniture Tip Over Restraint Assembly




WARNING

Serious or fatal crushing injuries can occur from furniture tip-over. If the furniture tip over restraint kit is not in the box, please contact our customer service department in order to obtain another kit before using the furniture.


Step 16



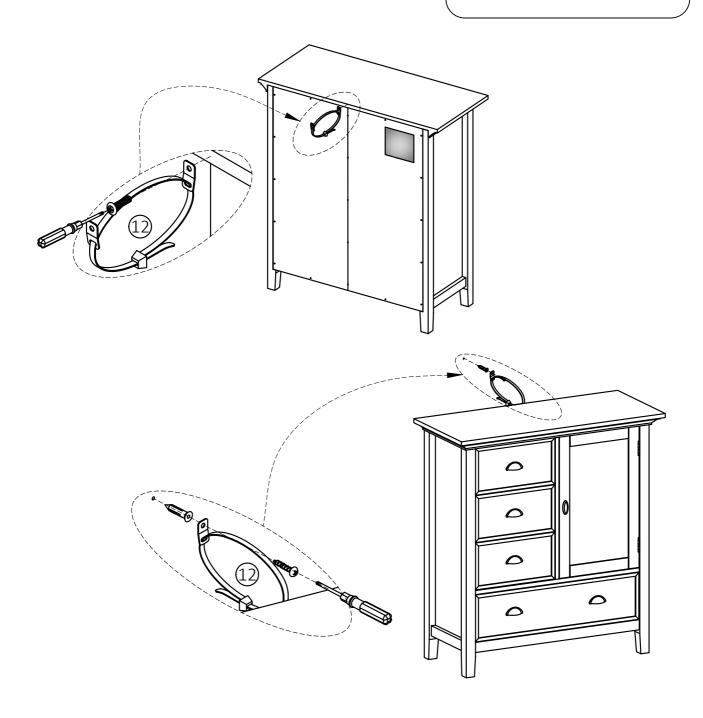


Furniture Anti-Tipping Restraint Instructions

 
1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the shorter screw.



2. Determine where furniture is to be placed and mark location on the wall for mounting bracket screw hole approximately 2 inches below the bracket mounted to the furniture.

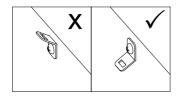

- 3. Drill a 3/16 inch hole in the wall. Press the plastic anchor into the hole and gently tap until the flange on the anchor is against the wall surface.
- 4. Position the bracket over the anchor and use the longer screw to securely attach the bracket to the wall.
- 5. Place the furniture so the back edge is in line with the bracket on the wall.
- 6. Lace an end of the nylon zip-tie strap down through each bracket. Bring both ends together and slide the smooth side upright through the square-shaped end and pull through to create the "locked" position.
- 7. Check to make sure the strap is securely laced and locked to the brackets.

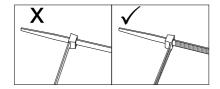

- DO NOT put a TV or other heavy objects on top of furniture not intended for use with a TV
- **DO NOT** place heavy objects in top drawers or on top shelves
- **DO NOT** let children climb or hang on drawers, doors or shelves