



KIDS OUTDOOR 5-PIECE DINING SET

THANK YOU!

We appreciate you for choosing WestinTrends!

Thank you for letting WestinTrends continue to offer accessible luxury trends, inspired by everyone!

JOIN THE WESTINTRENDS COMMUNITY

Sign up here:

https://westintrends.com/welcome



OUESTIONS OR COMMENTS?

If you have questions reach out to cs@westintrends.com

FOLLOW, SHARE, & LEARN













PRODUCT REGISTRATION

https://westintrends.com/apps/product-registration



TABLE OF CONTENTS

ASSEMBLY INSTRUCTIONS

Kids Outdoor 24" Dining Table	4
Kids Outdoor Dining Chair	8





KIDS OUTDOOR 24" DINING TABLE

(!) NOTICE

Please keep this instruction for your future reference.

- Be careful when assembling, avoid damaging the top surface.
- Clean this item with lukewarm water, mild detergent & soft cloth.
- Firmly secure all bolts before use, do not use any part of this item as a step ladder.
- Reconfirm that all bolts, screws, and nuts are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- Do not overtighten screws. (Insert all screws before tightening screws.)
- Please do not exceed the weight limitations of this item.

TOOLS REQUIRED







 


HARDWARE



PARTS










PRODUCT ASSEMBLY - OVERALL VIEW

Look at following overall view of this table and learn the exact position of each part to be assembled.

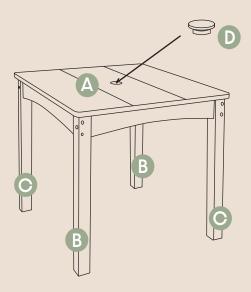


PRODUCT ASSEMBLY



Place Part A Table Top upside down on soft surface like carpet to avoid damage.

Attach Part B Leg I and Part C Leg II to the aprons of Part A Table Top as below with 6 pcs of Hardware #1 Screw.


Pay attention to match the holes in the aprons.

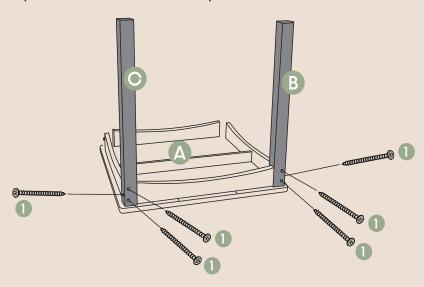

PRODUCT ASSEMBLY



Do the same to attach the Part B Leg I and Part C Leg II to the aprons of Part A Table Top with 6 pcs of Hardware #1 Screw.

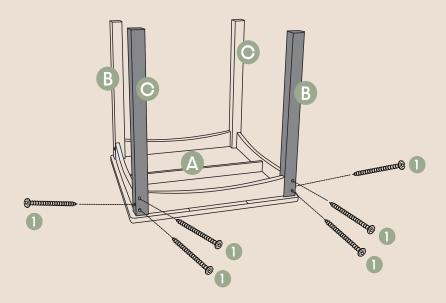

PRODUCT ASSEMBLY



Check and tighten all the bolts again to ensure the table is steady enough.

Remove the Umbrella Cover to assemble the umbrella pole.

Enjoy this table now.








KIDS OUTDOOR DINING CHAIR

(!) CARE & MAINTENANCE

2 PCS

Please keep this instruction for your future reference.


- Be careful when assembling, avoid damaging the top surface.
- Clean the table with lukewarm water, mild detergent & soft cloth.
- Firmly secure all bolts before use, do not use any part of this item as a step ladder.
- Reconfirm that all bolts, screws, and nuts are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- Do not overtighten screws. (Insert all screws before tightening screws.)
- Please do not exceed the weight limitations of this item.

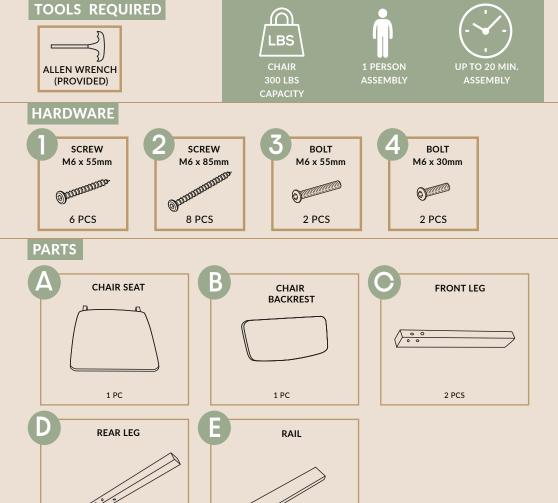

1 PC

PRODUCT ASSEMBLY - OVERALL VIEW

Look at following overall view of this chair and learn the exact position of each part to be assembled.

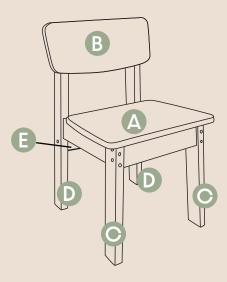


PRODUCT ASSEMBLY



Attach Part E Rail between both pcs of Part D Rear Legs with 2 pcs of Hardware #1 Screw.


Place Part B Chair Backrest on flat surface, attach the combined leg (Part D Rear Leg + Part E Rail) with 2 pcs of Hardware #3 Bolt and 2 pcs of Hardware #4 Bolt as below.

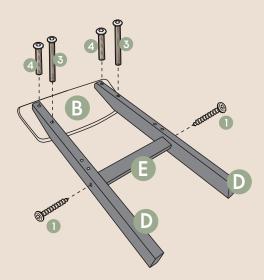

2

Place Part A chair Seat upside down on soft surface like carpet to avoid damage.


Attach 2 pcs of **Part C Front Legs** to the aprons of **Part A Chair Seat** with 4 pcs of **Hardware #1 Screw** and 4 pcs of **Hardware #2 Screw** as below.

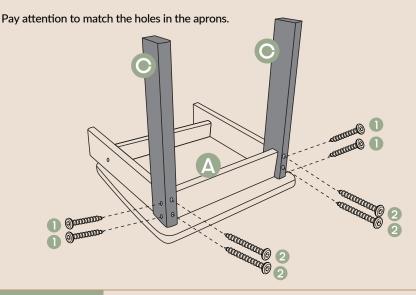

PRODUCT ASSEMBLY



Attach the combined part (Part B Chair Backrest + Part D Rail) to Part A Chair Seat with 4 pcs of Hardware 2 Screw.

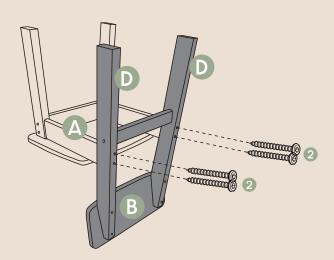

PRODUCT ASSEMBLY



Check and tighten all the bolts again to ensure the chair is steady enough.

Enjoy this chair now.



REGISTRATION & REFUND POLICY

https://westintrends.com/apps/product-registration



https://westintrends.com/policies/refund-policy



HAVING TROUBLE

• Not sure how to assemble or missing pieces?
Please contact our Customer Service Team for assistance at cs@westintrends.com

Have Order #. Part # or SKU ready to speed up customer service!

CLEANING TIPS

REGULAR CLEAN: Use a mixture of warm water and mild soap. Gently scrub the surface with a soft bristle brush to remove any dirt or stains.

QUICK CLEAN: You can simply wipe down the HDPE furniture with a damp cloth. The material's resilience makes it resistant to most spills and stains, ensuring a hassle-free maintenance routine.

Regular cleaning not only preserves the aesthetic appeal of your furniture but also helps extend its lifespan.

Pressure washer can be used for seriously deep-cleaning - DO NOT exceed 1500 PSI - this will remove and debris and dirt.