# ARBOR CREST DELUXE PLAYSET - F29110




3D-GUIDED INTERACTIVE ASSEMBLY INSTRUCTIONS CAN BE FOUND IN BILT DOWNLOAD THE FREE APP

LAS INSTRUCCIONES DE ENSAMBLAJE INTERACTIVO GUIADAS EN 3D SE PUEDEN ENCONTRAR EN BILT DESCARGA LA APLICACIÓN GRATUITA

LES INSTRUCTIONS D'ASSEMBLAGE INTERACTIF GUIDÉES EN 3D PEUVENT ÊTRE TROUVÉES EN BILT télécharger l'application gratuite

# **INSTALLATION AND OPERATING INSTRUCTIONS**

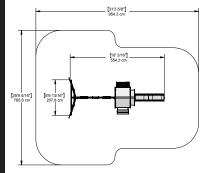

# 

Λ

To reduce the risk of serious injury or death, you must read and follow these instructions. Keep and refer to these instructions often and give them to any future owner of this play system. Manufacturer contact information provided below.

OBSTACLE FREE SAFETY ZONE - 31'3.6" x 25'9.3" (9.543m x 7.856m) area requires Protective Surfacing. See page 3. MAXIMUM VERTICAL FALL HEIGHT - 6' 3-5/8" (1.92m)

CAPACITY - 9 Users Maximum, Ages 3 to 10; Weight Limit 110 lbs. (49.9 kg) per child.

RESIDENTIAL HOME USE ONLY. Not intended for public areas such as schools, churches, nurseries, day cares or parks. WARNING. Only for domestic use.

FOR OUTDOOR FAMILY DOMESTIC USE ONLY



KidKraft, Inc. 4630 Olin Road Dallas, Texas 75244 USA customerservice@kidkraft.com canadacustomerservice@kidkraft.com 1.800.933.0771 972.385.0100 For online parts replacement visit https://parts.kidkraft.com/ KidKraft Netherlands BV Olympisch Stadion 8 1076 DE Amsterdam The Netherlands europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1) For online parts replacement visit https://parts.kidkraft.eu/

### **Table of Contents**

Warnings and Safe Play Instructionspg. 2
Instructions for Proper Maintenance pg. 4
About Our Wood – Limited Warranty pg. 5
Keys to Assembly Successpg. 7
Part ID
Step-By-Step Instructions
Installation of ID/Warning Plaquepg. 80

9409110

4 - 8 Hrs

Two person

assembly

### Warnings and Safe Play Instructions



**CONTINUOUS ADULT SUPERVISION REQUIRED.** Most serious injuries and deaths on playground equipment have occurred while children were unsupervised! Our products are designed to meet mandatory and voluntary safety standards. Complying with all warnings and recommendations in these instructions will reduce the risk of serious or fatal injury to children using this play system. Go over the warnings and safe play instructions regularly with your children and make certain that they understand and follow them. Remember on-site adult supervision is required for children of all ages.

# WARNING

#### SERIOUS HEAD INJURY HAZARD

Installation over concrete, asphalt, dirt, grass, carpet and other hard surface creates a risk of serious injury or death from falls to the ground. Install and maintain shock absorbing material under and around play-set as recommended on page 3 of these instructions.

#### **COLLISION HAZARD**

Place play-set on level ground at least 2m from any obstruction such as a garage or house, fences, poles, trees, sidewalks, walls, landscape timbers, rocks, pavement, planters, garden borders, overhanging branches, laundry lines, and electrical wires. (See OBSTACLE FREE SAFETY ZONE on cover)

#### **CHOKING HAZARD/SHARP EDGES & POINTS**

Adult assembly required. This product contains small parts and parts with sharp edges and points. Keep parts away from children until fully assembled.

#### WARNING LABEL

Owners shall be responsible for maintaining the legibility of the warning labels.

#### **STRANGULATION HAZARD**

- NEVER allow children to play with ropes, clotheslines, pet leashes, cables, chains or cord-like items when using this play-set or to attach these items to play-set.
- NEVER allow children to wear loose fitting clothing, ponchos, hoods, scarves, capes, necklaces, items with draw-strings, cords or ties when using this play-set.
- NEVER allow children to wear bike or sport helmets when using this play-set.

Failure to prohibit these items, even helmets with chin straps, increases the risk of serious injury and death to children from entanglement and strangulation.

#### **TIP OVER HAZARD**

Choose a level location for the equipment. This can reduce the likelihood of the play set tipping over and loose-fill surfacing materials washing away during heavy rains.

DO NOT allow children to play on the play-set until the assembly is complete and the unit is properly anchored.

Never add extra length to chain or rope. The chains or ropes provided are the maximum length designed for the swinging element(s).

# WARNING – Safe Play Instructions

- ✓ Observe capacity limitations of your play-set. See front cover.
- ✓ Dress children with well fitting and full foot enclosing footwear.
- Teach children to sit with their full weight in the center of the swing seat to prevent erratic swing motion or falling off.
- Check for splintered, broken or cracked wood; missing, loose, or sharp edged hardware. Replace, tighten and or sand smooth as required prior to playing.
- ✓ Verify that suspended climbing ropes, rope ladders, chain or cable are secured at both ends and cannot be looped back on itself as to create an entanglement hazard.
- On sunny and or hot days, check the slide and other plastic rides to assure that they are not very hot as to cause burns. Cool hot slide and rides with water and wipe dry prior to using.
- ✓ Orientate slide such that it gets the least amount of exposure to the sun.

- ➤ Do not allow children to wear open toe or heel footwear like sandals, flip-flops or clogs.
- Do not allow children to walk, in front, between, behind or close to moving rides.
- Do not let children twist swing chains or ropes or loop them over the top support bar. This may reduce the strength of the chain or rope and cause premature failure.
- ✗ Do not let children get off rides while they are in motion.
- **X** Do not permit climbing on equipment when it is wet.
- Do not permit rough play or use of equipment in a manner for which it was not intended. Standing on or jumping from the roof, elevated platforms, swings, climbers, ladders or slide can be dangerous.
- ✗ Do not allow children to swing empty rides or seats. ▮
- Do not allow children to go down slide head first or run up slide.

## A Protective Surfacing - Reducing Risk of Serious Head Injury From Falls

One of the most important things you can do to reduce the likelihood of serious head injuries is to install shock-absorbing protective surfacing under and around your play equipment. The protective surfacing should be applied to a depth that is suitable for the equipment height in accordance with ASTM F1292. There are different types of surfacing to choose from; whichever product you select, follow these guidelines:

#### Loose-Fill Materials

- Maintain a minimum depth of 9 inches (23 cm) of loose-fill materials such as wood mulch/chips, engineered wood fiber (EWF), or shredded/recycled rubber mulch for equipment up to 8 feet (2,45 m) high; and 9 inches (23 cm) of sand or pea gravel for equipment up to 5 feet (1,5 m) high. NOTE: An initial fill level of 12 inches (31 cm) will compress to about a 9-inch (23 cm) depth of surfacing over time. The surfacing will also compact, displace, and settle, and should be periodically raked and refilled to maintain at least a 9-inch (23 cm) depth.
- Use a minimum of 6 inches (16 cm) of protective surfacing for play equipment less than 4 feet (1,22 m) in height. If maintained properly, this should be adequate. (At depths less than 6 inches (16 cm), the protective material is too easily displaced or compacted.)

NOTE: Do not install home playground equipment over concrete, asphalt, or any other hard surface. A fall onto a hard surface can result in serious injury to the equipment user. Grass and dirt are not considered protective surfacing because wear and environmental factors can reduce their shock absorbing effectiveness. Carpeting and thin mats are not adequate protective surfacing. Ground level equipment -- such as a sandbox, activity wall, playhouse or other equipment that has no elevated play surface -- does not need any protective surfacing.

- Use containment, such as digging out around the perimeter and/or lining the perimeter with landscape edging. Don't forget to account for water drainage.
- Periodically rake, check and maintain the depth of the loose-fill surfacing material. Marking the correct depth on the play equipment support posts will help you to see when the material has settled and needs to be raked and or replenished. Be sure to rake and evenly redistribute the surfacing in heavily used areas.
- Do not install loose fill surfacing over hard surfaces such as concrete or asphalt.


#### Poured-In-Place Surfaces or Pre-Manufactured Rubber Tiles

- You may be interested in using surfacing other than loose-fill materials like rubber tiles or poured-in-place surfaces.
- Installations of these surfaces generally require a professional and are not "do-it yourself" projects.
- Review surface specifications before purchasing this type of surfacing. Ask the installer/manufacturer for a report showing that the product has been tested to the following safety standard: ASTM F1292 *Standard Specification for Impact Attenuation of Surfacing Materials within the Use Zone of Playground Equipment*. This report should show the specific height for which the surface is intended to protect against serious head injury. This height should be equal to or greater than the fall height vertical distance between a designated play surface (*elevated surface for standing, sitting, or climbing*) and the protective surfacing below of your play equipment.
- Check the protective surfacing frequently for wear.

#### Placement

Proper placement and maintenance of protective surfacing is essential. Refer to diagram on front cover. Be sure to;

- Extend surfacing at least 6 feet (1,8 m) from the equipment in all directions.
- For to-fro swings, extend protective surfacing in front of and behind the swing to a distance equal to twice the height of the top bar from which the swing is suspended.
- For tire swings, extend surfacing in a circle whose radius is equal to the height of the suspending chain or rope, plus 6 feet (1,8 m) in all directions.

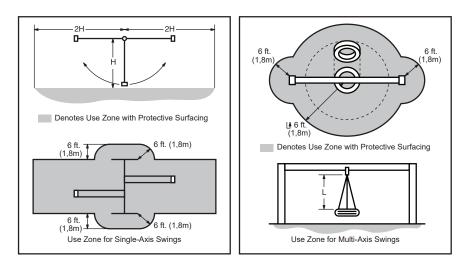


From the CPSC Outdoor Home Playground Safety Handbook. At http://www.playgroundregs.com/resources/CPSC%20324.pdf

## Instructions for Proper Maintenance

Your KidKraft Play System is designed and constructed of quality materials with your child's safety in mind. As with all outdoor products used by children, it will weather and wear. To maximize the enjoyment, safety and life of your Play Set, it is important that you, the owner, properly maintain it.

#### Check the following at the beginning of the play season:

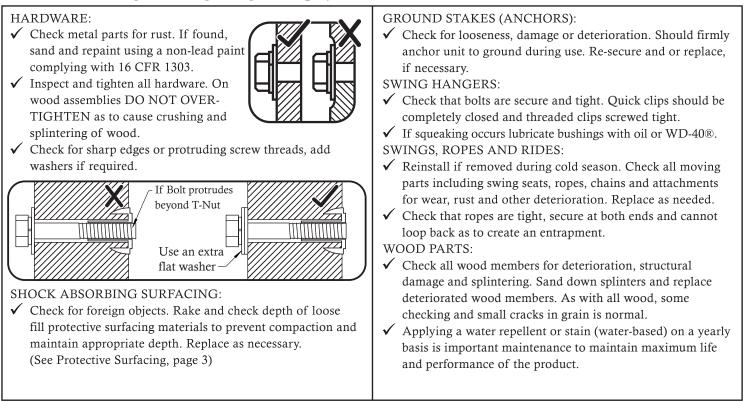

#### Check twice a month during play season:

HARDWARE:		SHOCK ABSORBING SURFACING:		
	Inspect for tightness. Must be firmly against, but not crushing the wood. DO NOT OVER-TIGHTEN. This will cause splintering of wood. Check for sharp edges or protruding screw threads. Add washers if required.	<ul> <li>Rake and check depth of loose fill protective surfacing materials to prevent compaction and maintain appropriate depth. Replace as necessary. (See Protective Surfacing, page 3)</li> </ul>		

#### Check once a month during play season:

<ul> <li>SWING HANGERS:</li> <li>✓ Check that they are secure and orientated correctly. Hook should rotate freely and perpendicular to support beam.</li> </ul>	<ul> <li>SWINGS AND RIDES:</li> <li>✓ Check swing seats, all ropes, chains and attachments for fraying, wear, excessive corrosion or damage.</li> </ul>
$\checkmark$ If squeaking occurs lubricate bushings with oil or WD-40 <sup>®</sup> .	Replace if structurally damaged or deteriorated.

#### Check at the end of the play season:

<ul> <li>SWINGS AND RIDES:</li> <li>✓ To prolong their life, remove swings and store inside when outside temperature is below 32°F/0°C. Below freezing, plastic parts may become more brittle.</li> </ul>	<ul> <li>SHOCK ABSORBING SURFACING:</li> <li>✓ Rake and check depth of loose fill protective surfacing materials to prevent compaction and maintain appropriate depth. Replace as necessary. (See Protective Surfacing, page 3)</li> </ul>
---	--

If you dispose of your play set: Please disassemble and dispose of your unit so that it does not create any unreasonable hazards at the time it is discarded. Be sure to follow your local waste ordinances.

### About Our Wood

KidKraft Premium Play Systems uses only premium playset lumber, ensuring the safest product for your children's use. Although we take great care in selecting the best quality lumber available, wood is still a product of nature and susceptible to weathering which can change the appearance of your set.

#### What causes weathering? Does it affect the strength of my Play System?

One of the main reasons for weathering is the effects of water (moisture); the moisture content of the wood at the surface is different than the interior of the wood. As the climate changes, moisture moves in or out of the wood, causing tension which can result in checking and or warping. You can expect the following due to weathering. These changes will not affect the strength of the product:

1. **Checking** is surface cracks in the wood along the grain. A post  $(4^{\circ} \times 4^{\circ})$  will experience more checking than a board  $(1^{\circ} \times 4^{\circ})$  because the surface and interior moisture content will vary more widely than in thinner wood.

2. **Warping** results from any distortion (twisting, cupping) from the original plane of the board and often happens from rapid wetting and drying of the wood.

3. **Fading** happens as a natural change in the wood color as it is exposed to sun-light and will turn a grey over time.

#### How can I reduce the amount of weathering to my Play System?

At the factory we have coated the wood with a water repellent or stain. This coating decreases the amount of water absorption during rain or snow thus decreasing the tension in the wood. Sunlight will break down the coating, so we recommend applying a water repellent or stain on a yearly basis (see your local stain and paint supplier for a recommended product).

Most weathering is just the normal result of nature and will not affect safe play and enjoyment for your child. However if you are concerned that a part has experienced a severe weathering problem please call our consumer relations department for further assistance.

Complete and mail registration card to receive important product notifications and assure prompt warranty service.

### KidKraft Limited Warranty

#### **MISSING OR DAMAGED PARTS:**

KidKraft will replace any parts within 90 days from date of purchase found to be missing from or damaged in the original packaging. See Fig.1

Fig. 1Product Age (All Parts)Consur0-90 Days from date of purchase\$0 for F

<u>Consumer Pays</u> \$0 for Part + Free Shipping

#### DEFECTS IN MATERIAL AND WORKMANSHIP:

KidKraft warrants that this product is free from defects in materials and workmanship for a period of one (1) year from the original date of purchase (dated sales receipt and/or product registration is required). This one (1) year warranty covers all parts including wood, hardware, and all accessories (Such as swings, rides, and slides). See Fig. 2

Fig. 2	Product Age (All Parts)	<u>Consumer Pays</u>
C	91 Days to 1 Year	\$0 for Part + Free Shipping

#### WOOD ROT, DECAY, AND INSECT DAMAGE:

All wood carries a five (5) year warranty against rot, decay, and insect damage (dated sales receipt and/or product registration is required). Refer to the schedule below for charges associated with replacement of wood parts under this **Limited Warranty.** See Fig. 3

Fig. 3	Product Age (Wood Parts)	<u>Consumer Pays</u>
-	0 Days to 1 Year	\$0 for Part + Free Shipping
	After 1 Year to 5 Year	\$0 for Part + Shipping & Handling
	Over 5 Years	100% for Part (if available) + Shipping & Handling

This warranty applies to the original owner and registrant and is non-transferable. Regular maintenance is required to ensure the integrity of this product. Failure by the owner to maintain the product according to the maintenance requirements may void this warranty.

This Limited Warranty does NOT cover:

- Any inspection cost
- Labor and/or costs for replacement of any defective item(s), including but not limited to, professional installer costs
- Incidental or consequential damages, including but not limited to, as a result of set relocation, move and/or reinstall
- Cosmetic defects which do not affect performance or integrity of a part or the entire product
- Vandalism, improper use or installation, or acts of nature, including but not limited to, high winds, fire, and flood
- Minor twisting, warping, checking, or any natural occurring properties of wood that do not affect performance or integrity.
- Any KidKraft product purchased, including but not limited to, a non-approved retailer, auction houses, second-hand, and as-is clearance items.

KidKraft products have been designed for safety and quality. Modifications made to the original product may damage the structural integrity of the unit leading to failure and possible injury. KidKraft cannot assume any responsibility for the modified products. Furthermore, modifications void all warranties.

This product is warranted for **RESIDENTIAL USE ONLY.** Under no circumstance should a KidKraft product be used in public settings such as schools, churches, playgrounds, parks, home and professional day cares and the like. Such use may lead to product failure and potential injury. Public use will void this warranty. KidKraft disclaims all other representations and warranties of any kind, express or implied.

#### **Tools Required**

### Keys to Assembly Success

• Tape Measure• #1 Phillips, #2 Robertson<br/>and Screwdriver• Open End Wrench<br/>(1/2" & 9/16")• 3/16" Hex Key<br/>• 8' Step Ladder

• Ratchet with extension

(1/2" & 9/16" sockets)


- Carpenters Square
- Claw Hammer
- Standard or Cordless Drill
- Rubber Mallet

 
Part Identification Key

On each page, you will find the parts and quantities required to complete the assembly step illustrated on that page. Here is a sample.

#### Symbols

Throughout these instructions symbols are provided as important reminders for proper and safe assembly.

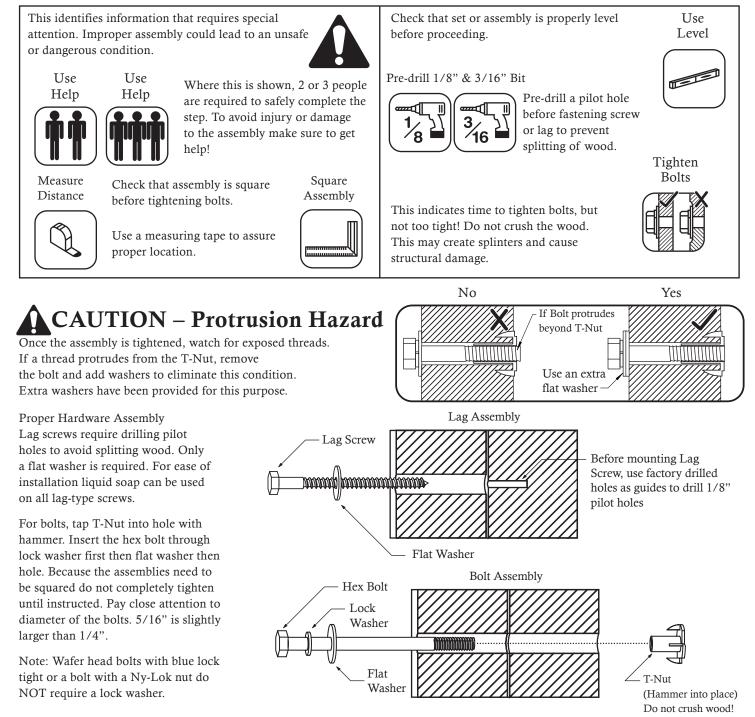




· Adjustable Wrench


• 1/8" & 3/16" Drill Bits

• Safety Glasses


• Adult Helpers

• Pencil

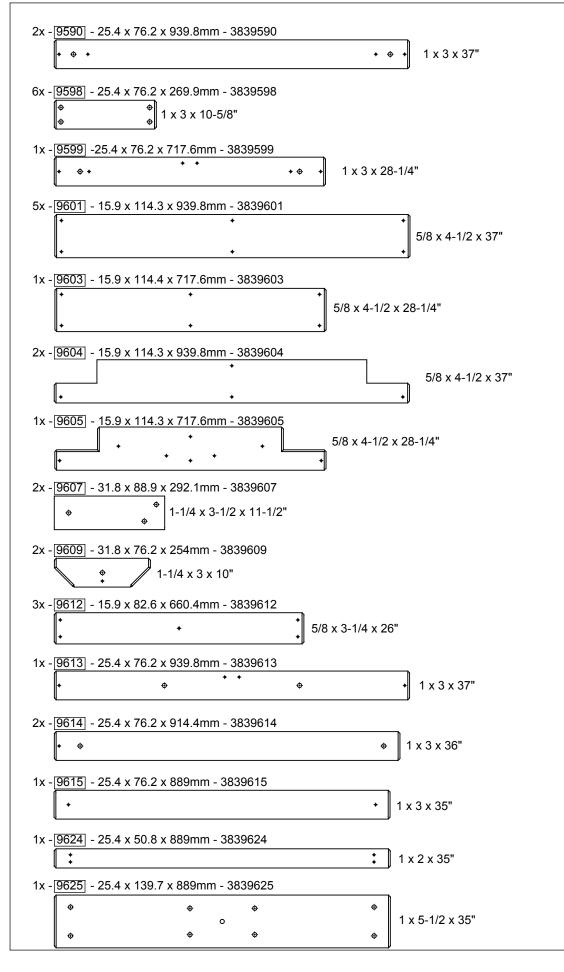


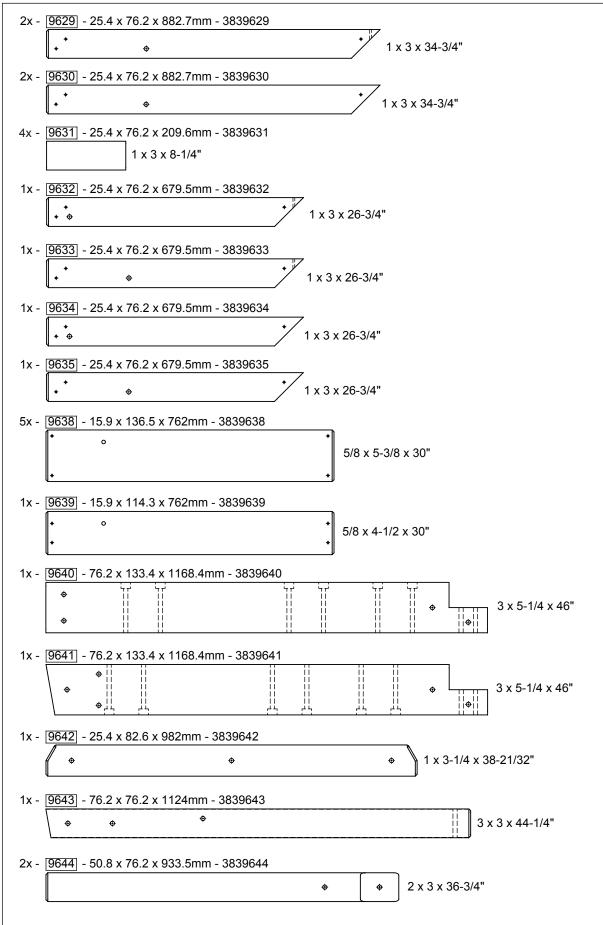


2x - 9645] - 50.8 x 76.2 x 1174.8mm - 3839645
* * * * 2 x 3 x 46-1/4"
2x - 9646 - 25.4 x 101.6 x 1073.2mm - 3839646
<ul> <li> ♦ ● </li> <li> ♦ ● </li> <li> ↑ 1 x 4 x 42-1/4" </li> </ul>
6x - 9647 - 31.8 x 76.2 x 419.1mm - 3839647
2x - 9648] - 31.8 x 76.2 x 395.2mm - 3839648 + 1-1/4 x 3 x 15-9/16"
1x - 9655 - 25.4 x 76.2 x 863.6mm - 3839655
2x - [9656] - 34.9 x 85.7 x 1092.2mm - 3839656
1-3/8 x 3-3/8 x 43"
2x - 9657 - 34.9 x 85.7 x 1092.2mm - 3839657
1-3/8 x 3-3/8 x 43"
2x - 9658 - 34.9 x 85.7 x 1181.1mm - 3839658
◆ ◆ 1-3/8 x 3-3/8 x 46-1/2"
1x - [9659] - 34.9 x 85.7 x 1181.1mm - 3839659
<ul> <li>♦ ♦ ♦ ♦</li> <li>♦ 1-3/8 x 3-3/8 x 46-1/2"</li> </ul>
1x - 9661 - 34.9 x 85.7 x 1181.1mm - 3839661
<ul> <li>♦</li> <li>♦</li></ul>
2x - 9662 - 34.9 x 85.7 x 889mm - 3839662
2x - 9663 - 25.4 x 76.2 x 406.4mm - 3839663
1x - 9664 - 25.4 x 76.2 x 863.6mm - 3839664
$ \begin{array}{c} \diamond \\ \diamond \\ \end{array} \\ \bullet \end{array} $
1x - 9665 - 25.4 x 76.2 x 863.6mm - 3839665
$ \begin{array}{c} \diamond & * & & & * & \diamond \\ \diamond & * & & & & & \\ \diamond & * & & & & & \\ \end{array} 1 x 3 x 34" $
6x - 9666 - 15.9 x 76.2 x 619.1mm - 3839666
* * 5/8 x 3 x 24-3/8"

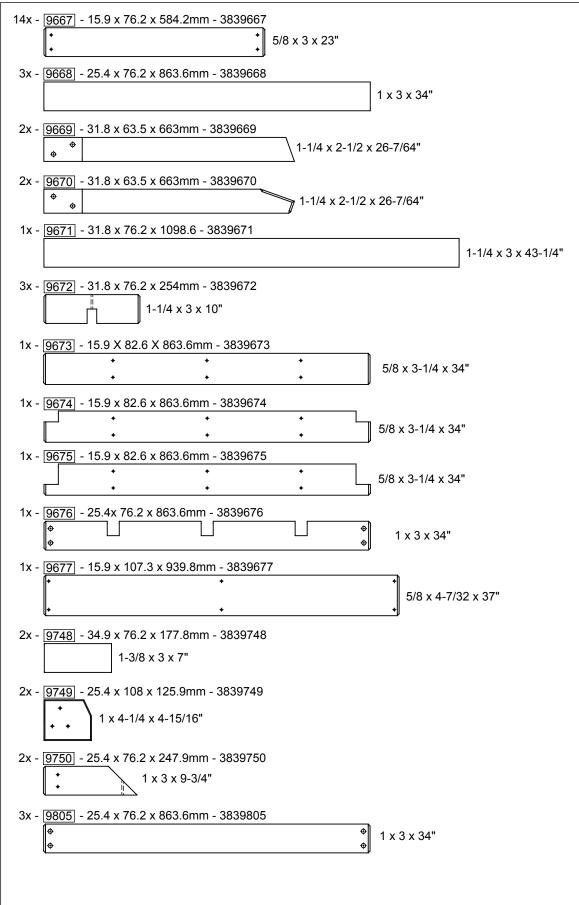


# Hardware Identification (Actual Size)

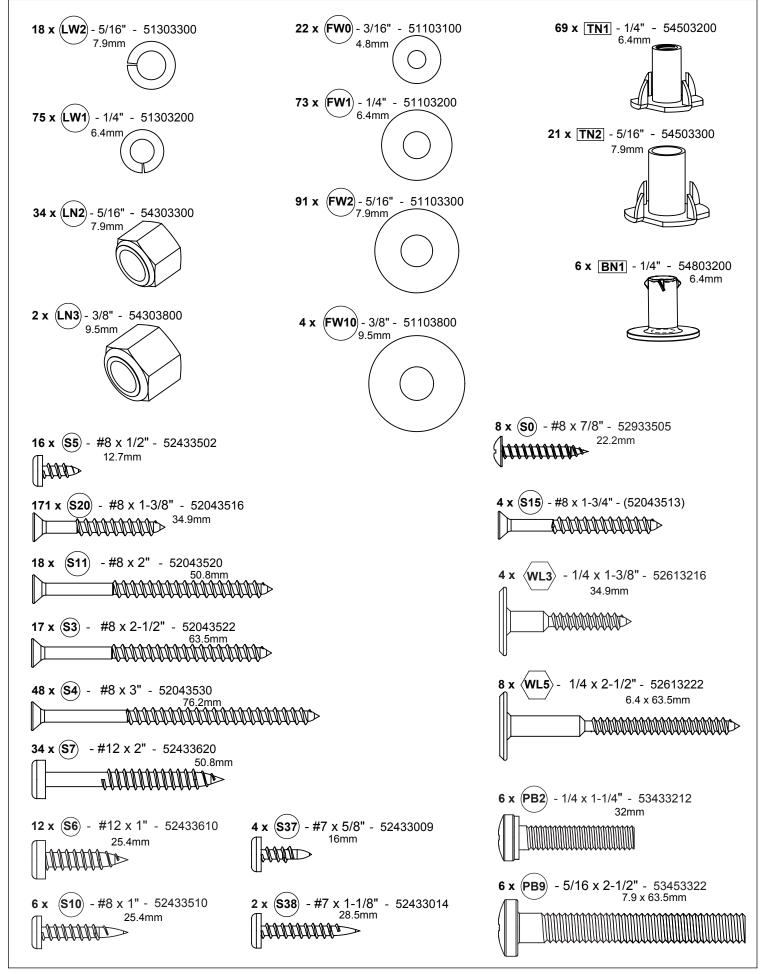

# Hardware Identification

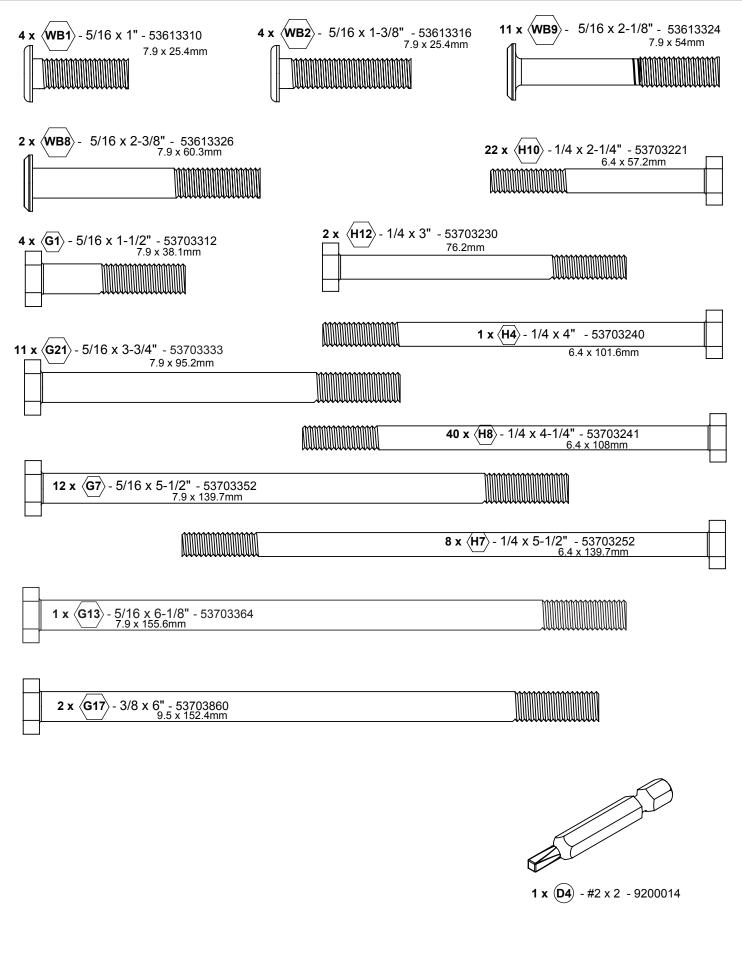

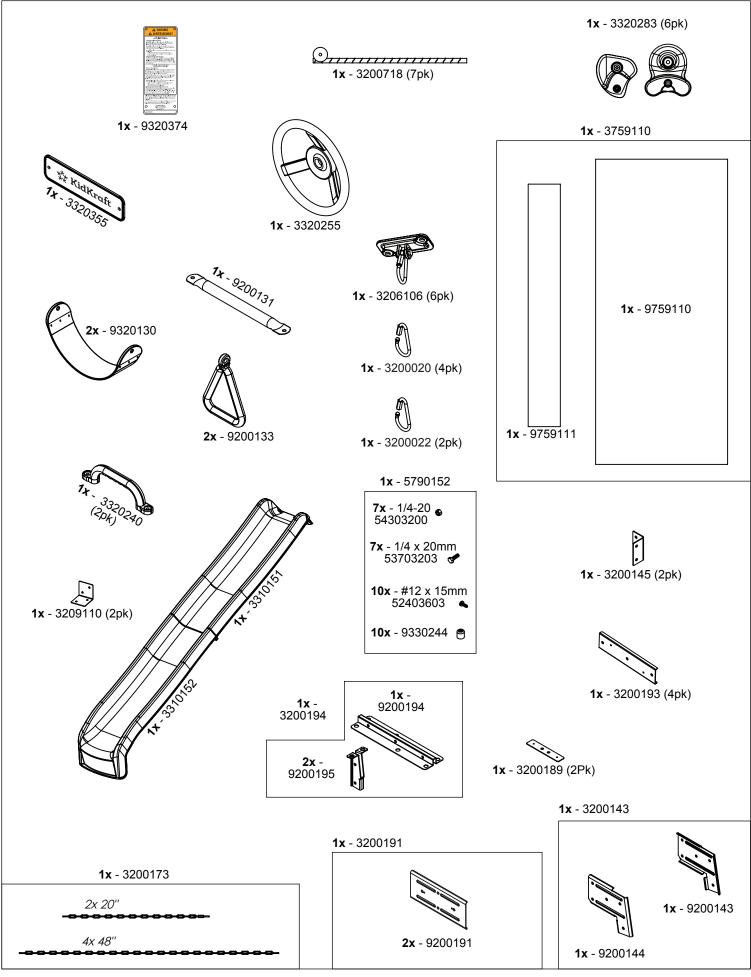



## Ston 1. Inventory Parts - Read This Refore Starting Accombly


nep	T. Inventory Parts - Read This	s Belore Starting Assembly			
	STOP STOP	STOP STOP			
Α.	This is the time for you to inventory all referencing the parts identification sheet	your hardware, wood and accessories, ets. This will assist you with your assembly.			
	<ul> <li>The wood pieces will have the key number stamped on the ends of the boards.</li> <li>Organize the wood pieces by step, as per the key numbering system below.</li> </ul>				
	1X 131 Cafe Top FSC 15.9 x 127 x 1225.6 Quantity Key Number Part Desc Part Size	pription,			
	Please refer to Page 6 for proper hardwa	are assembly.			
	<ul> <li>Each step indicates which bolts and/or s any flat washers, lock washers, t-nuts or</li> </ul>	crews you will need for assembly, as well as lock nuts.			
В.	B. If there are any missing or damaged pieces or you need assistance with assembly please contact the consumer relations department directly. <u>Call us</u> <u>before going back to the store.</u>				
	1.800.933.0771 or 972.385.0100 customerservice@kidkraft.com canadacustomerservice@kidkraft.com For online parts replacement visit https://parts.kidkraft.com/	+31 20 305 8620 europecustomerservice@KidKraft.com For online parts replacement visit https://parts.kidkraft.eu/			
C.	Read the assembly manual completely notes; and safety/maintenance information	y, paying special attention to ANSI warnings ation on pages 1 - 6.			
D.	<ul> <li>Before you discard your cartons fill out</li> <li>The carton I.D. stamp is located on the electron located on the KidKraft ID Plaque (9320)</li> </ul>	end of each carton. The tracking number is			
	<ul> <li>Please retain this information for future r contact the Consumer Relations Depart</li> </ul>	reference. You will need this information if you ment.			
	MODEL NUM	BER: <b>F29110</b>			
CART	ON I.D. STAMP: 14459 (Box 1)	CARTON I.D. STAMP: 14459 (Box 4)			

CARTON I.D. STAMP:	14459	(Box 2)	CARTON I.D. STAMP:	14459	(Box 5)
CARTON I.D. STAMP:	14459	(Box 3)	CARTON I.D. STAMP:	14459	(Box 6)

TRACKING NUMBER (from ID Plaque): \_

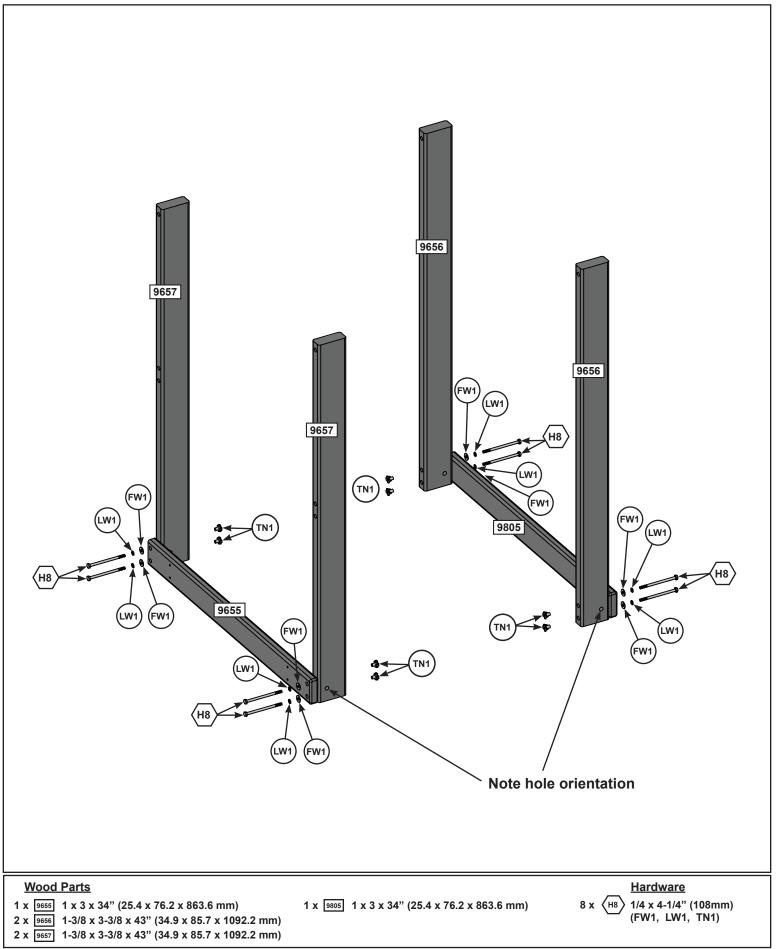

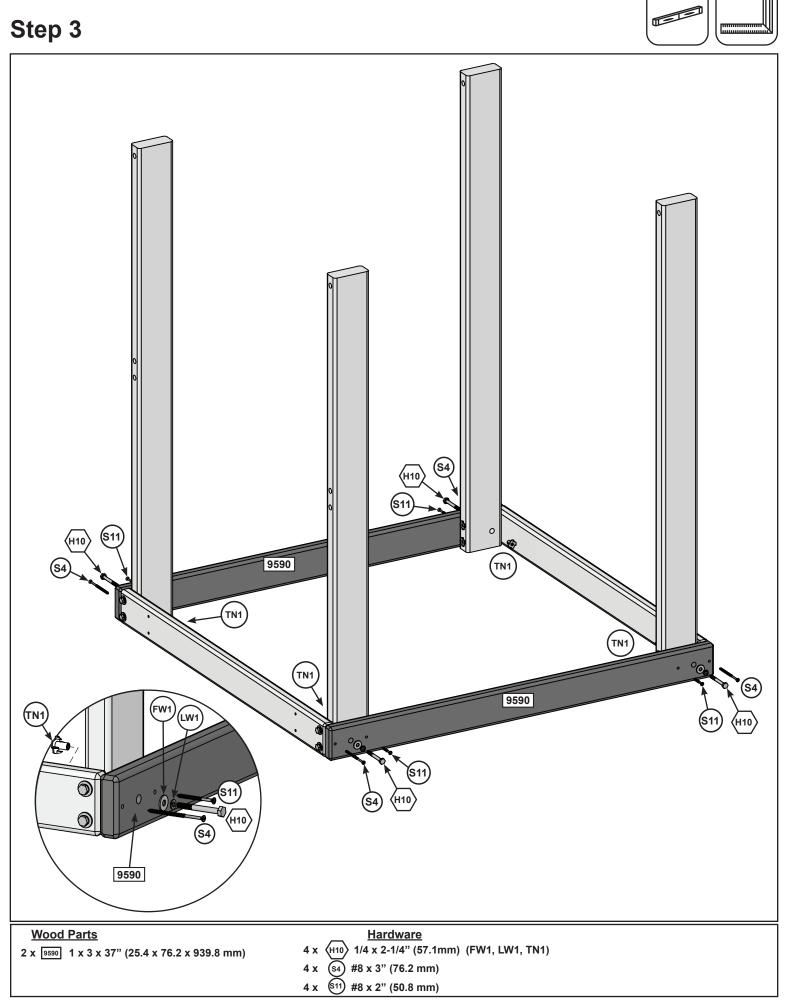


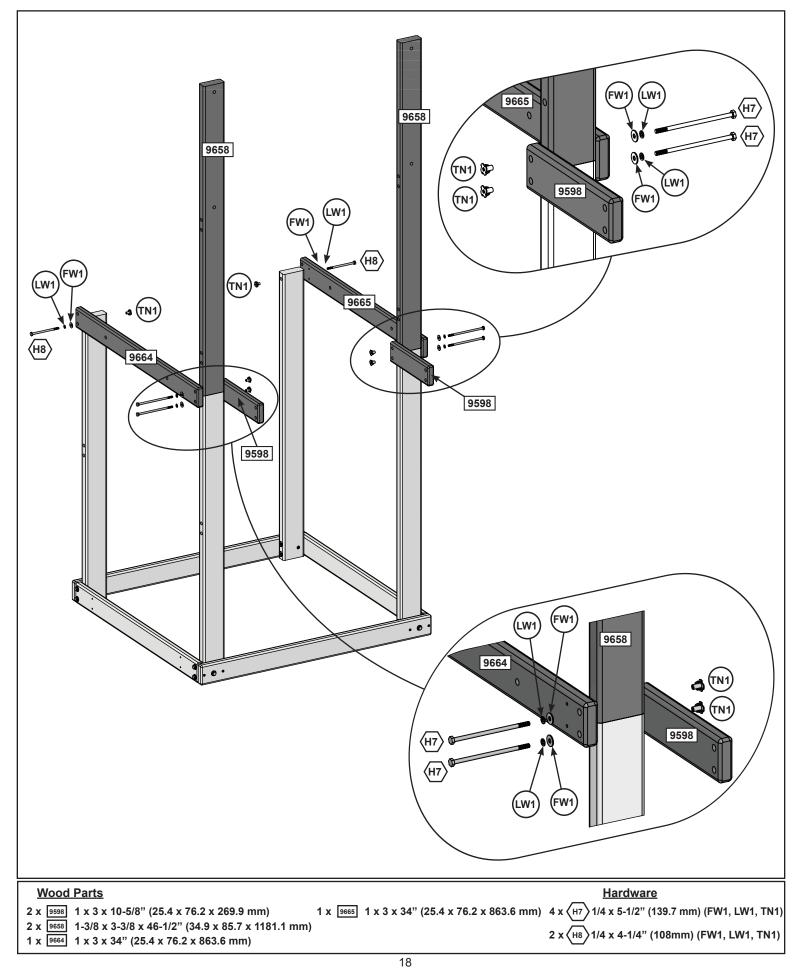









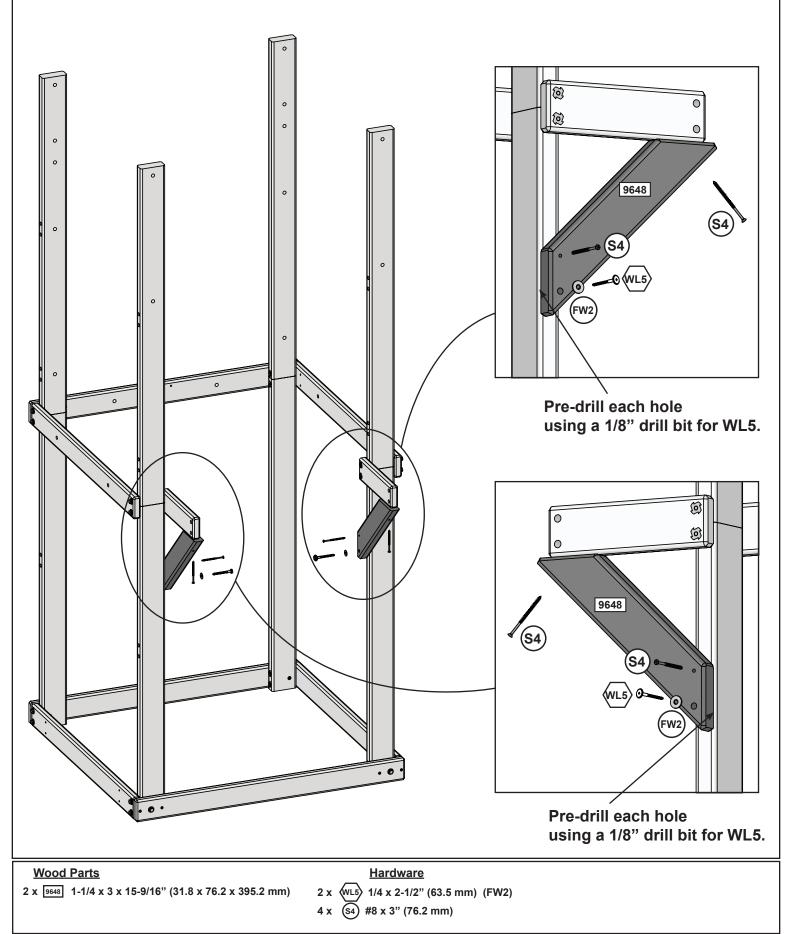


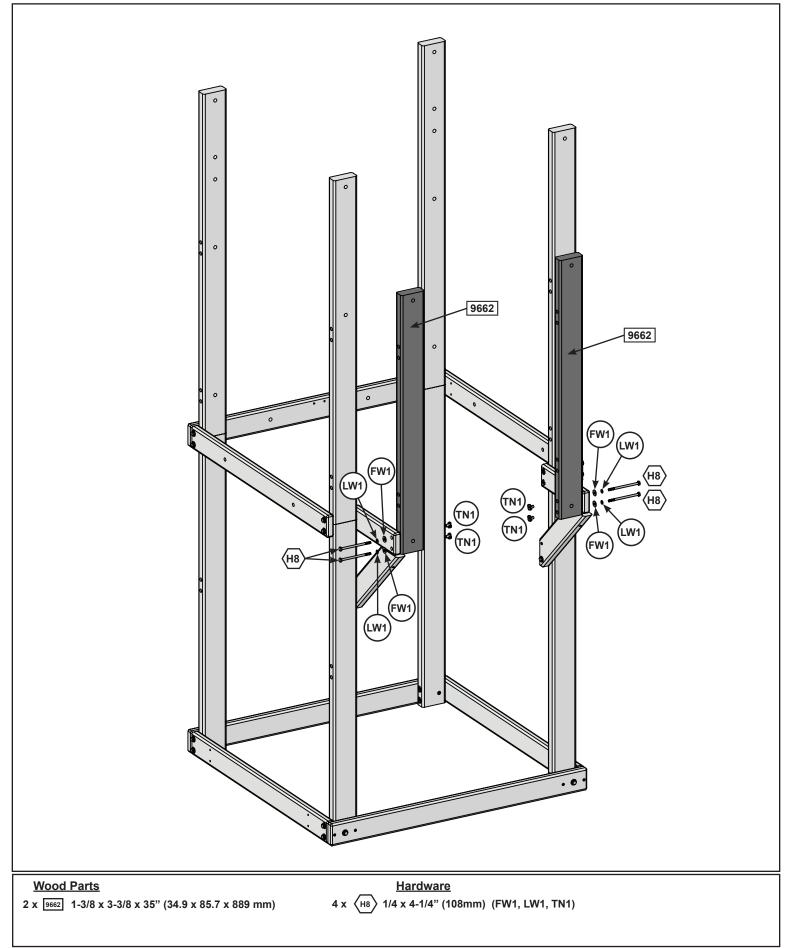


0 0 0 0 0 FW 0 LW Ć (S4 0 9599 H10 S11 0 0 9599 9599 FW1 Ò 0.0 S11 (н10 0 LW1 S4 . 0 .. Hardware 2 x (H10) 1/4 x 2-1/4" (57.1mm) (FW1, LW1, TN1) Wood Parts 1 x 9599 1 x 3 x 28-1/4" (25.4 x 76.2 x 717.6 mm) (\$4) #8 x 3" (76.2 mm) 2 x #8 x 2" (50.8 mm) 2 x (\$11)

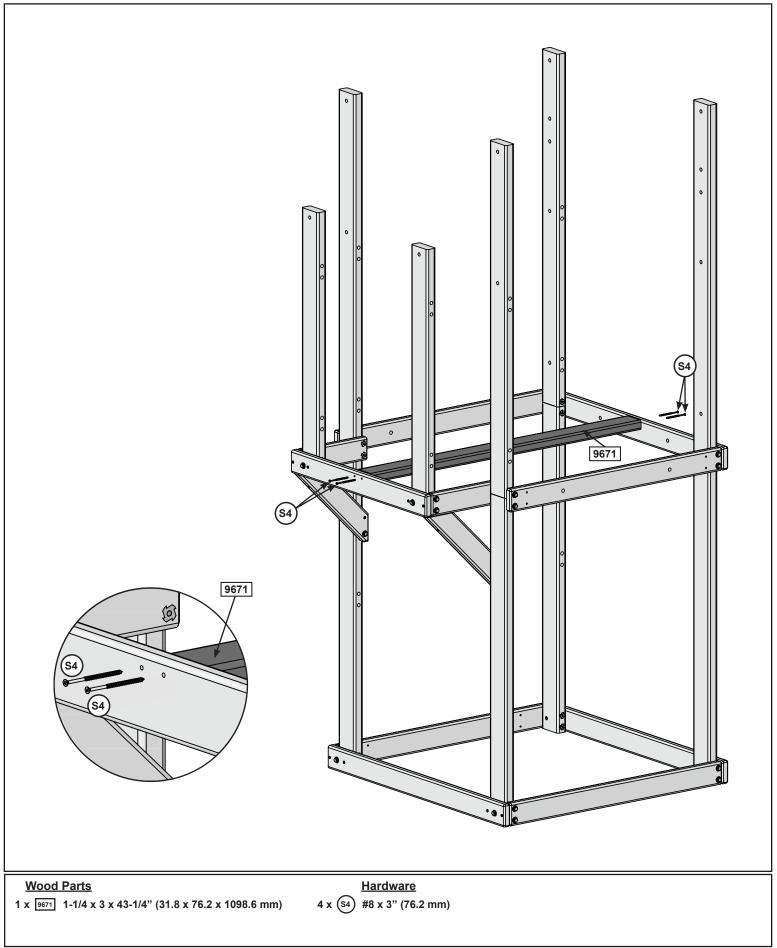





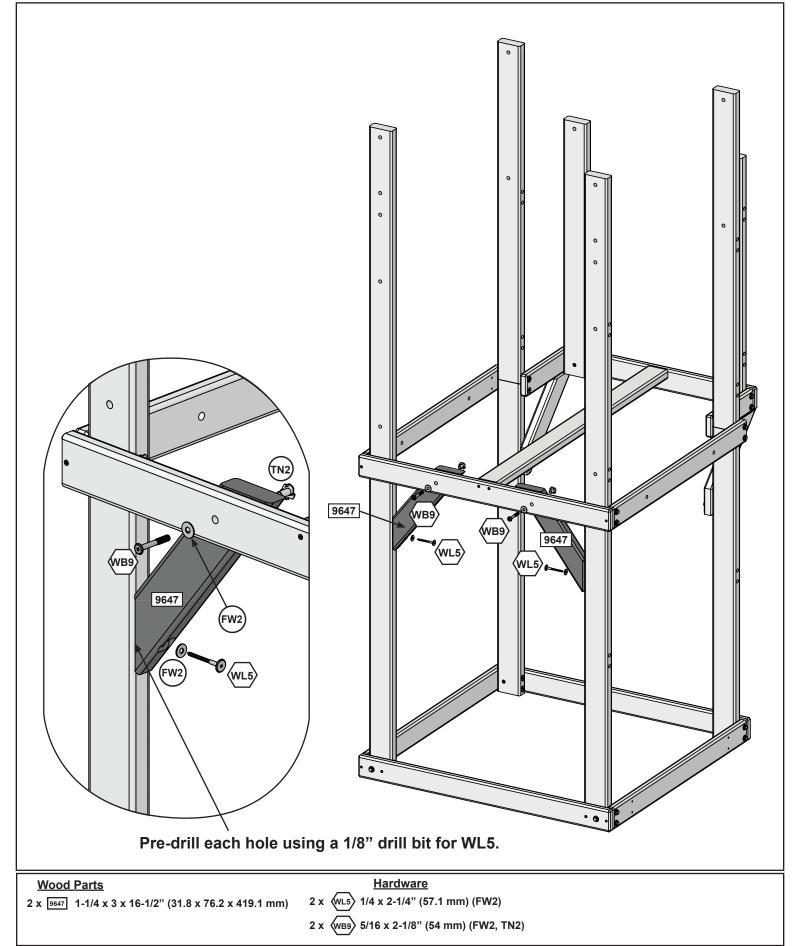





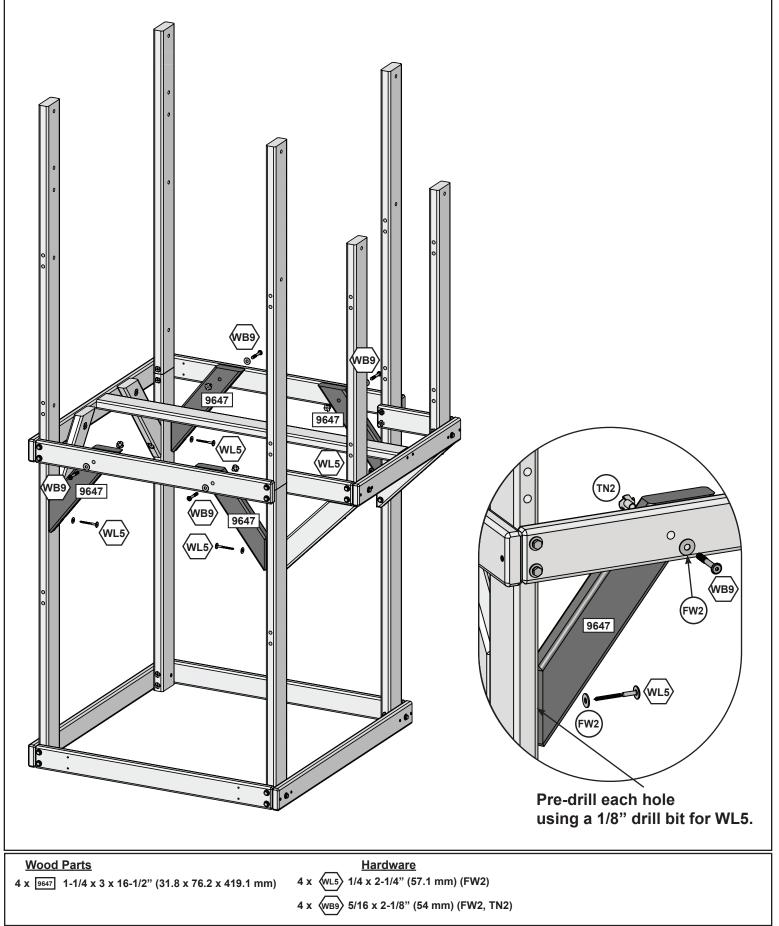

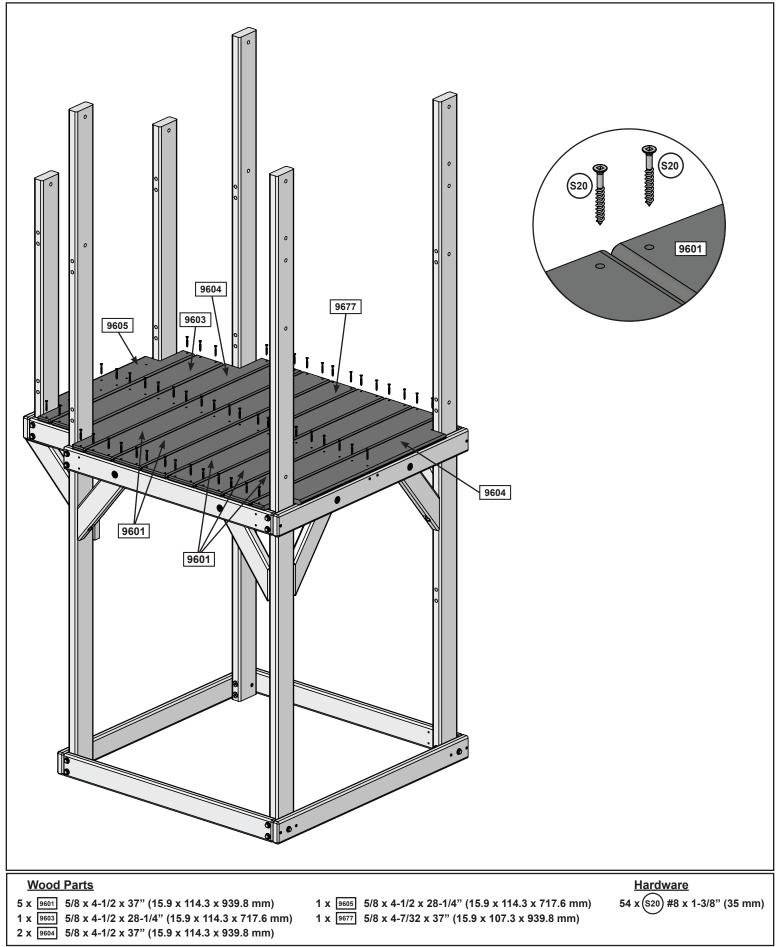


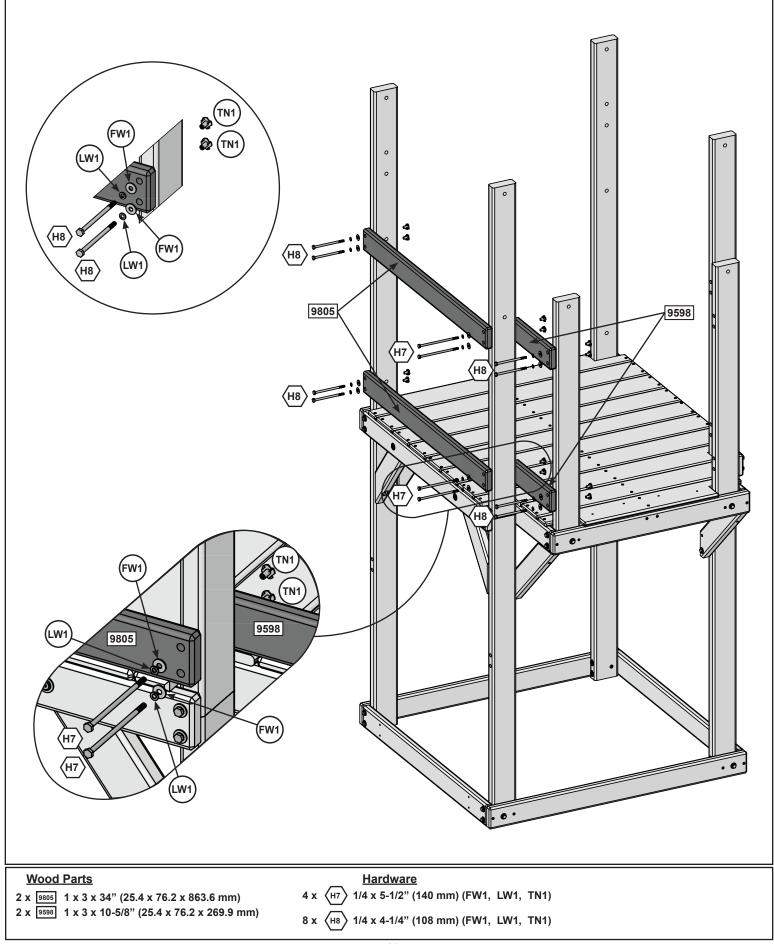


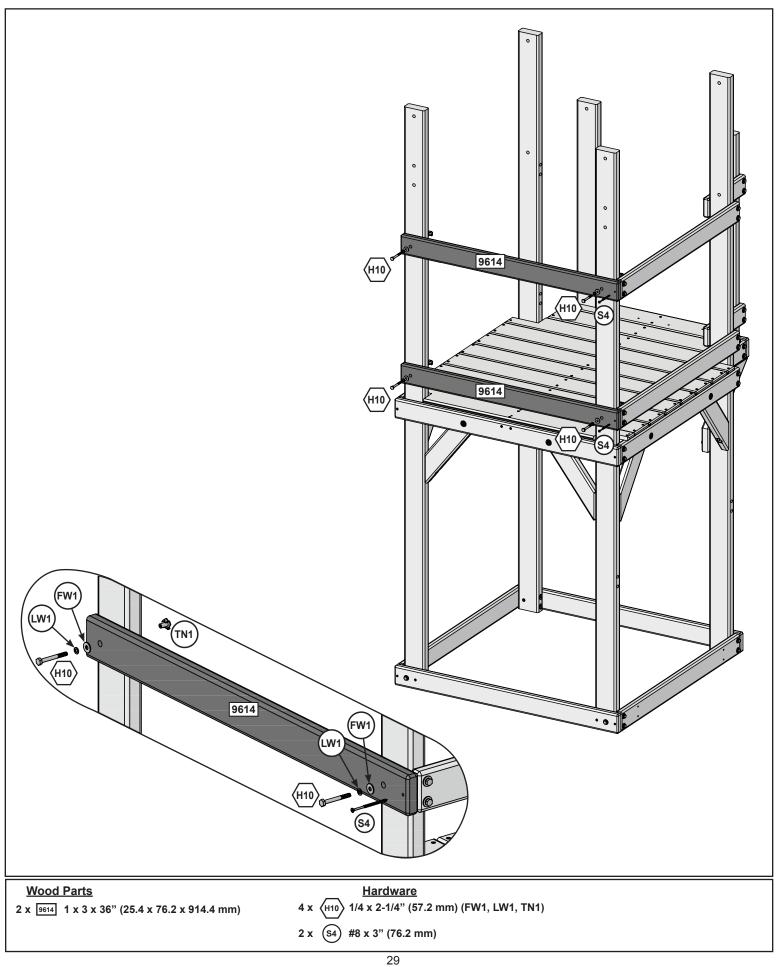


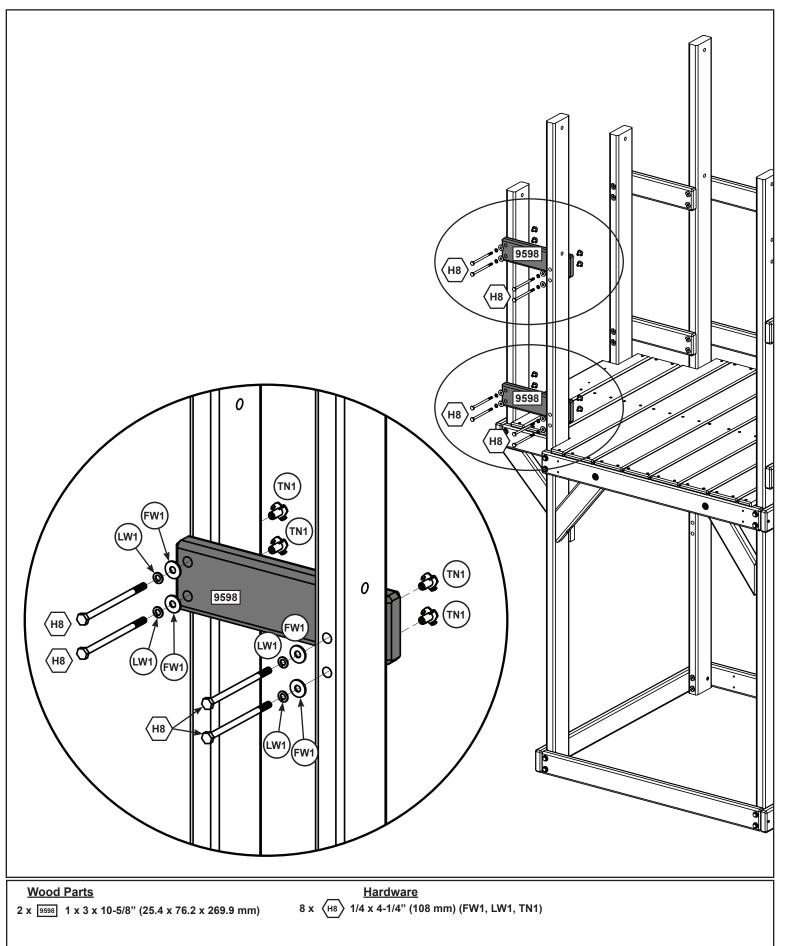





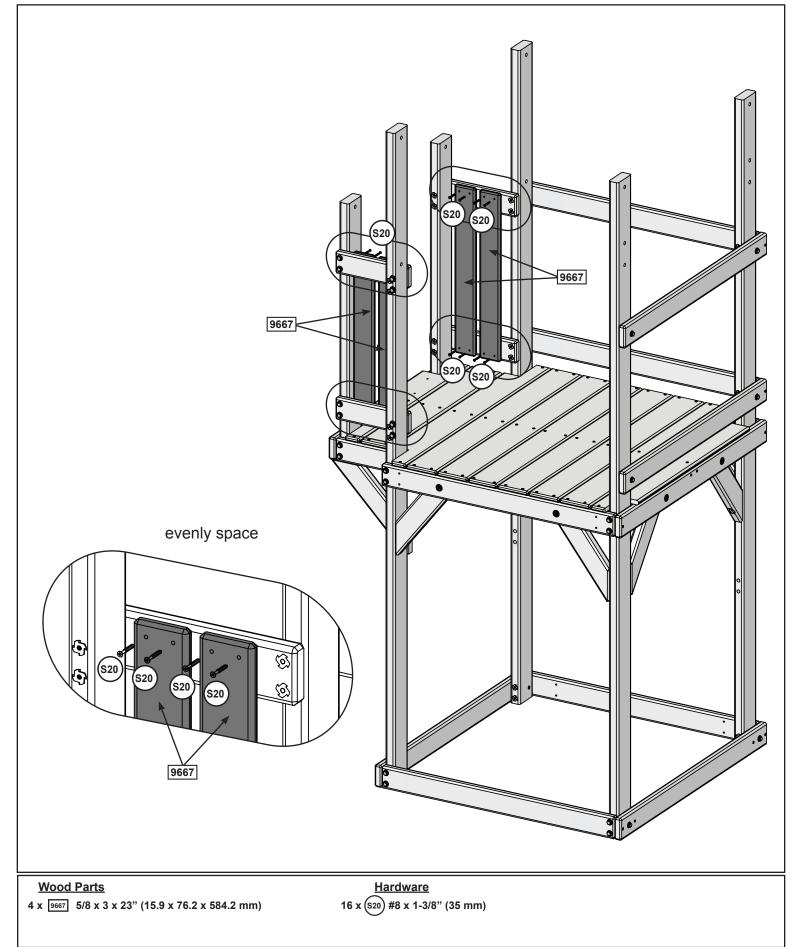


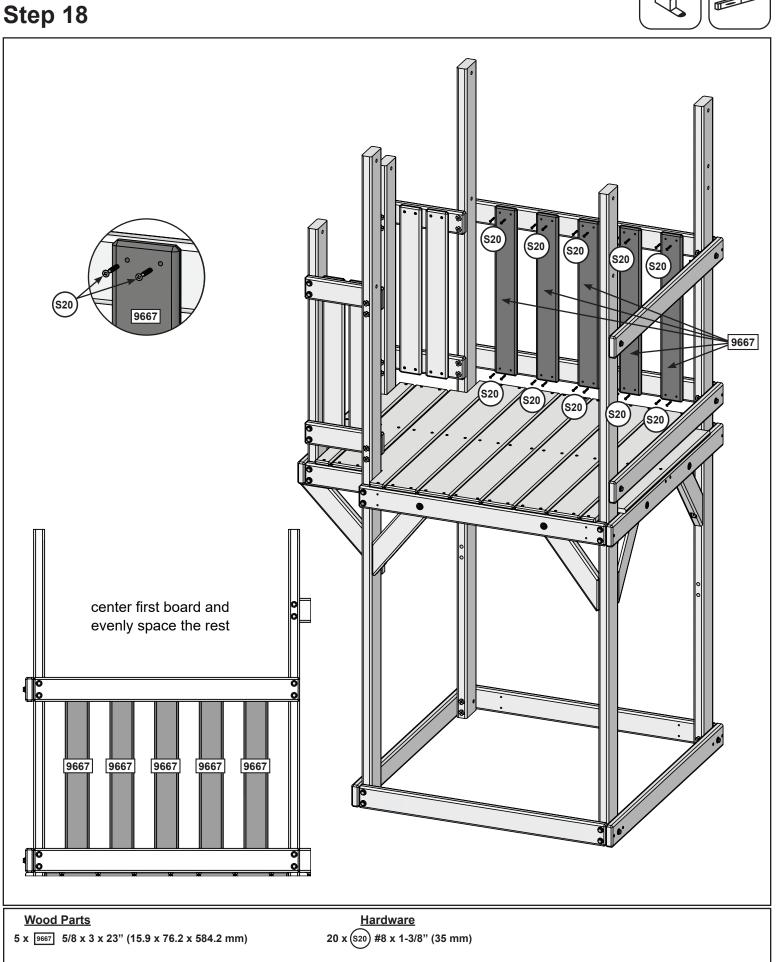

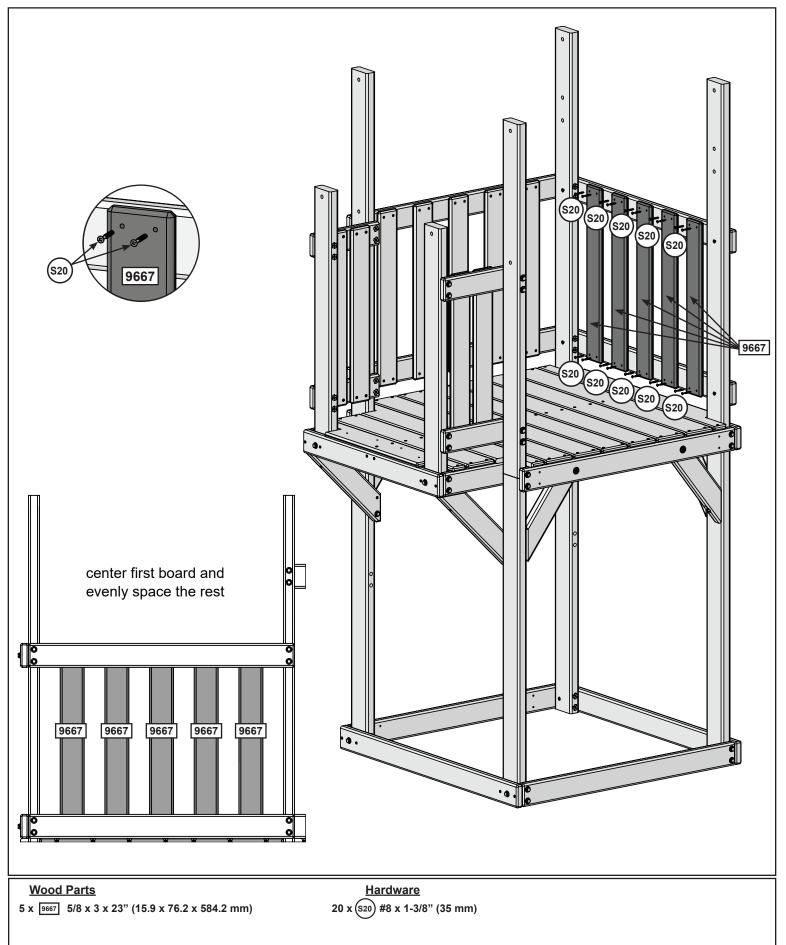


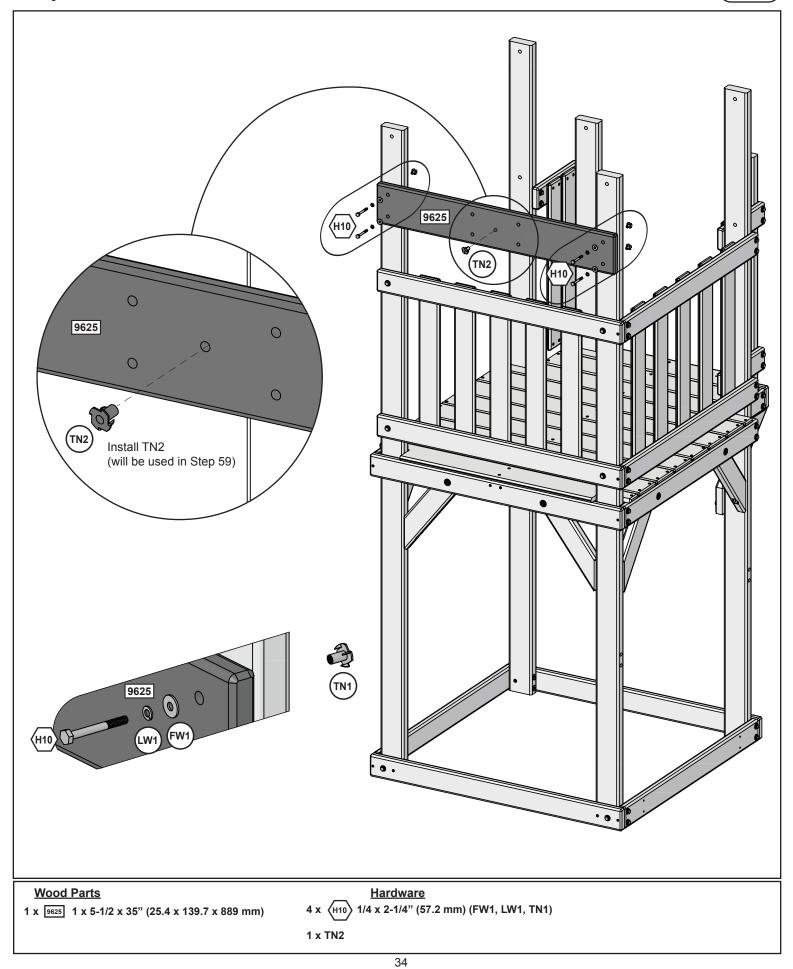

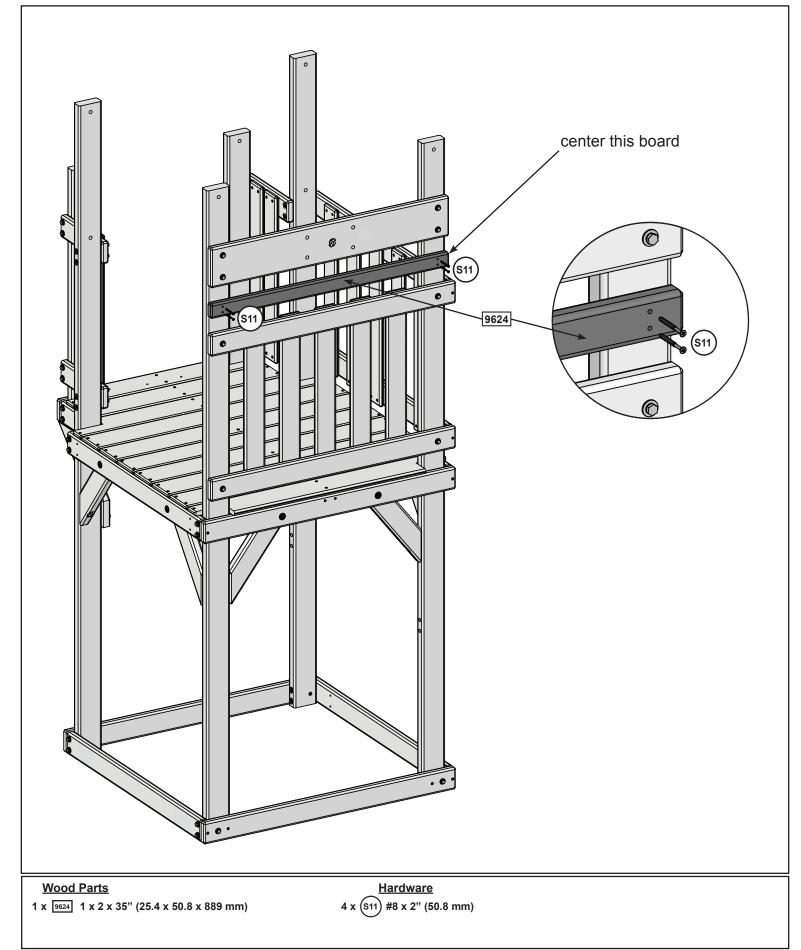


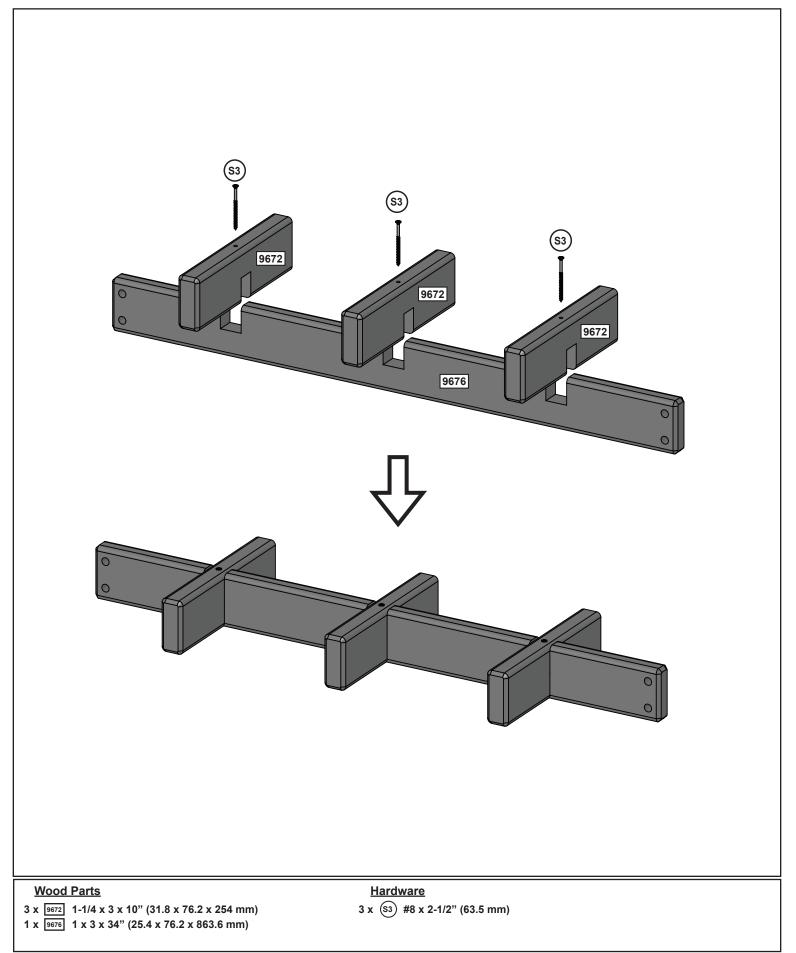




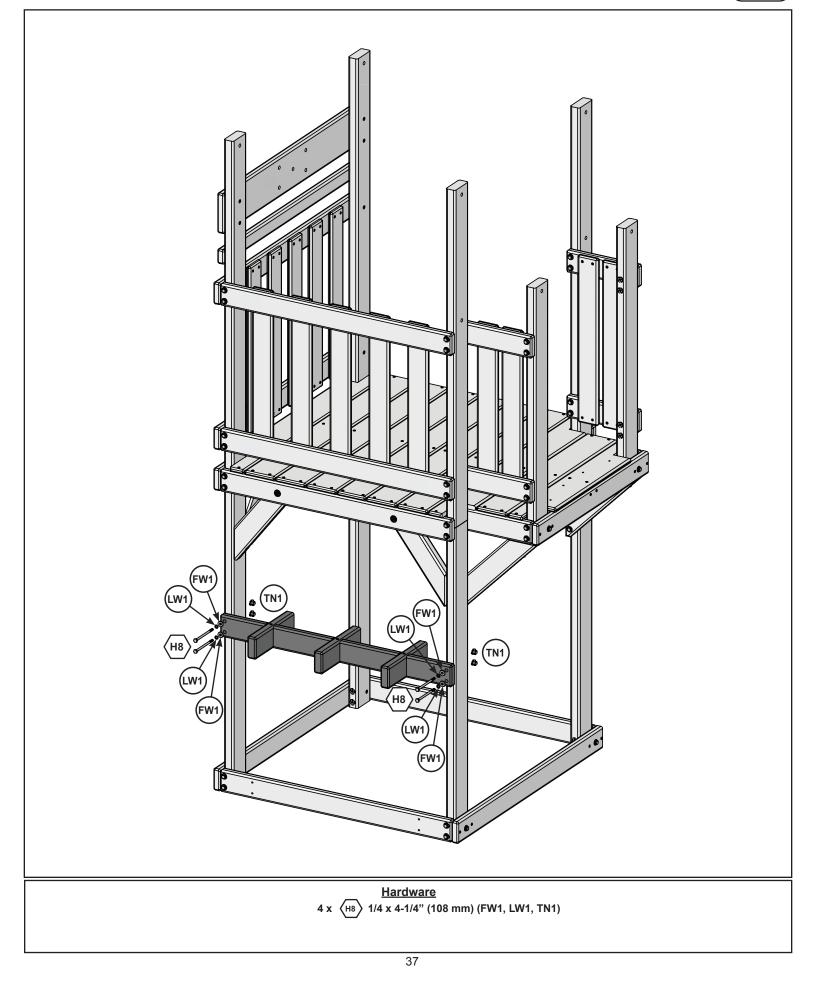




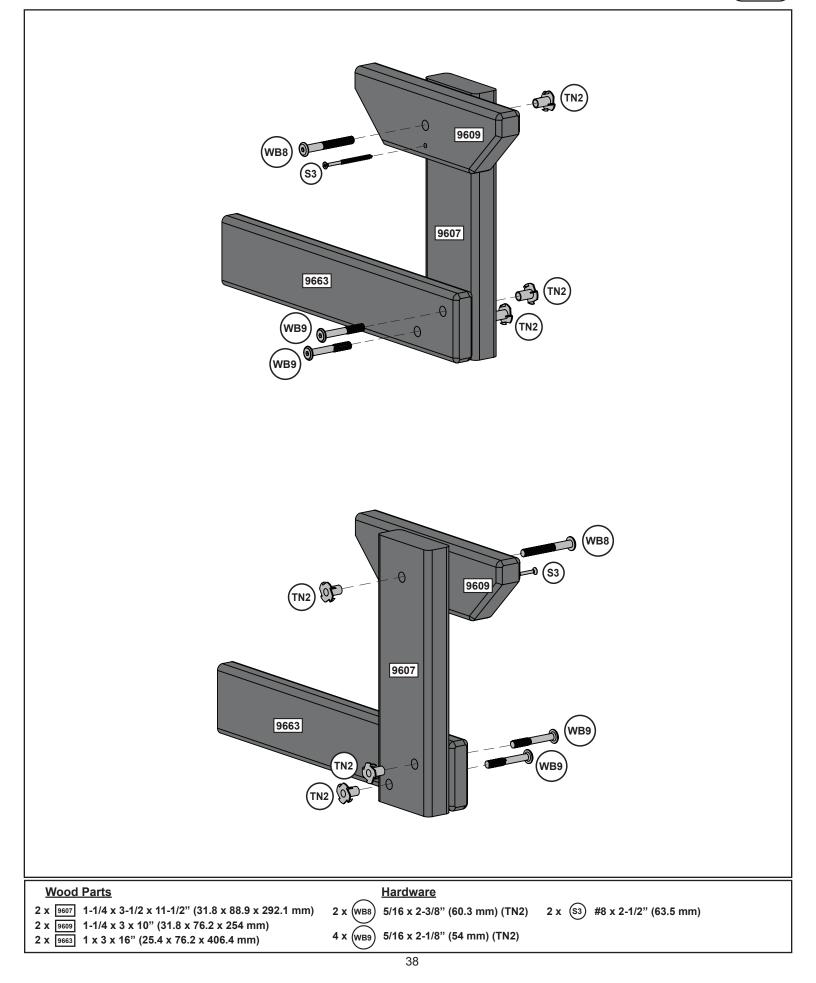





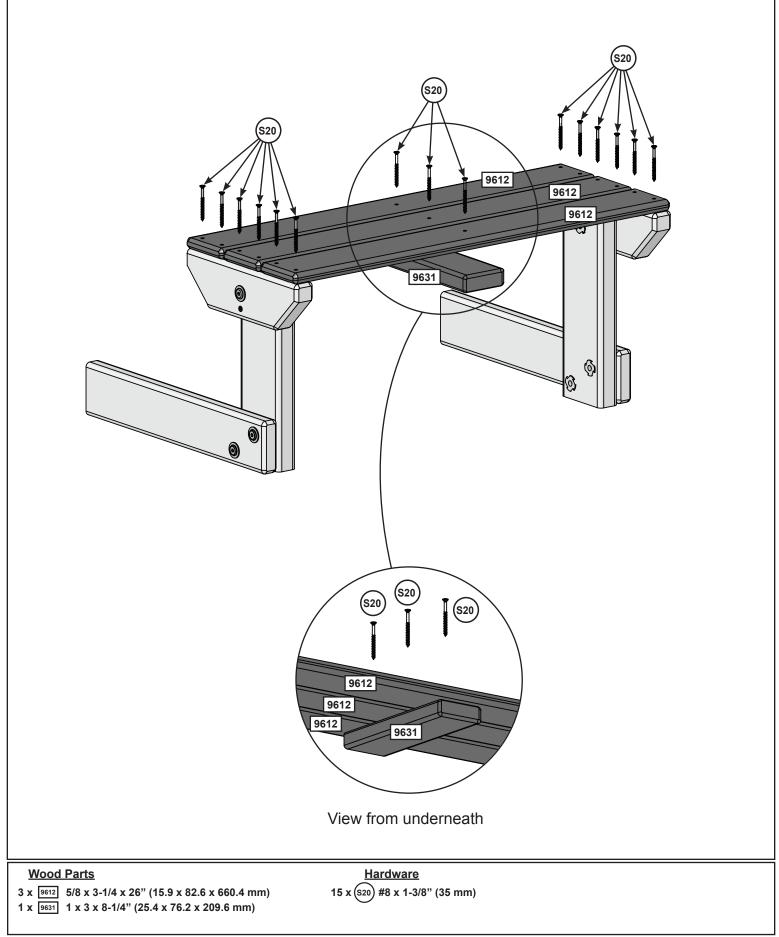


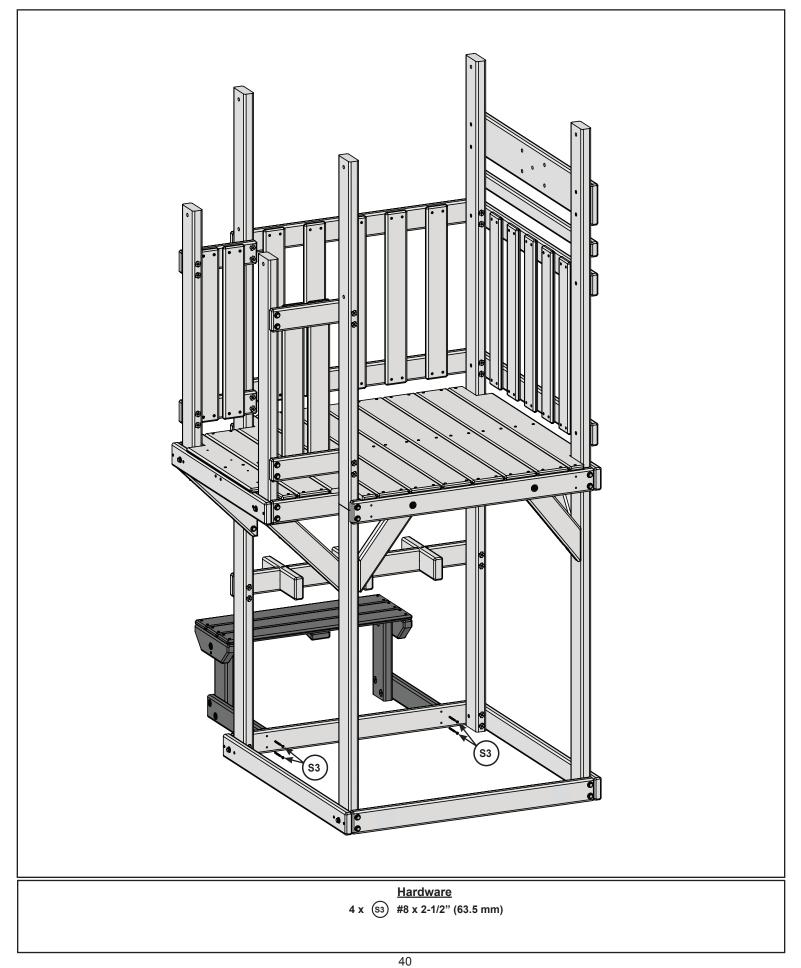




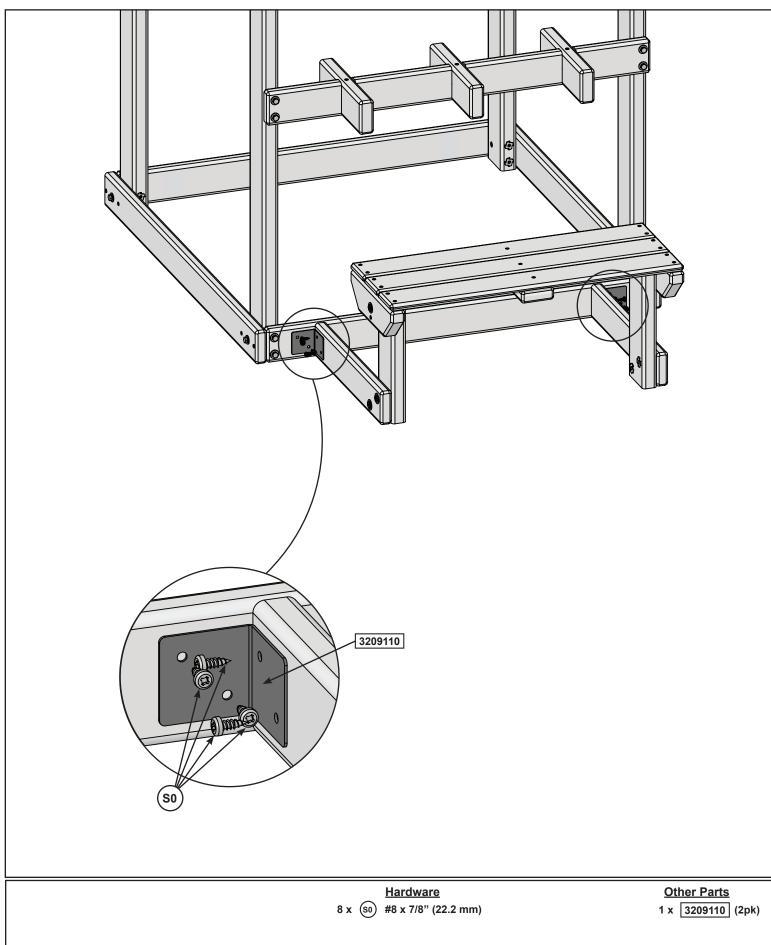


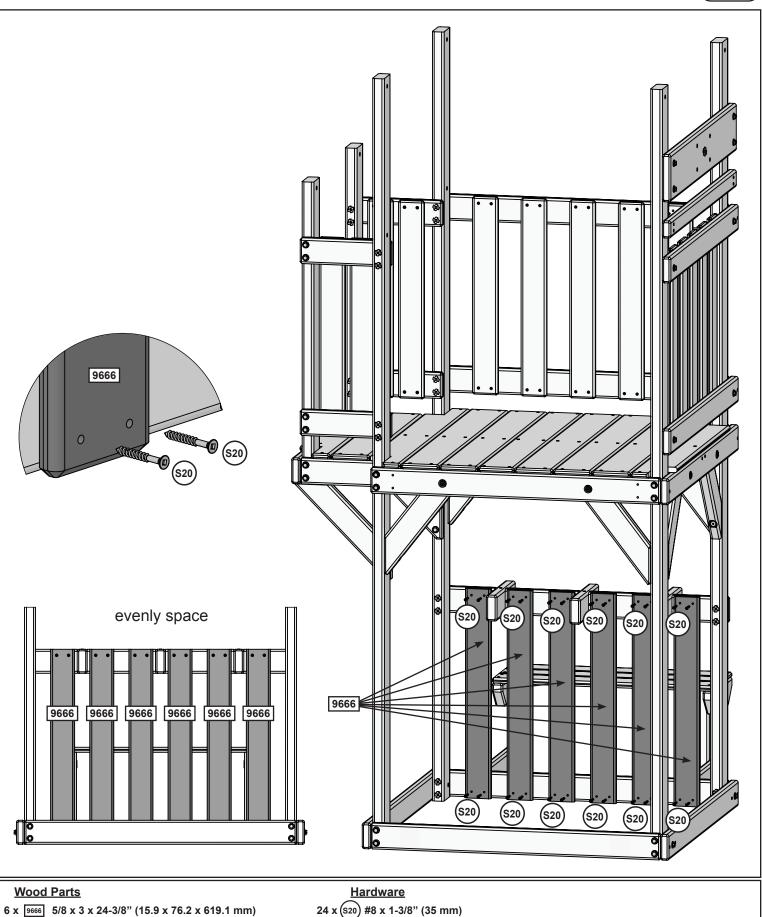


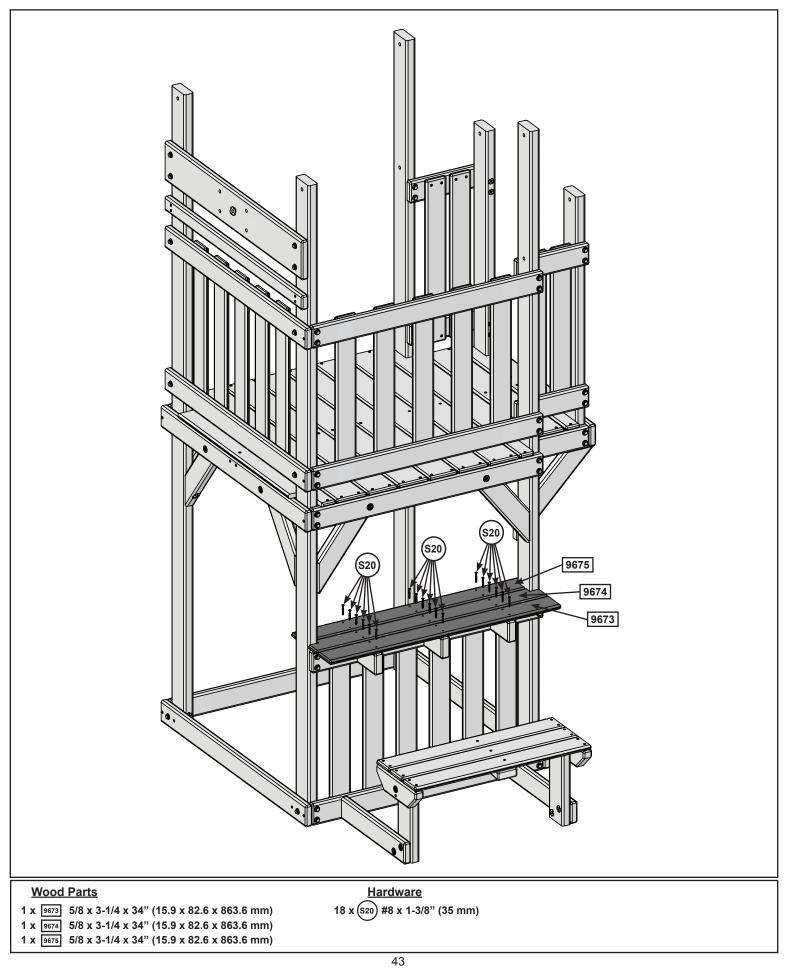




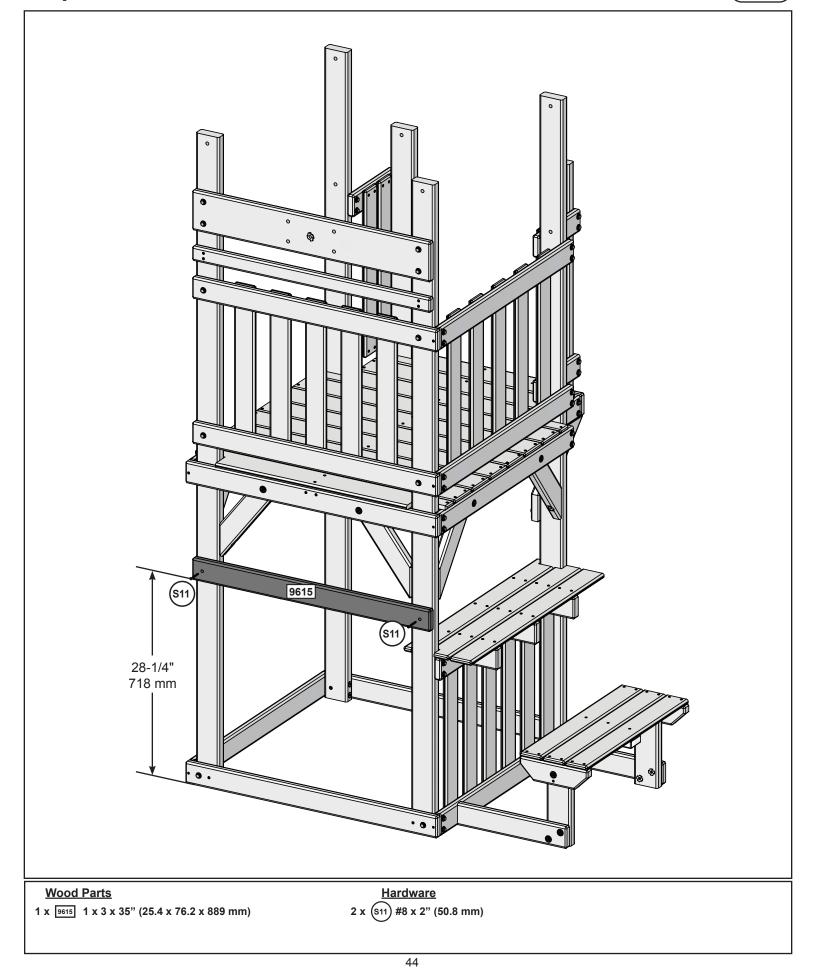


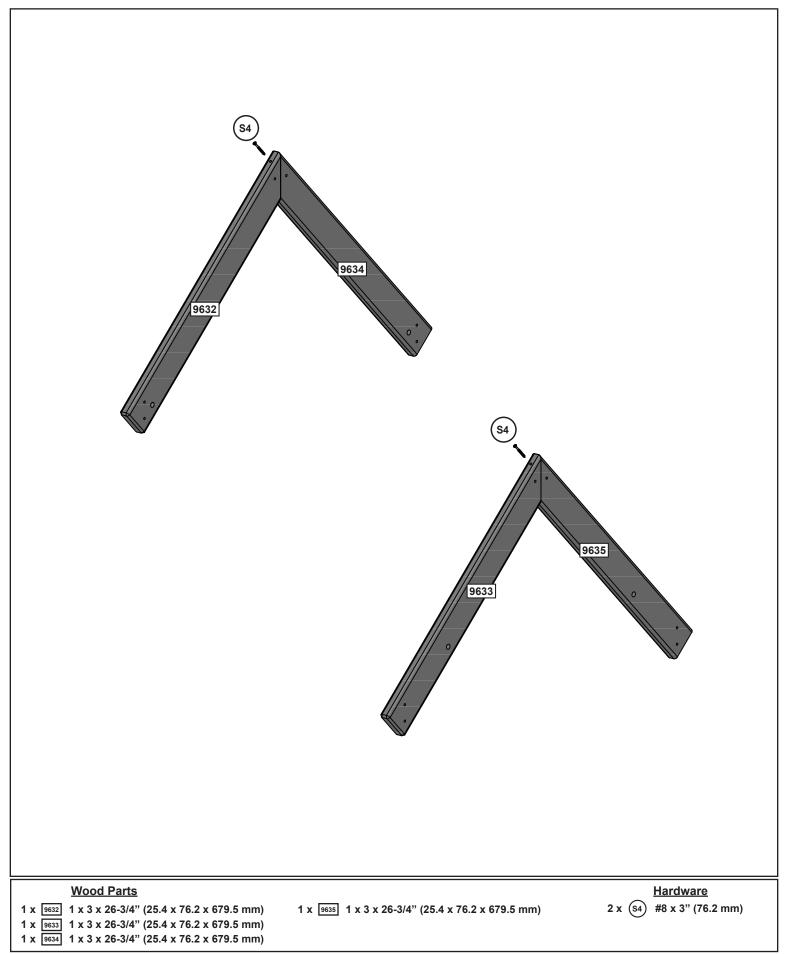


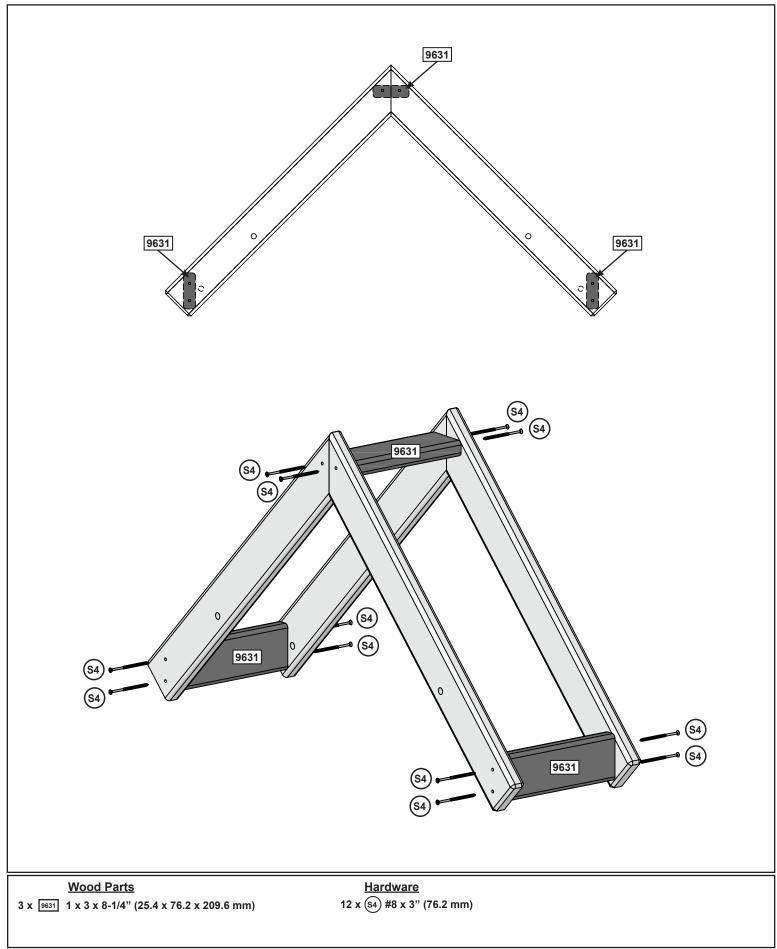




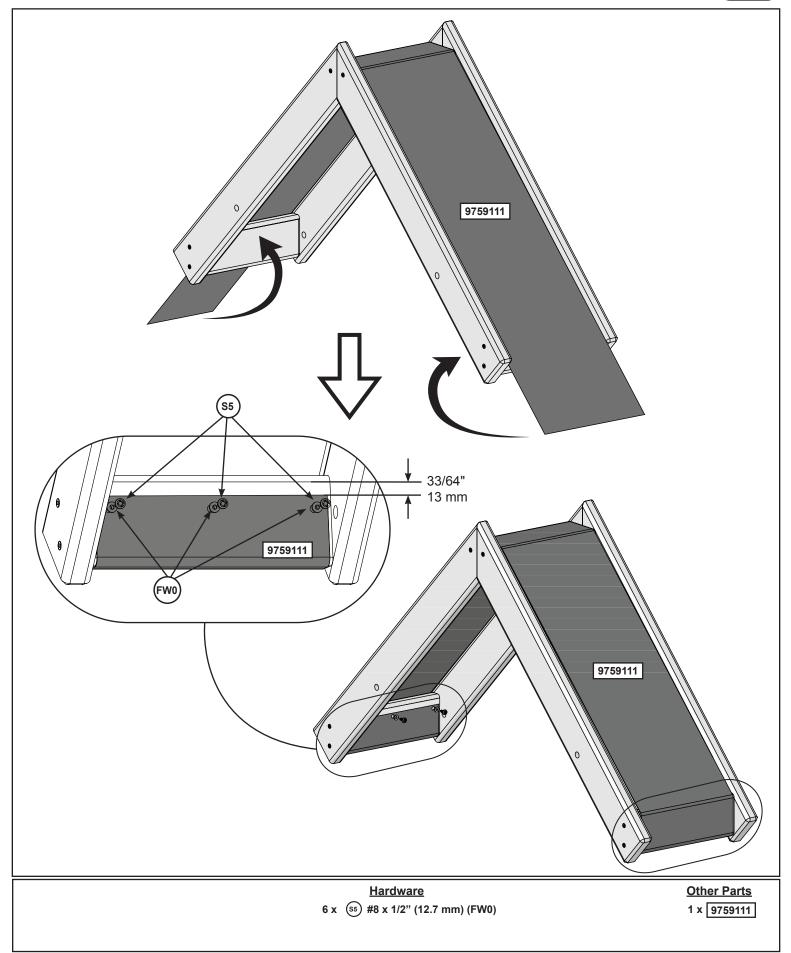

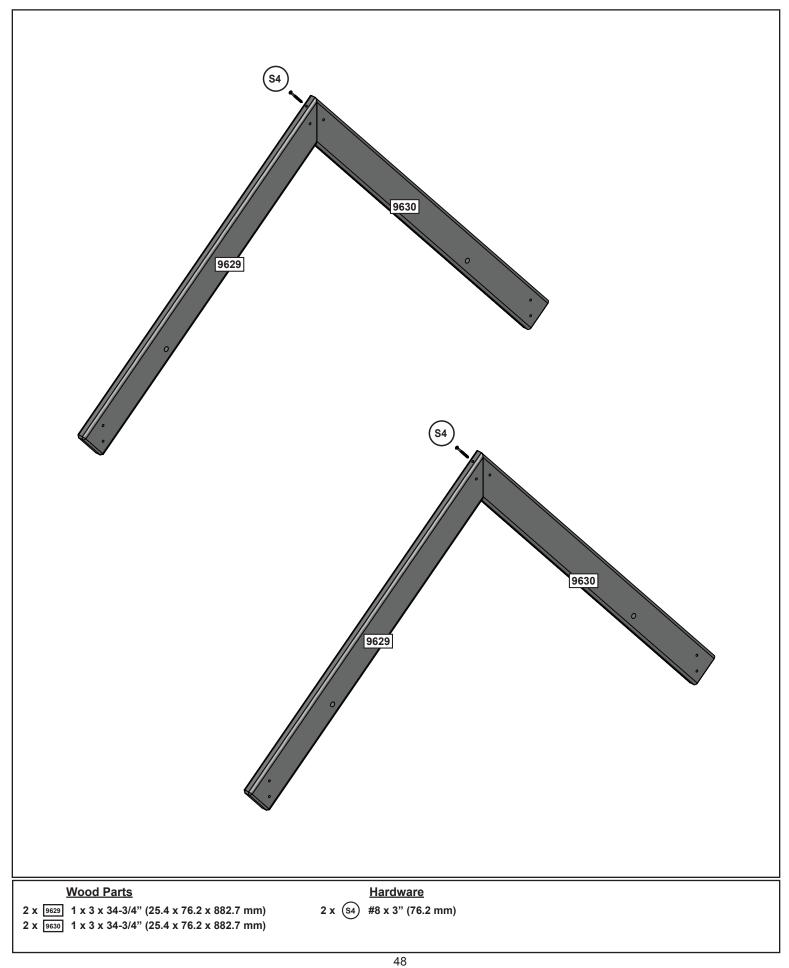


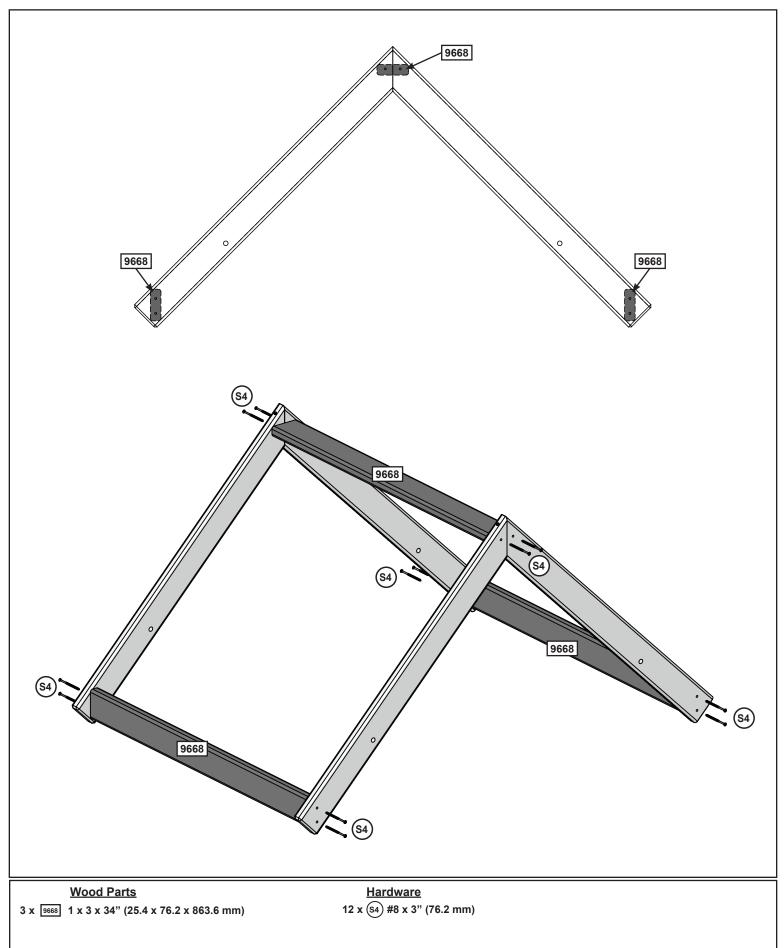




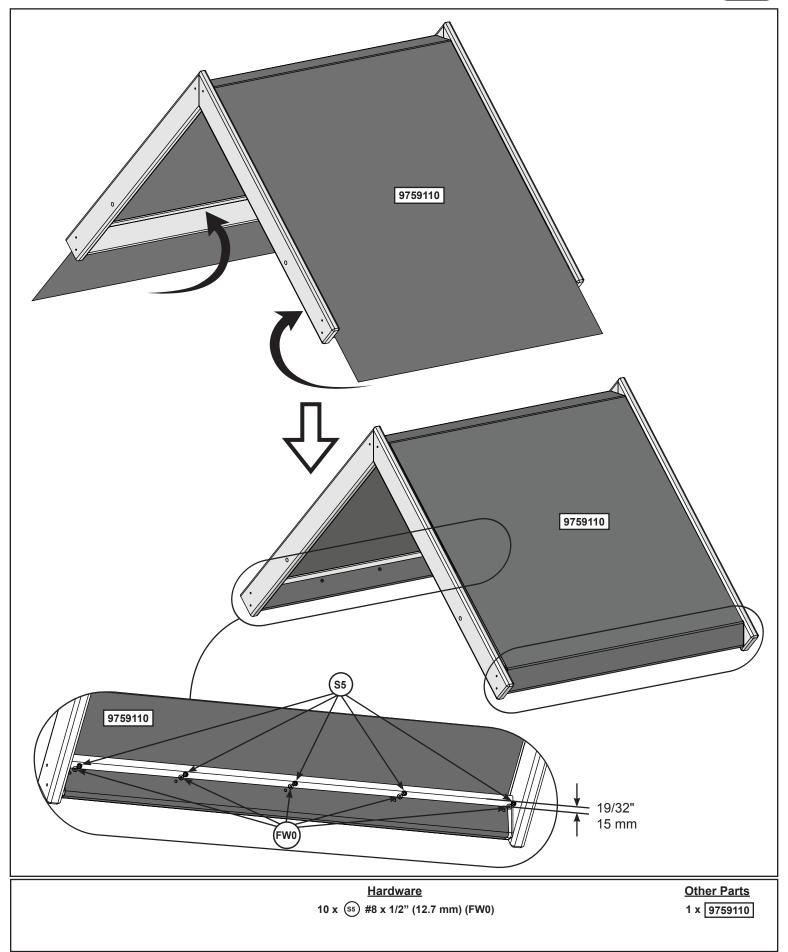





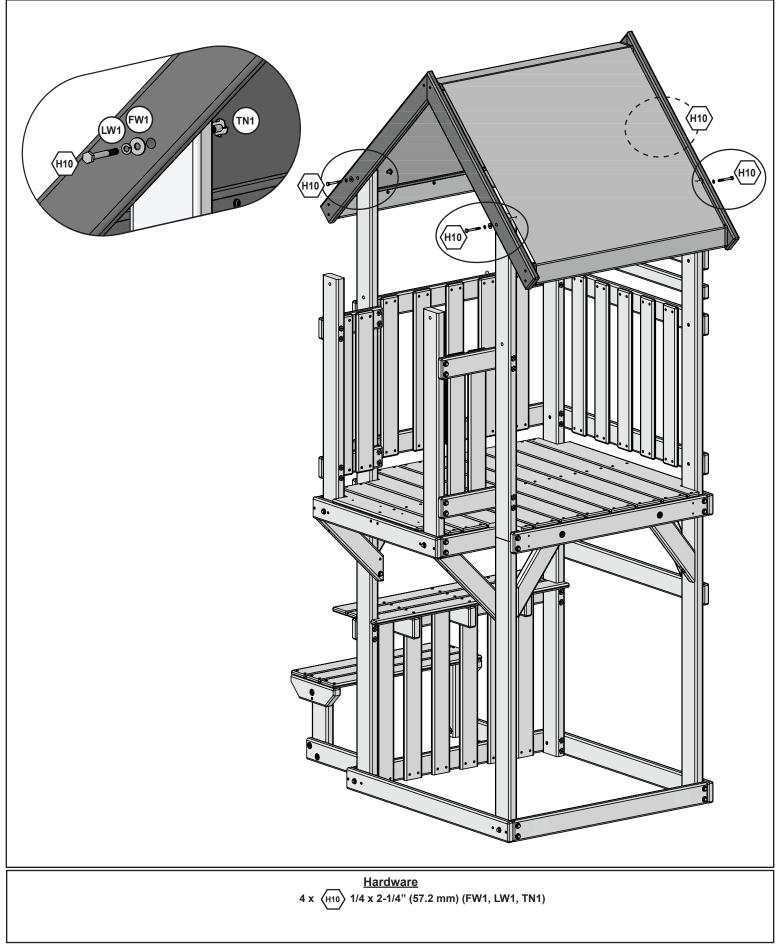




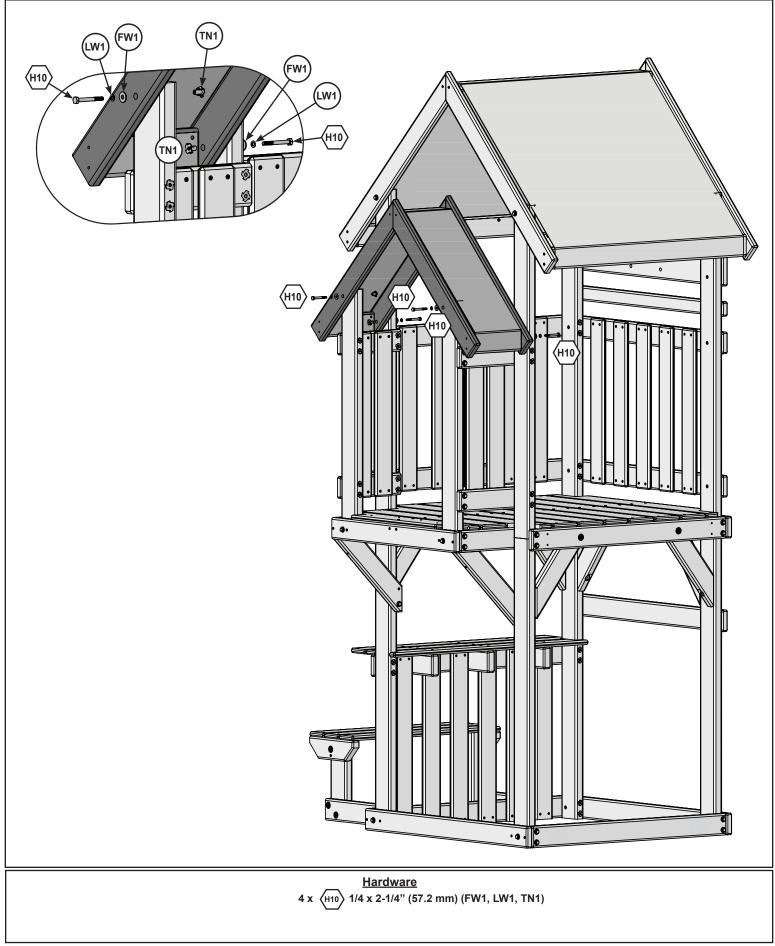


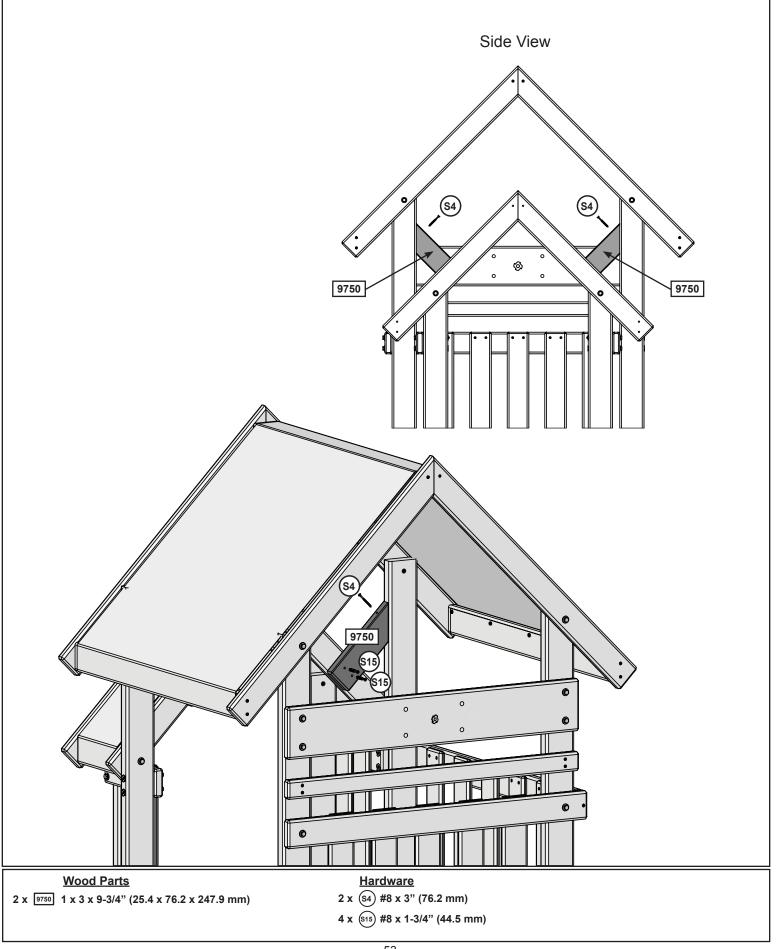


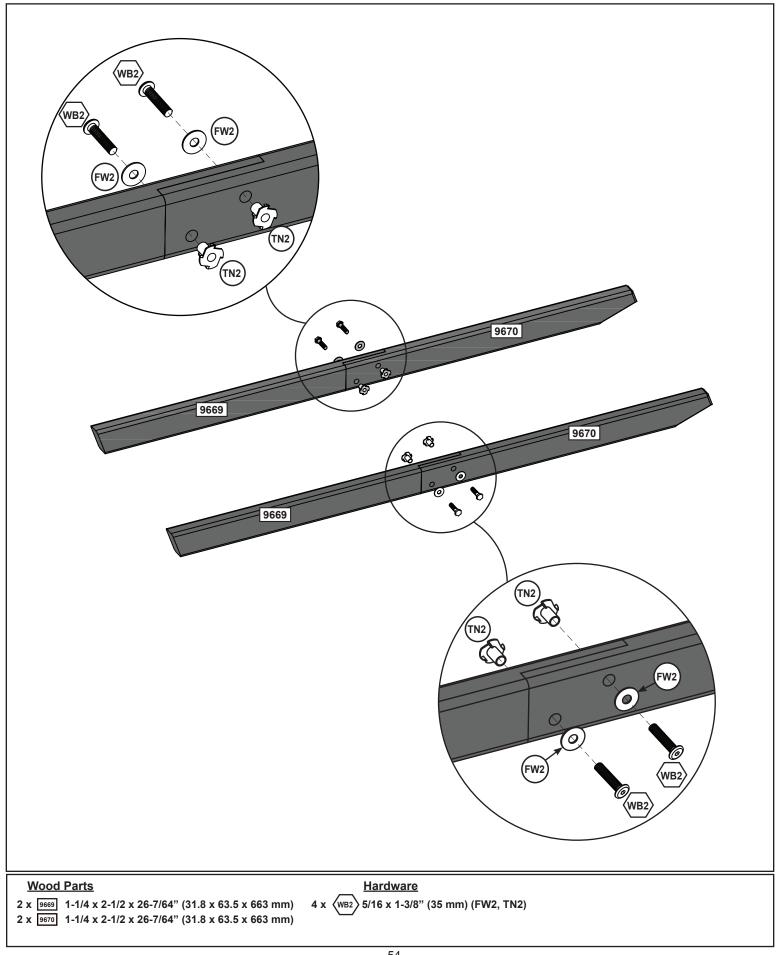





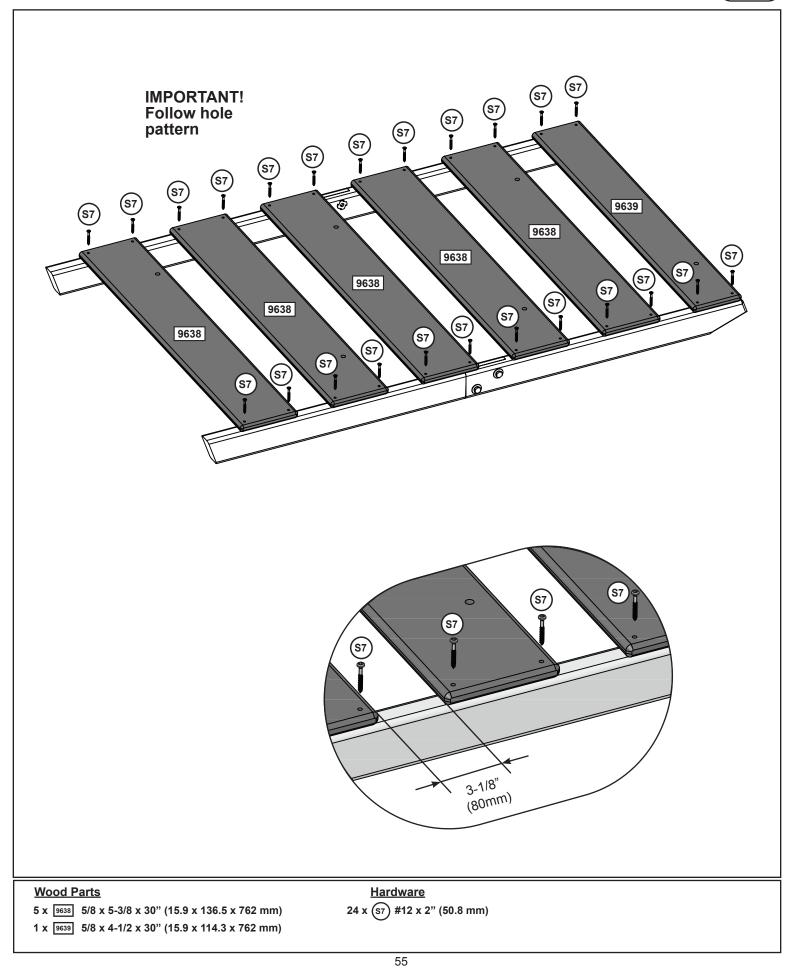


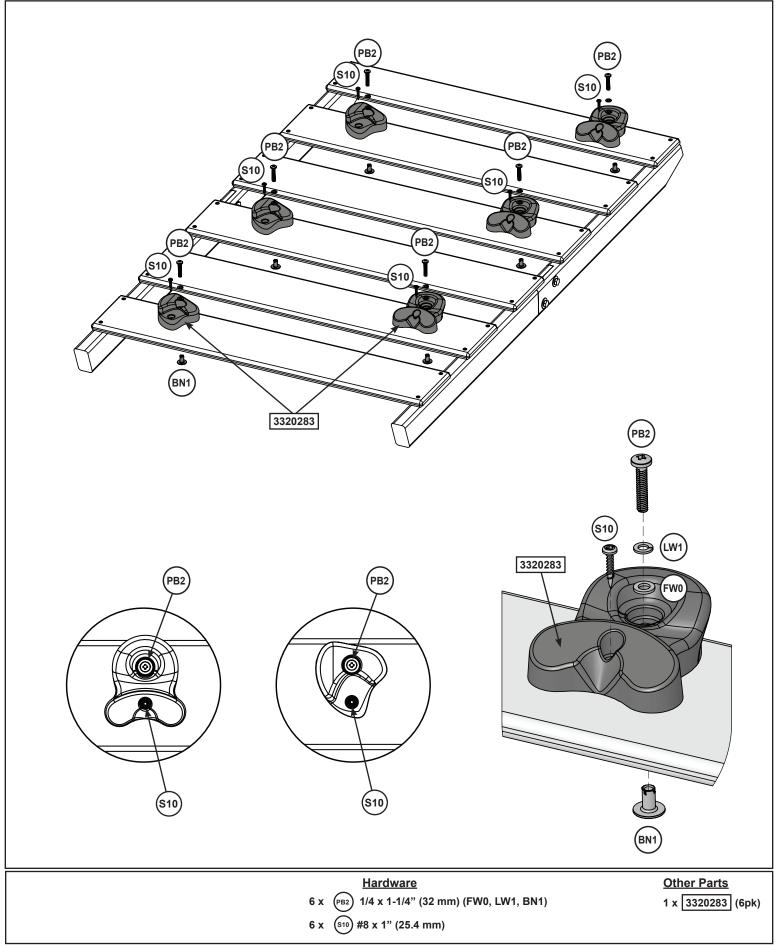

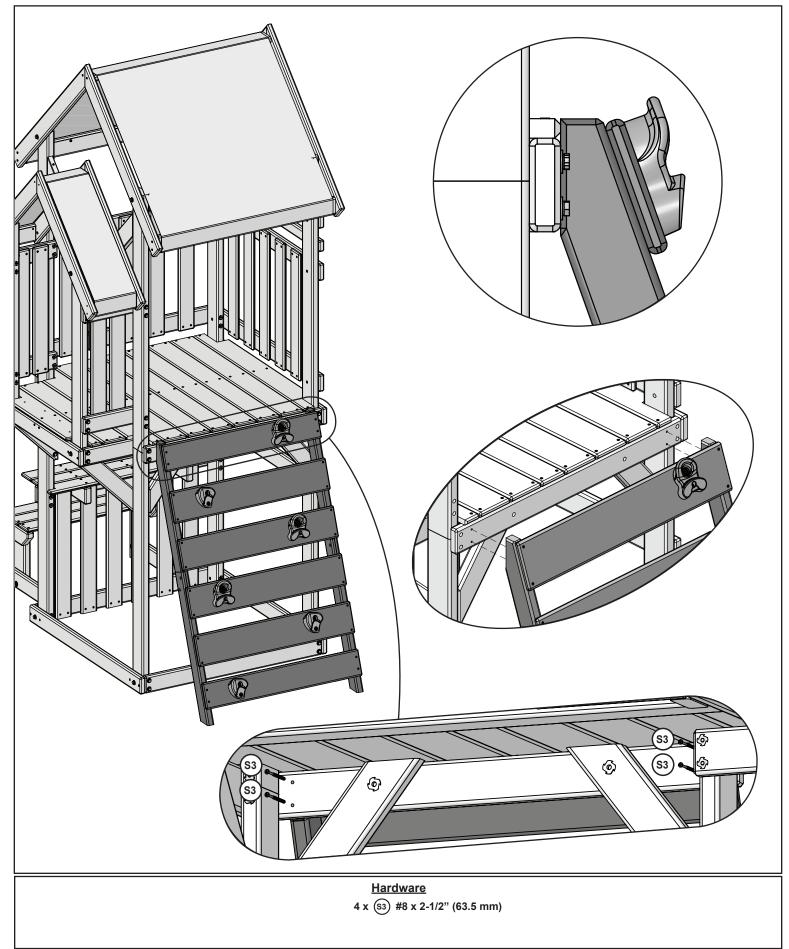


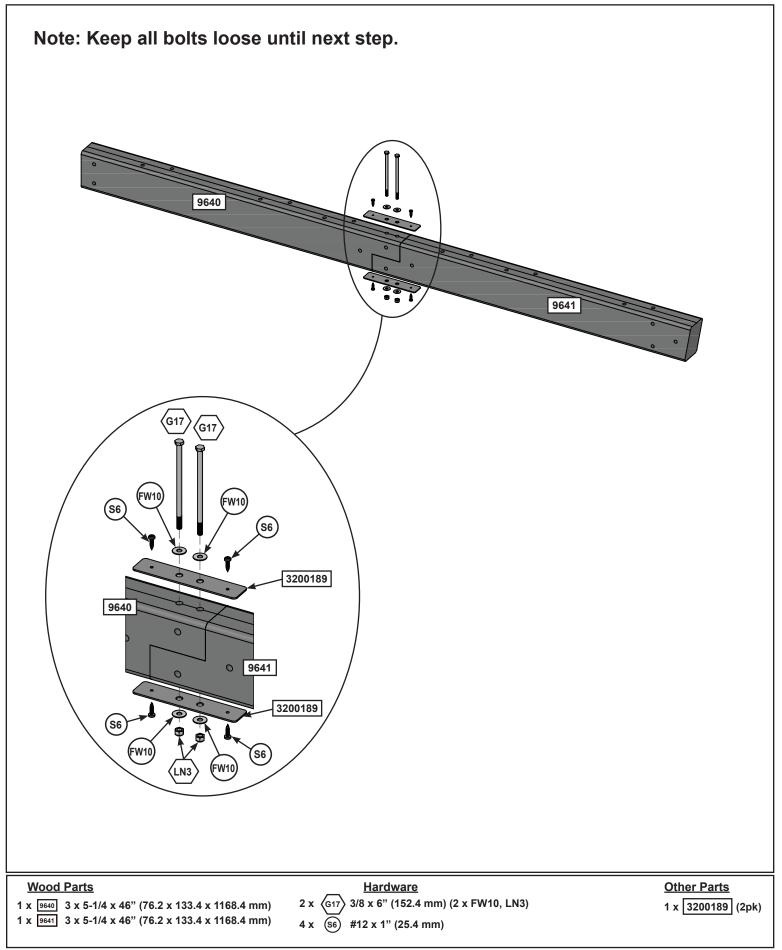


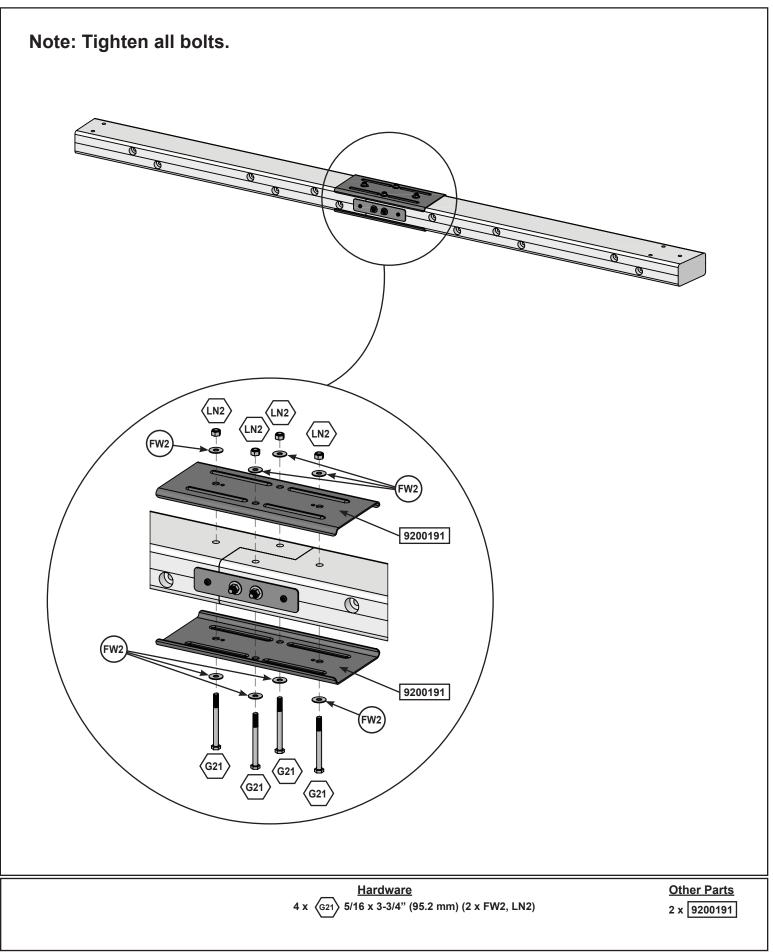


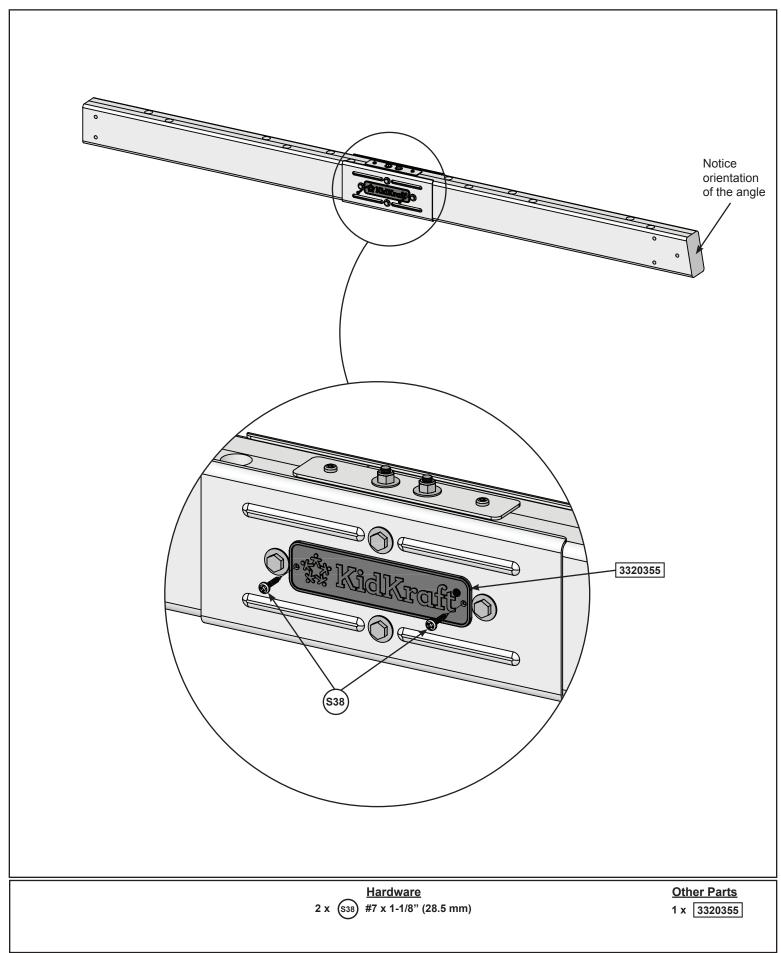





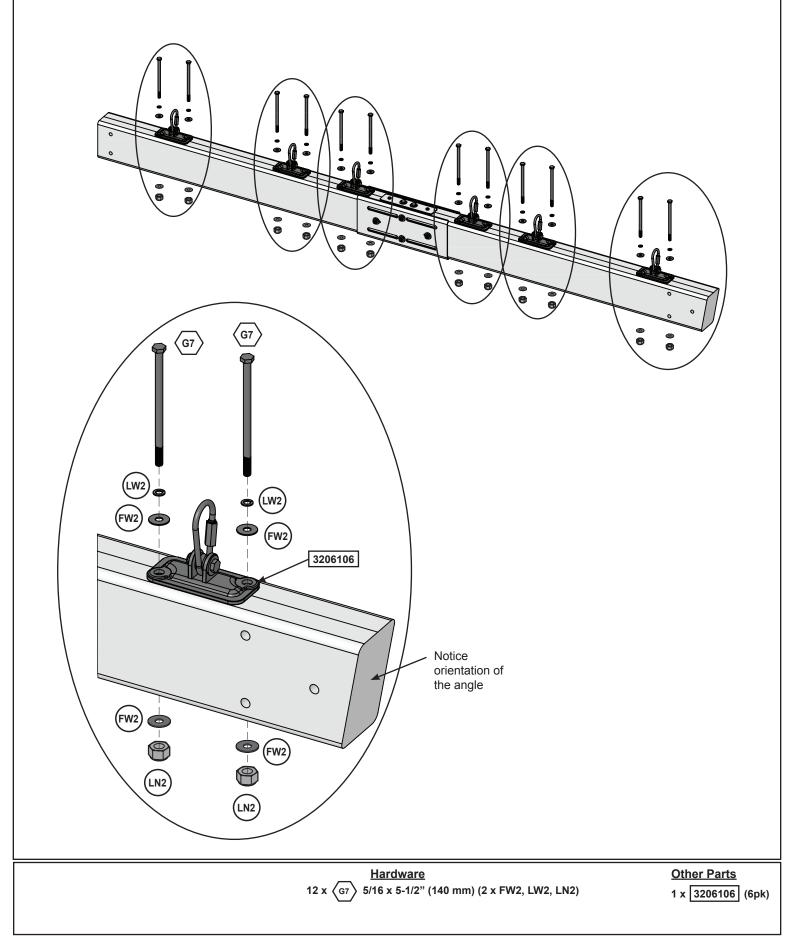


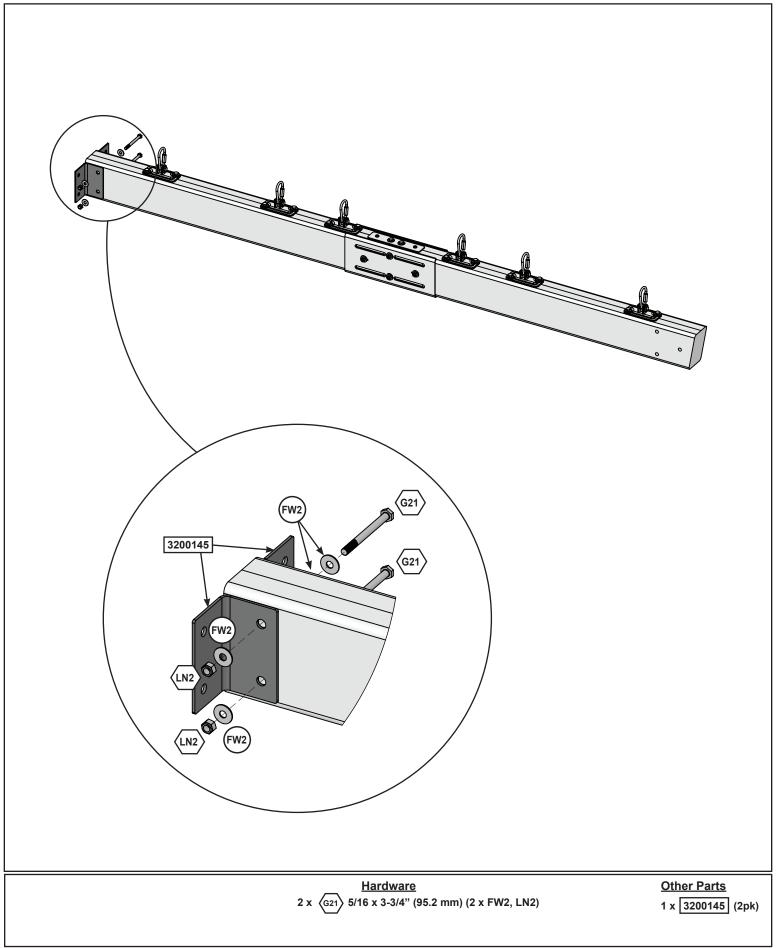

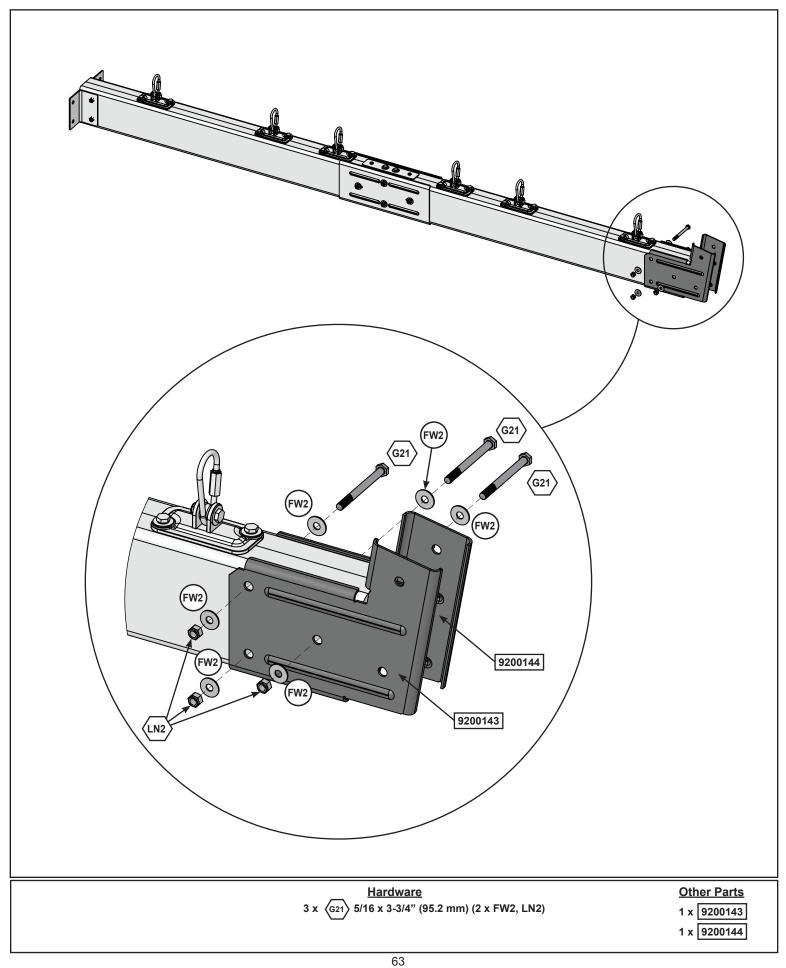


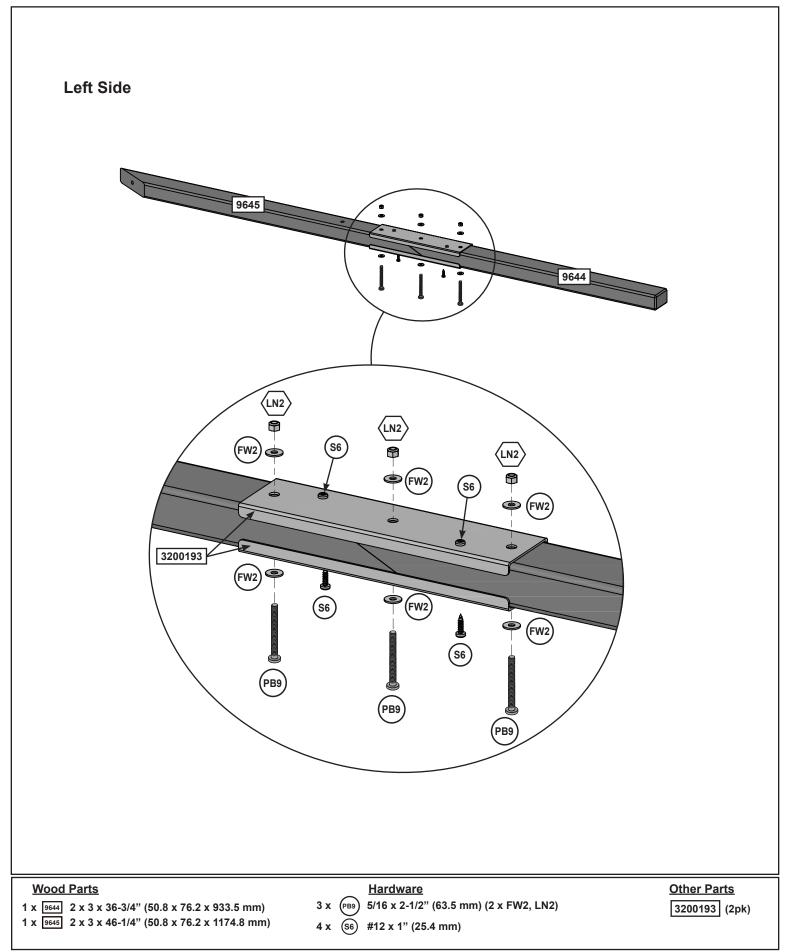

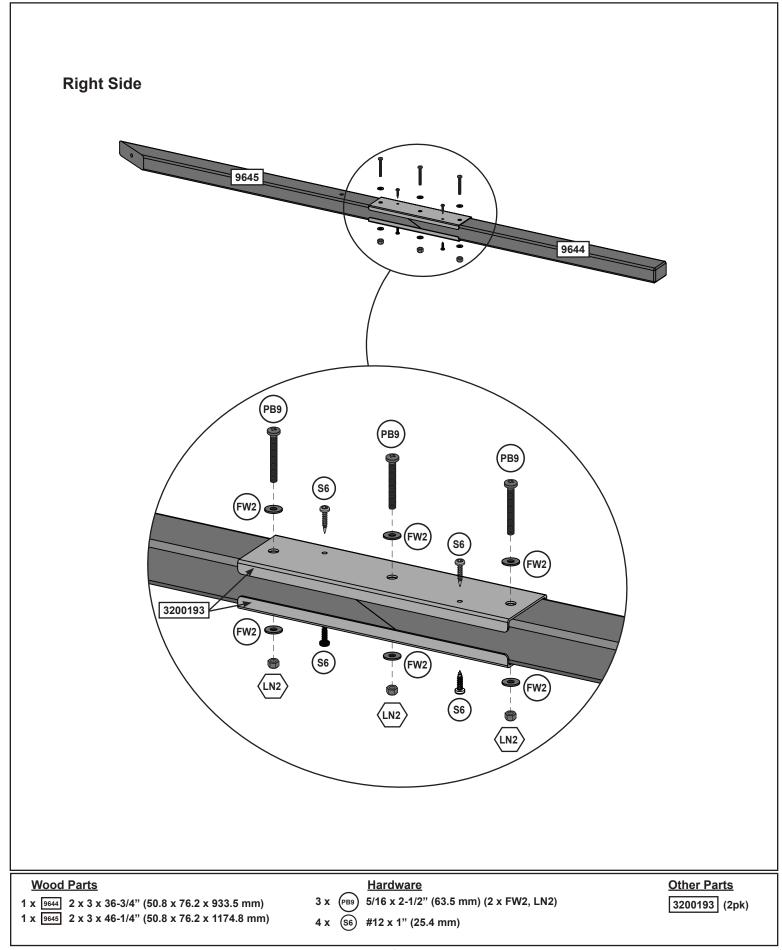

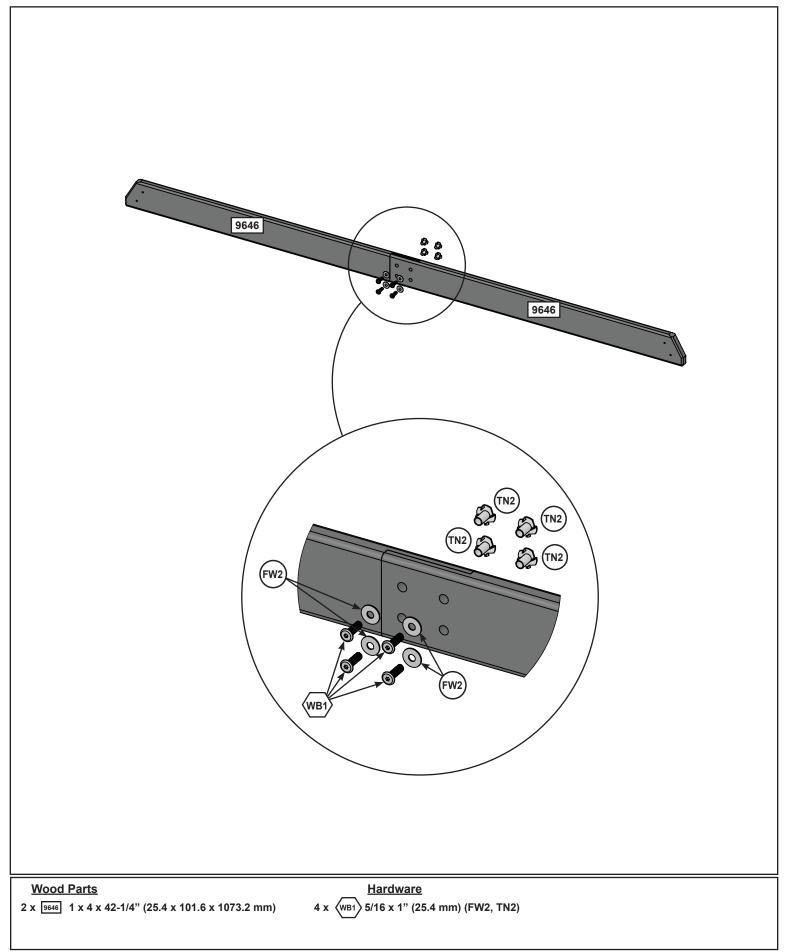

Notice

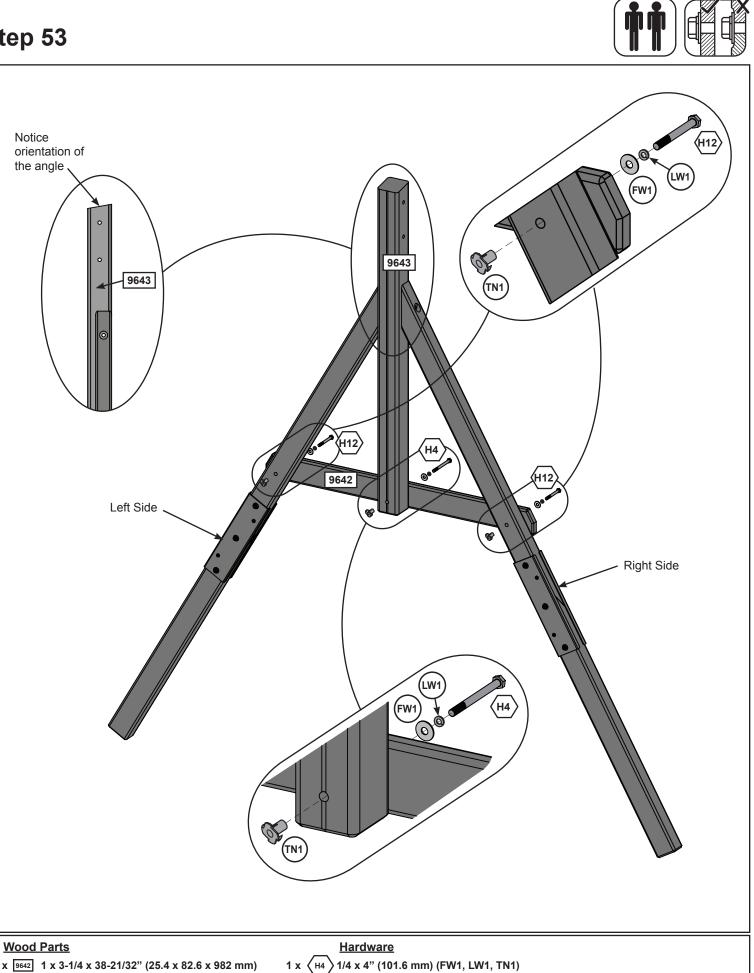

67


2 x (H12) 1/4 x 3" (76.2 mm) (FW1, LW1, TN1)

1 x (H4)


1 x 9642 1 x 3-1/4 x 38-21/32" (25.4 x 82.6 x 982 mm)

1 x 9643 3 x 3 x 44-1/4" (76.2 x 76.2 x 1124 mm)




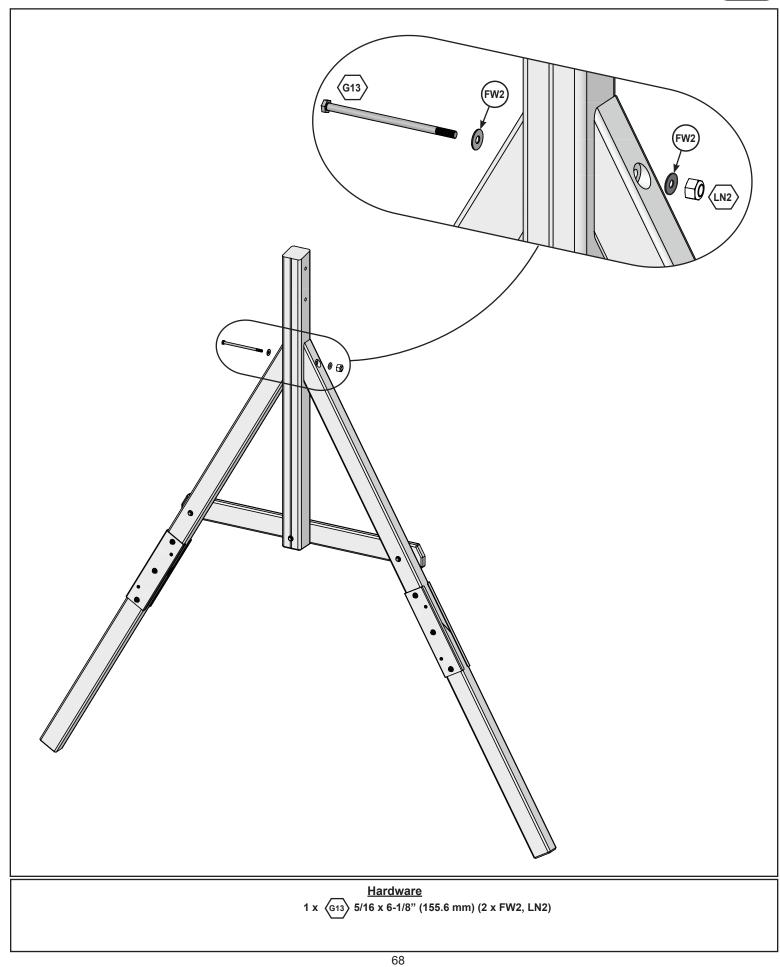




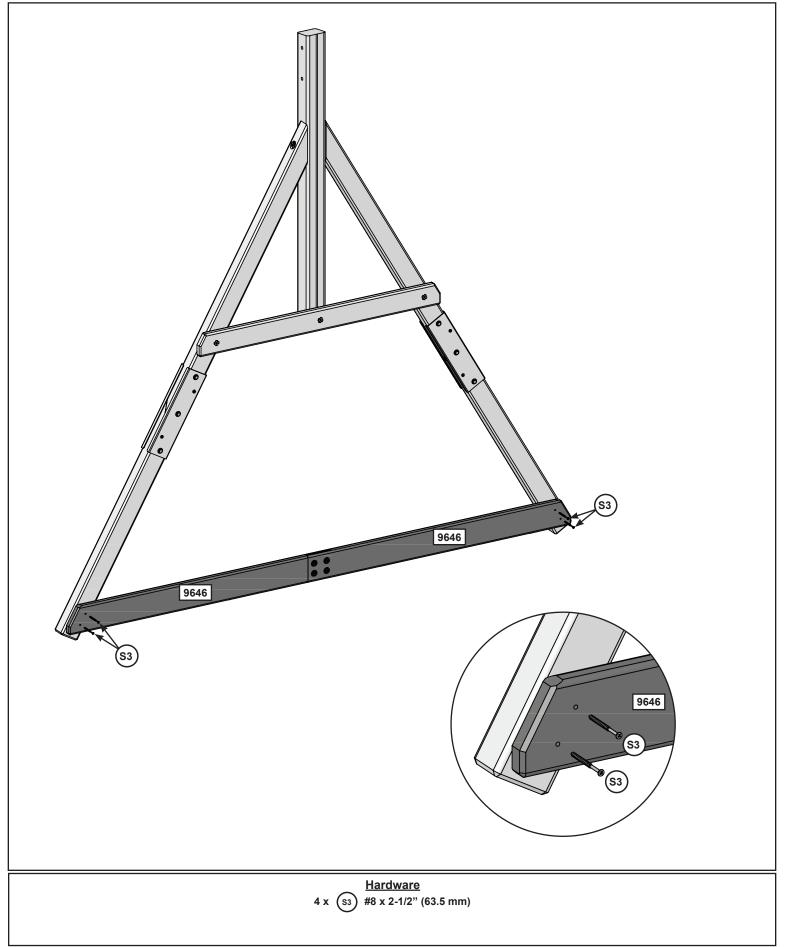





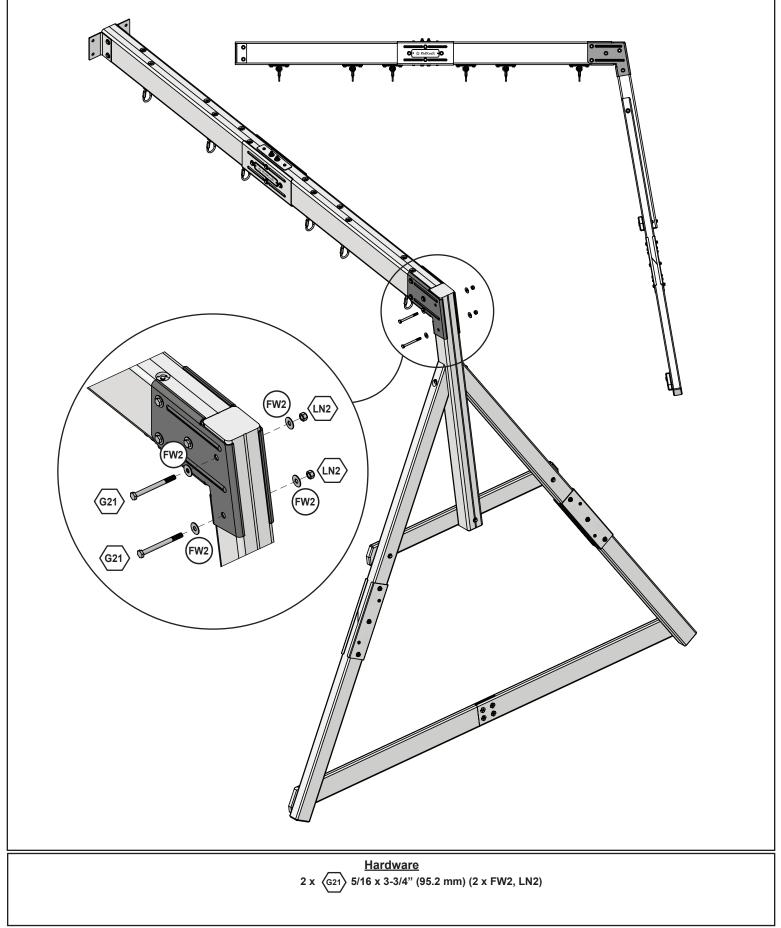




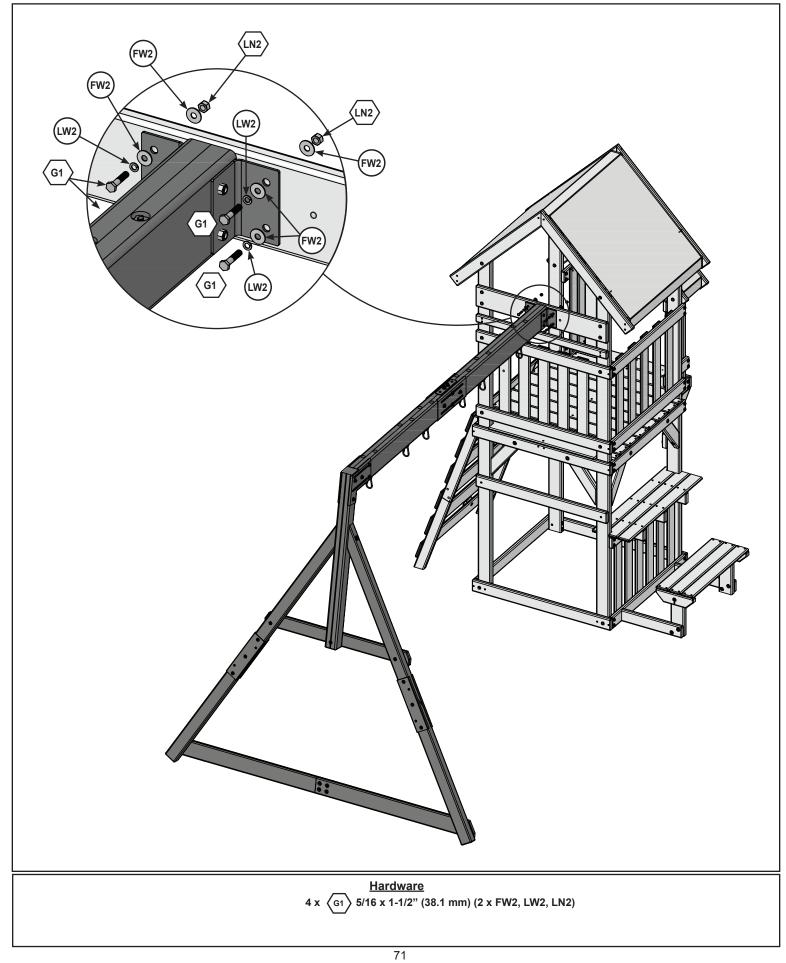

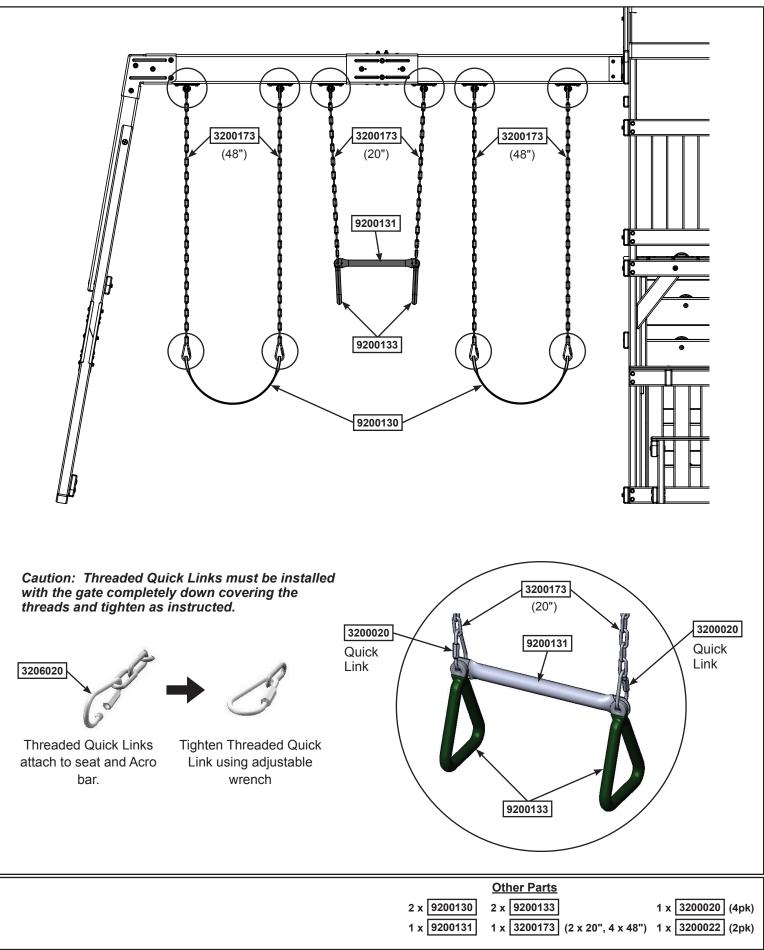

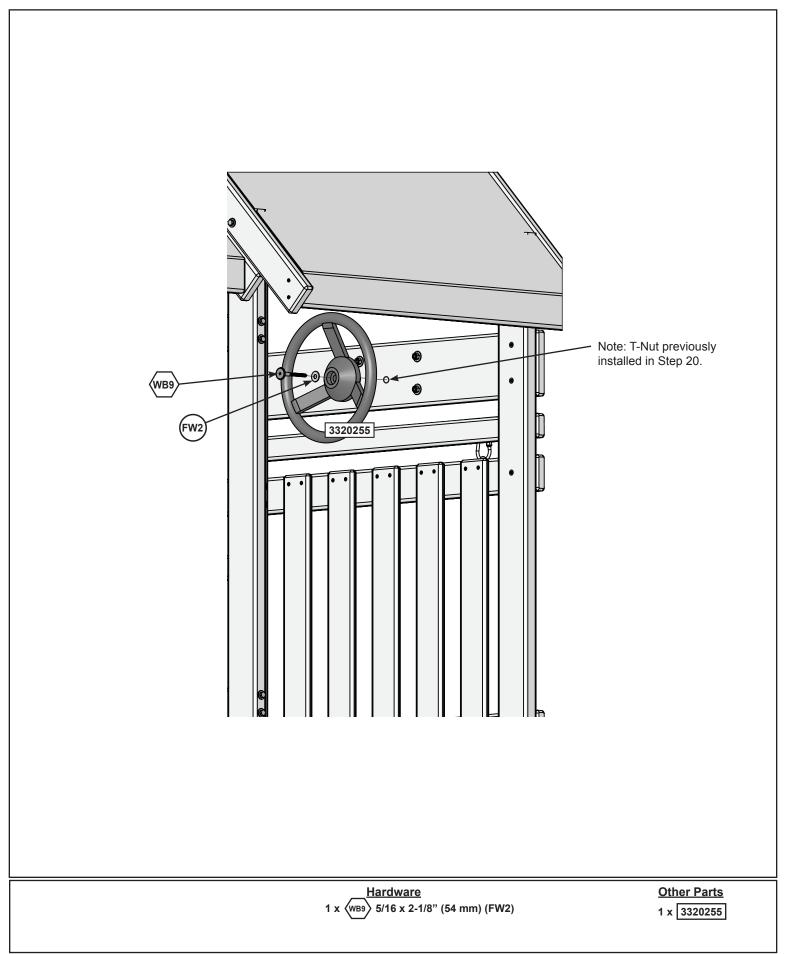





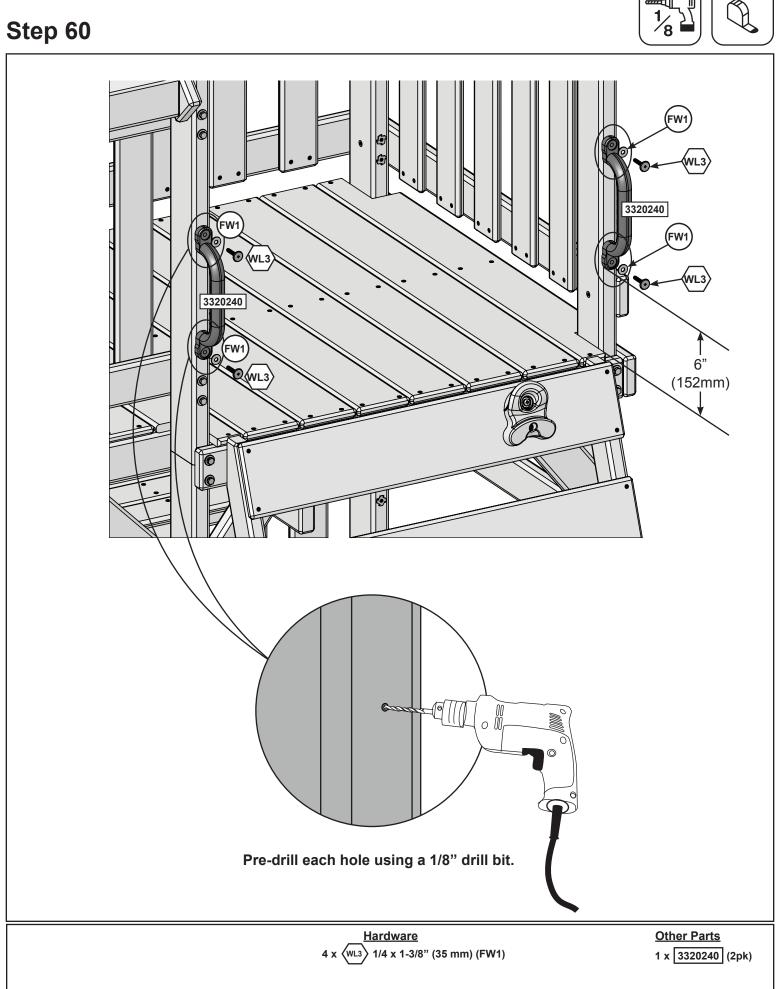






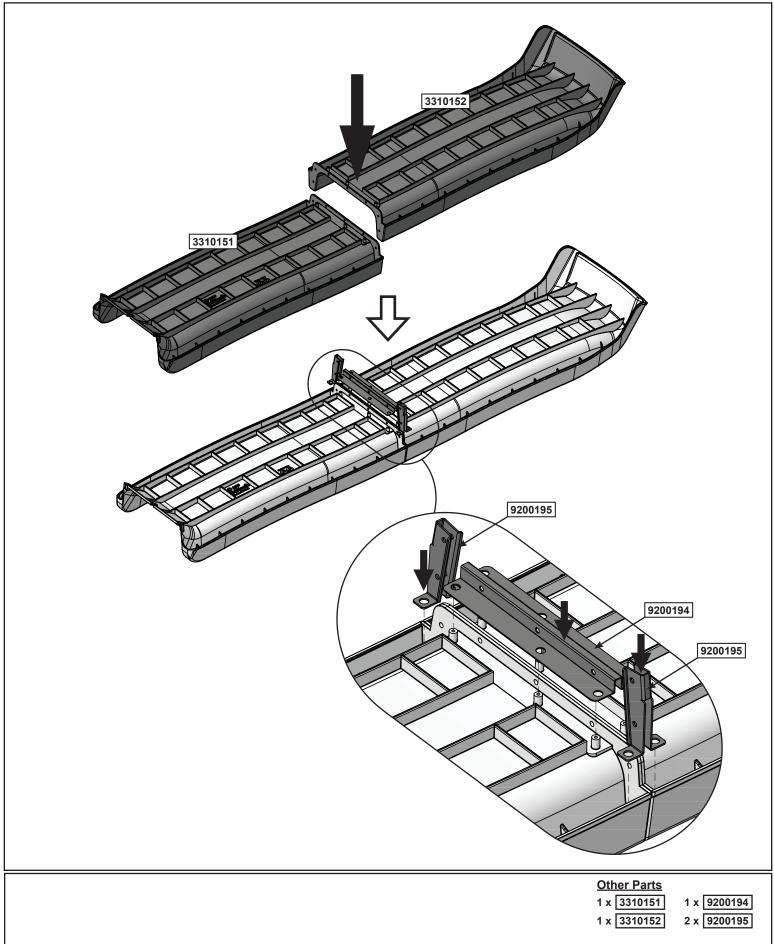

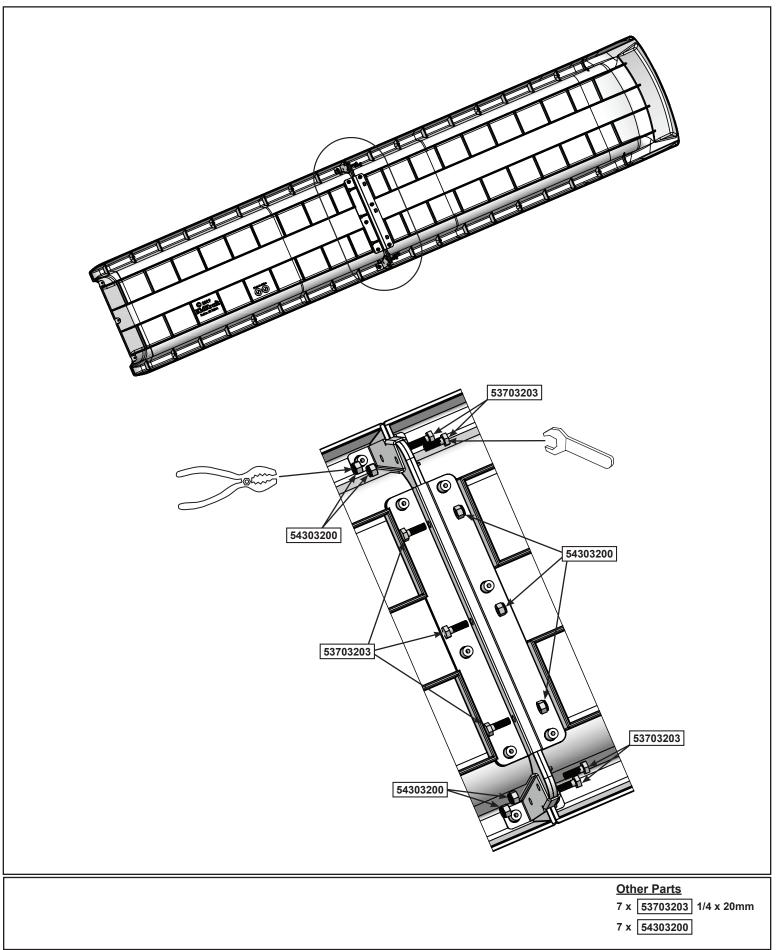


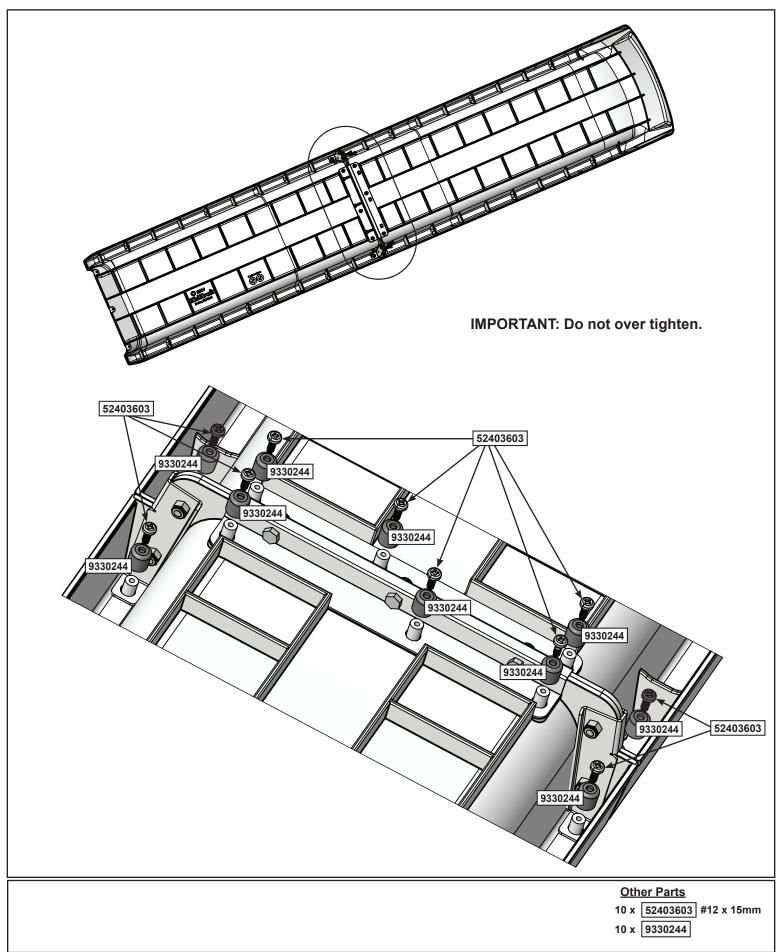




Note: Pre-drill all holes using a 1/8" drill bit before installing the pan screws.

Place Slide centred in the opening.

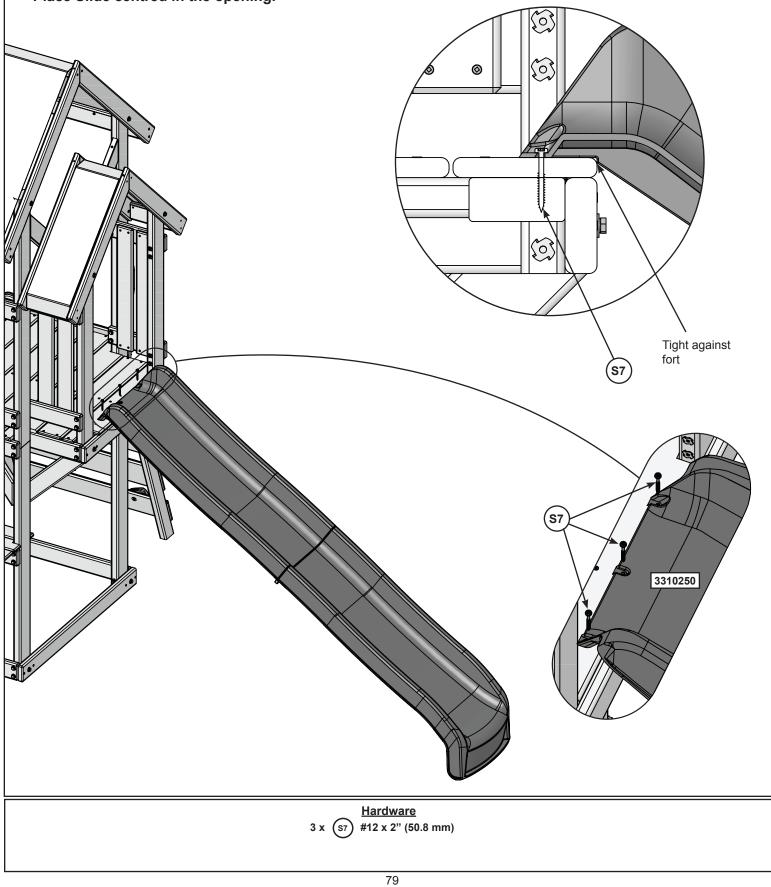

# Step 66

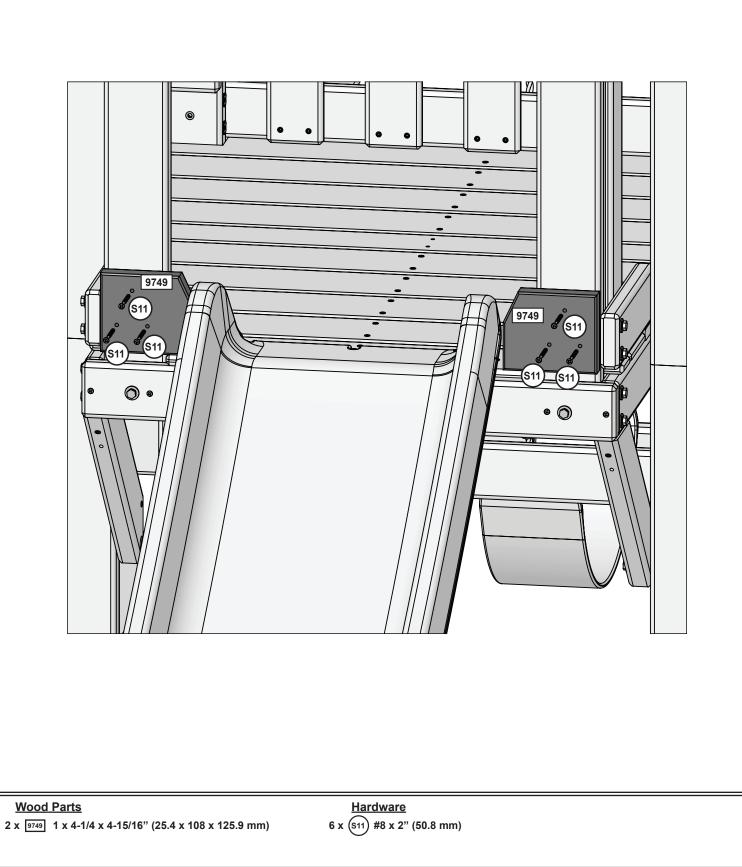

#### **ATTACH THIS WARNING & I.D. PLAQUE** TO THIS LOCATION ON YOUR PLAY **EQUIPMENT!**

This provides warnings concerning safety and important contact information. A Tracking Number is provided to allow you to get critical information or order replacement parts for this specific model.

## **WARNING** AVERTISSEMENT

#### CONTINUOUS ADULT SUPERVISION REQUIRED!

#### STRANGULATION HAZARDS

Never allow children to play with ropes, dotheslines, pet leashes, cables, chains or cord-like items when using this playset or to attach these items to play-set.

Never allow children to wear loose fitting clothing, ponchos, hoods, scarves, capes, necklaces, or items with draw-strings, cords or ties when using this play-set.

Never allow children to wear bike or sport helmets when using

Failure to prohibit these items increases the risk of serious injury and death to children from entanglement

#### and strangulation.

SERIOUS HEAD INJURY HAZARD Maintain shock absorbing material under and around play-set as recommended in the Installation & Operating Instructions. Installation over concrete, asphalt, dirt, grass, carpet and other hard surfaces creates a risk of serious injury or death from falls to the ground.

### SURVEILLANCE CONSTANTE D'ADULTES EST REQUIS!

#### Risques D'étranglement

Ne jamais laisser les enfants jouer avec des cordes, cordes à linge, laisses pour animaux, des câbles, des chaînes ou ces type articles pendant de l'utilisation de cet portique de jeu ou à tattaché de ces éléments à la portique de jeu.

Ne jamais laissez les enfants de porter des vêtements amples, des ponchos, des hottes, des foulards, capes, des colliers ou des articles avec cordes attirent ou les cordons pendant l'utilisation de cet portique de jeu.

Ne jamais laissez les enfants porter un casque de vélo oude sport quand ils utilisent ce portique de jue. Défaut d'interdire ces éléments augmente le risque de blessures graves et de décès des enfants de enchevêtrement et d'étrangierment.

RISQUE DE BLESSURES GRAVES DU TÊTE Maintenir le matériau absorbant les chocs sous et autour de la mantenin le materia dusordantes trices sous le autou de la portique de jeu comme recommandé dansiesinstructions D'installation.Installation sur béton, de l'asphalte, sol, de l'herbe, tapis et autres surfaces hdure crée un risque de blessure à la tête graves ou la mort causé par tomber à la sol.


THIS PRODUCT IS INTENDED FOR USE BY CHILDREN FROM AGES 3 TO 10; weight limit of 110 lbs. per child. Maximum number of users, Installation & Operating Instructions; other information is emilible active available at


POUR LES ENFANTS DE 3 À 10 ANS D'ÂGE; limite de 110 Livres par enfant. Nombre maximum d' utilisateurs, installation et d'utilisation; d'autres informations sont disponibles sur:

 $\bigcirc$ 

www.KidKraft.com Ο Contact us at: KidKraft Dallas, TX 75244 USA 1-800-933-0771



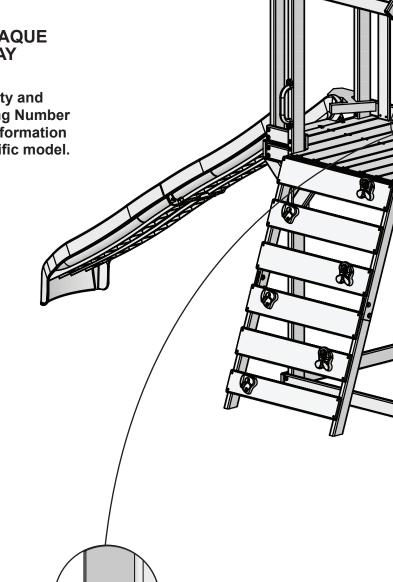


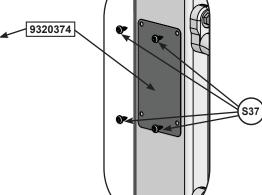

**Other Parts** 1 x 9320374

# Step 68



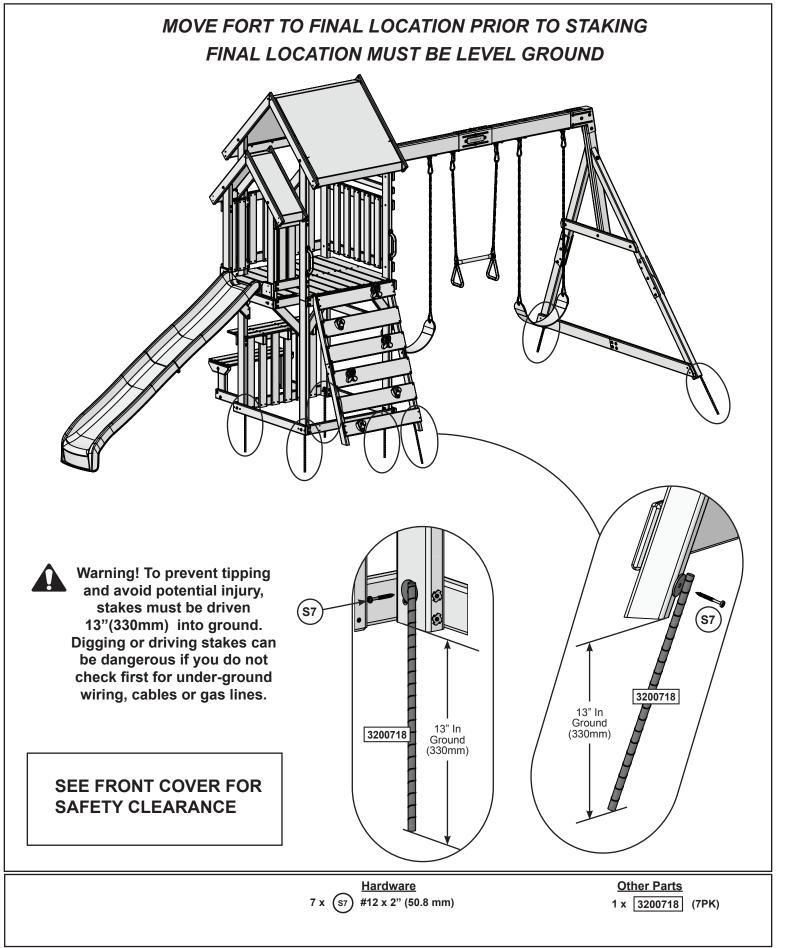

NOTES		

#### KIDKRAFT Consumer Registration Card

First Name	Initial	Last Name	
Street		Apt. No.	
City		State/Province ZIP/Postal Code	
Country		Telephone Number	
E-Mail Address			
Model Name		Model Number (Box Labels)	
Serial Number (on ID Plaque)			
Date Purchase Purchased From			
MM / DD / YY			
How would you rate this product for quality?			
How would you rate this product for ease of assembly?			
How would you rate our instructions?	Ave	erage 🛛 Below Average 💭 Poor	
How would you rate the quality of packaging?	Ave	erage 🛛 Below Average 💭 Poor	
Would you recommend the purchase of our products to friends and family?			
Comments:			



MAIL TO: KidKraft 4630 Olin Road Dallas, TX 75244 United States Attention: Customer Service

# Fill out your registration card online at https://prdregistration.kidkraft.com/

CUT ALONG LINE

KidKraft would like to say Thank You for your time and feedback.