

88 5528 41

Colonial Classic


Chest

IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damage occuring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

Home
Styles

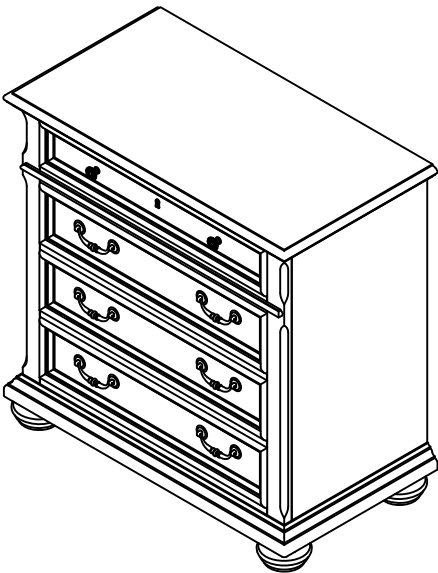

Part List

A.
Top
1 pc.

B.
Side Panel
1 pc.

C.
Side Panel
1 pc.

L.
Bottom
1 pc.

E.
Front Piece
1 pc.

G.
Front Piece
1 pc.

K.
Back Panel
2 pcs.

J.
Back Piece
1 pc.

I.
Back Piece
1 pc.

H.
Back Piece
1 pc.

M.
Leg
4 pcs.

D.
Front Piece
1 pc.


F.
Front Piece
2 pcs.

N.
Drawer
1 pc.


O.
Drawer
3 pcs.

(Please refer to the last page of instructions for steps to complete drawer assembly)


Hardware List




Cam Lock Screw
15 pcs. (+1 extra)




Cam Lock
15 pcs. (+1 extra)




1 1/2" Round Head Screw
1 pc. (+1 extra)




1" Round Head Screw
17 pcs. (+1 extra)




1/2" Round Head Screw
9 pcs. (+1 extra)




2" Flat Head Screw
6 pcs. (+1 extra)




1 1/4" Flat Head Screw
32 pcs. (+1 extra)




3/4" Flat Head Screw
24 pcs. (+1 extra)




1/2" Flat Head Screw
8 pcs. (+1 extra)




Machine Screw (Long)
2 pcs.




Handle
2 pcs.




Machine Screw (Short)
12 pcs.




Handle
6 pcs.




Wedge
8 pcs. (+1 extra)




Anchor
1 pc. (+1 extra)



Flat Washer
2 pcs. (+1 extra)



Tipping Restraint
1 pc.



Wooden Dowel
8 pcs. (+1 extra)

Tools Required For Assembly : Phillips screwdriver

Tools Recommended For Assembly : Level


Home Styles Consumer Assistance: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

C4D. 2628 / 13 / 01

Assembly Instructions 2/9

IMPORTANT

- * Do not tighten up all the screws until each part is properly assembled.
- * Use a soft cloth between these parts and the floor.
- * After assembly, item must be level to work properly.
Use the included adjustable levellers to level.

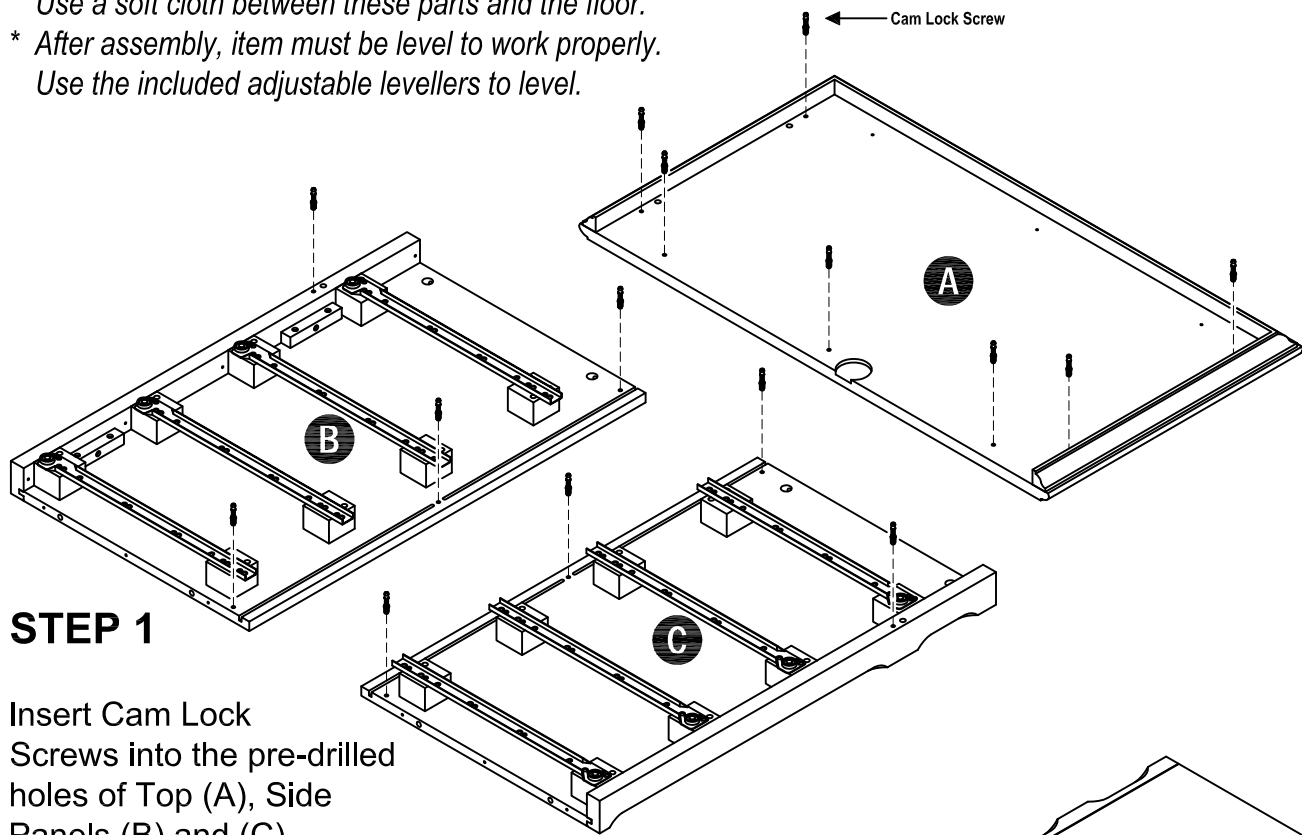

STEP 1

Insert Cam Lock Screws into the pre-drilled holes of Top (A), Side Panels (B) and (C).


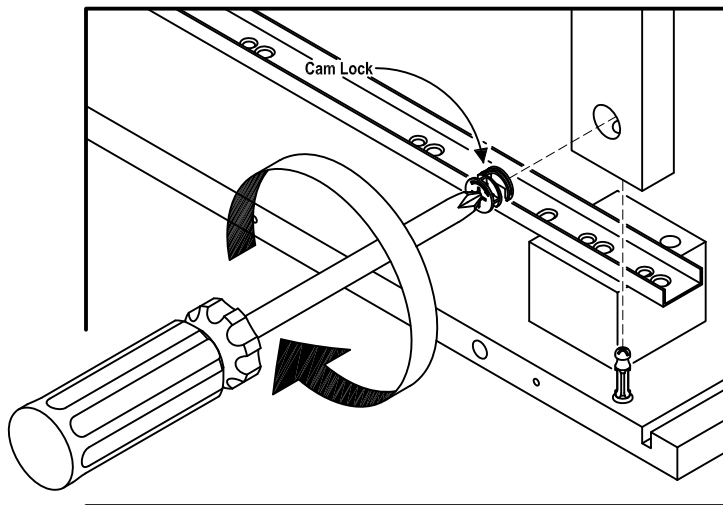



Figure 1

STEP 2

Attach Front Piece (E) and Back Pieces (H), (I) and (J) to Side Panel (B) with Cam Locks. (see Figure 1)

Attach Side Panel (C) to unit with Cam Locks.

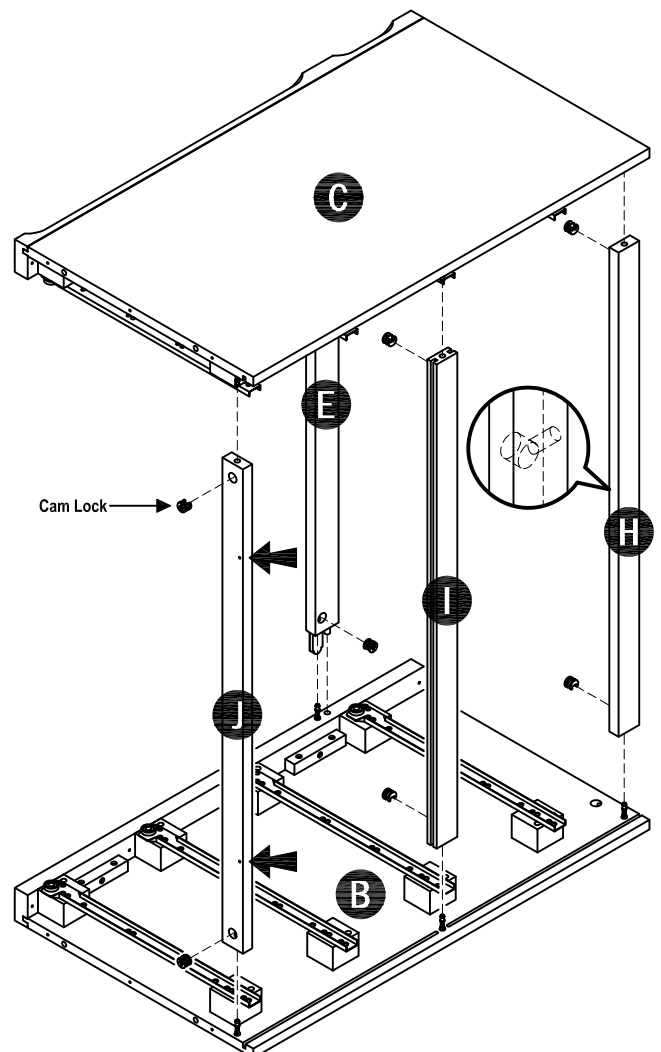


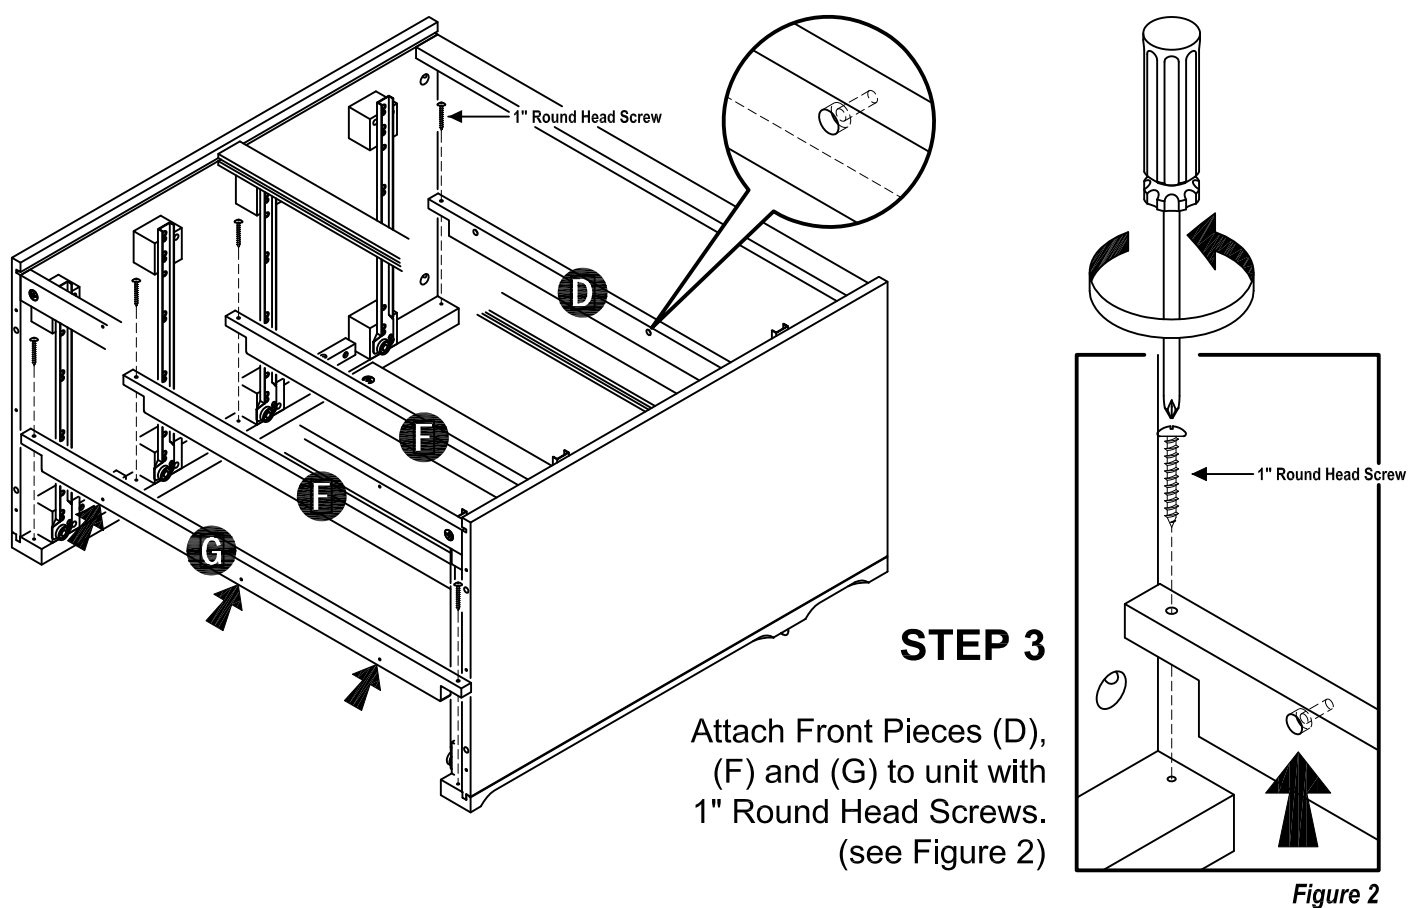

STEP 4


Slide Back Panels (K) into the groove of unit.

Note: Insert Back Panels (K) so that the holes in Back Panels (K) are at the top and bottom of the unit.

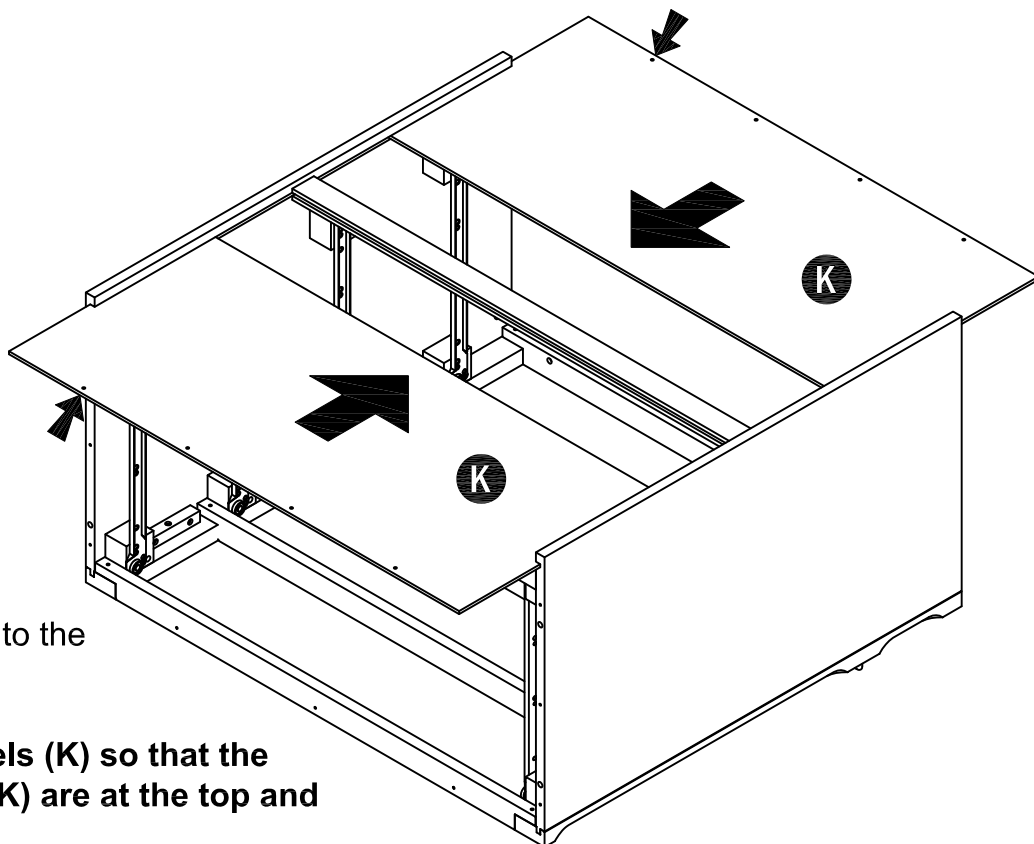


STEP 5

Attach Top (A) to unit with Cam Locks, 1" Round Head Screws and Wooden Dowels.

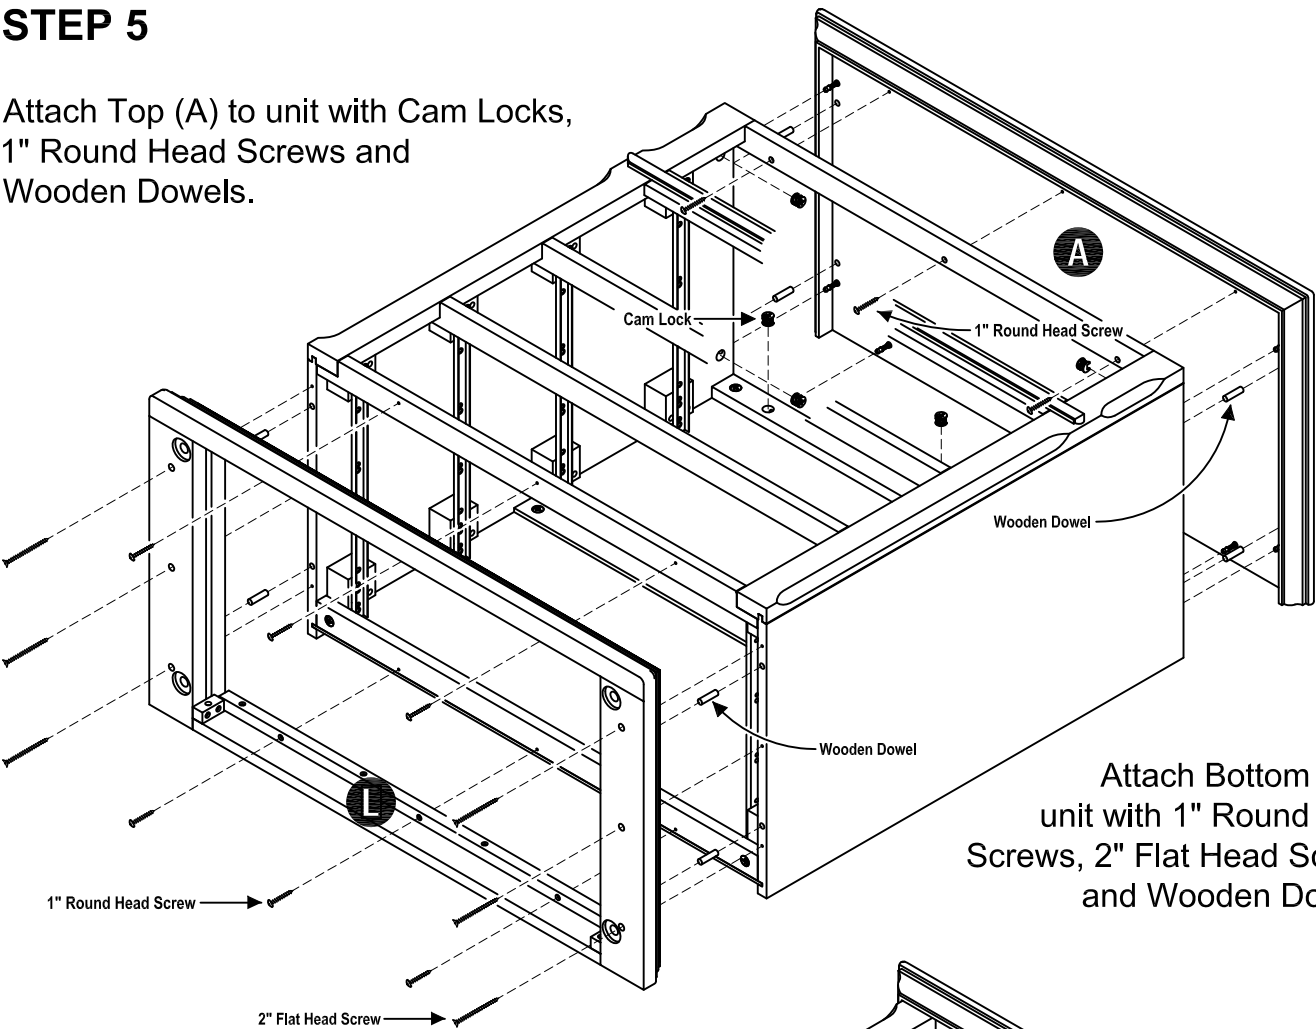

Attach Bottom (L) to unit with 1" Round Head Screws, 2" Flat Head Screws and Wooden Dowels.

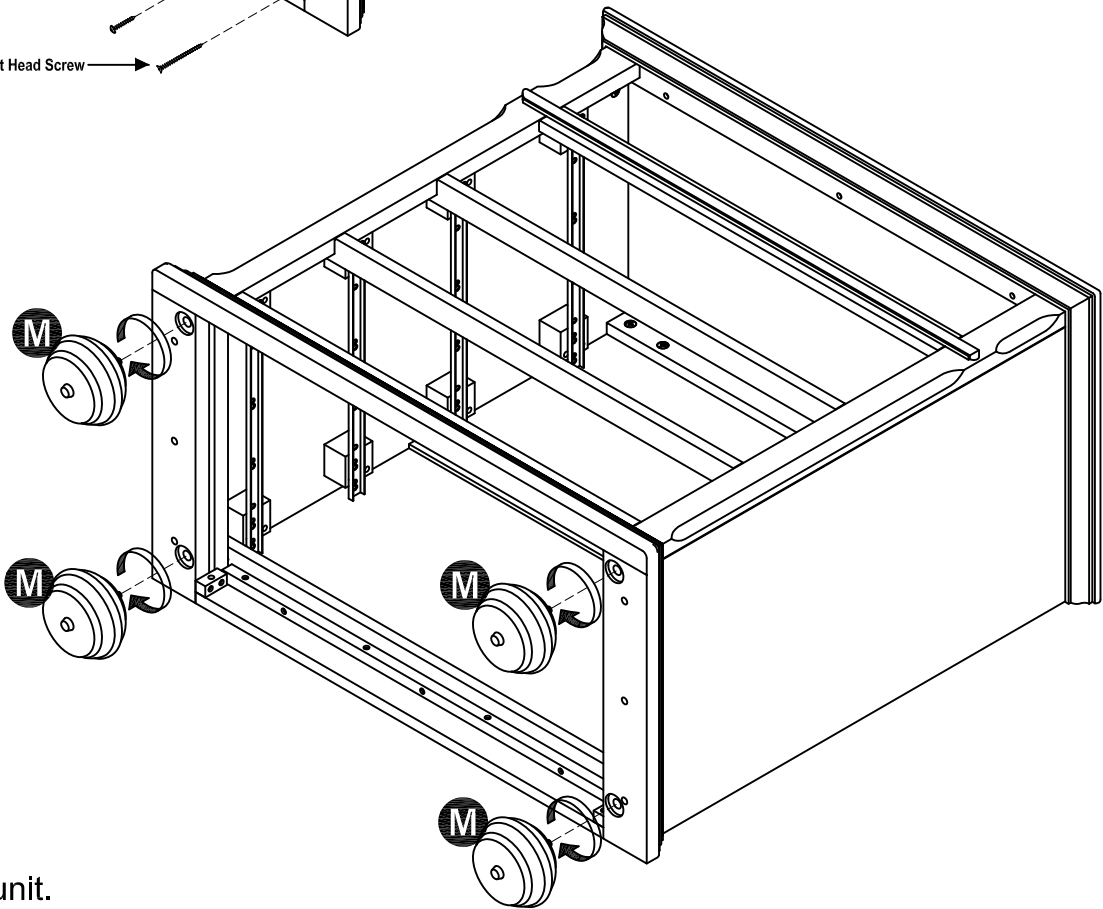

STEP 6

Attach Legs (M) to unit.

STEP 7

To level the unit, adjust the adjustable levelers on the bottom.

Note: Unit must be level to work properly.
(see Figure 3)

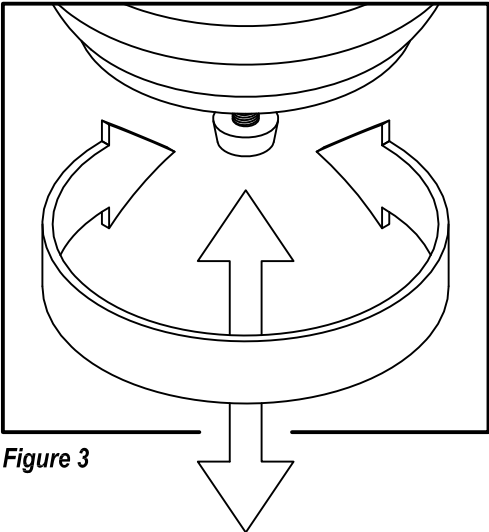


Figure 3


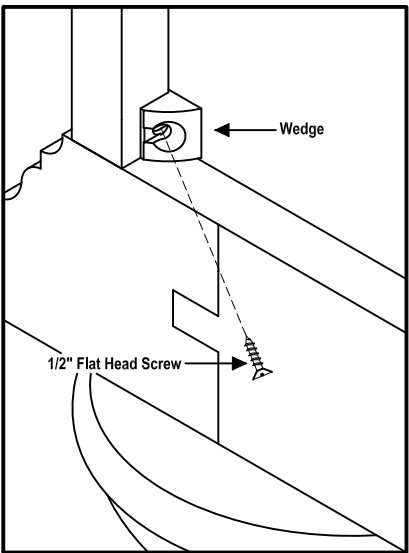


Figure 4

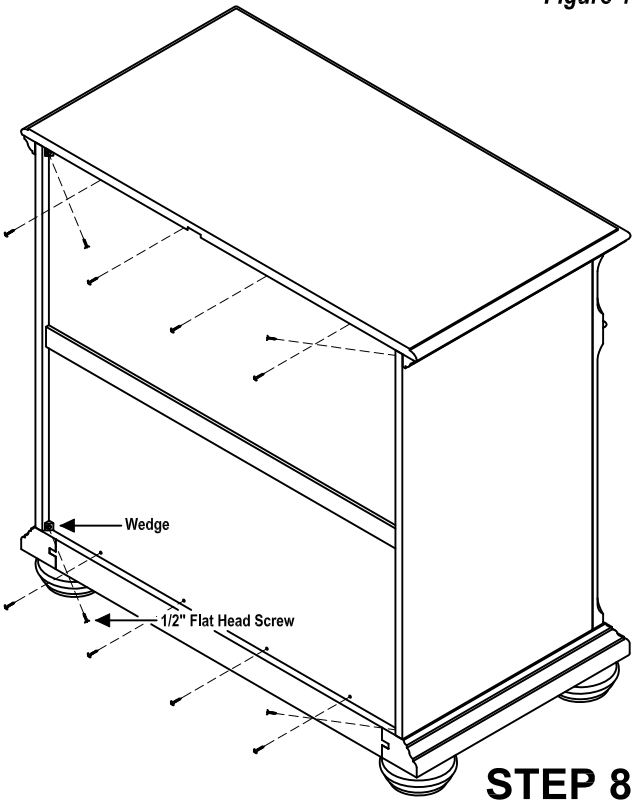


STEP 8

Attach 1/2" Round Head Screws to unit.

Attach Wedges to unit with 1/2" Flat Head Screws.
(see Figure 4)


STEP 9

Slide Drawers (N) and (O) into place.

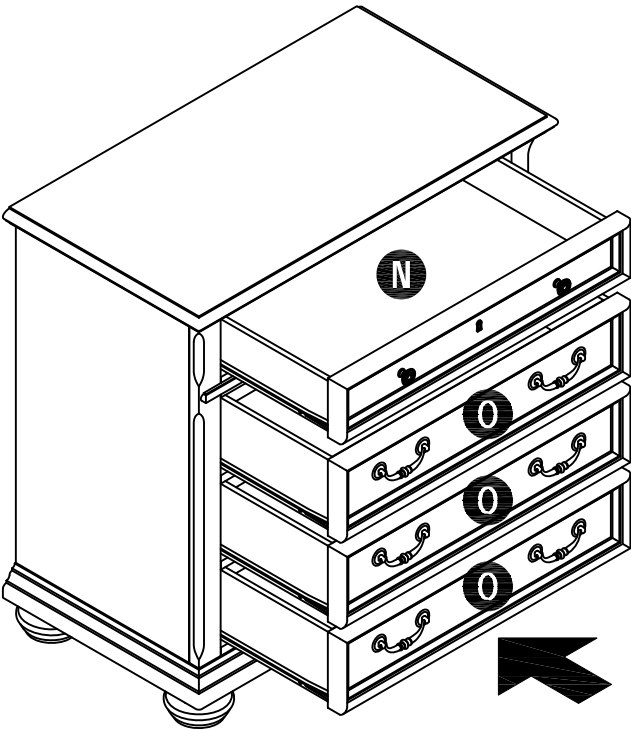


ATTENTION!


For safety reasons, please follow these instructions to prevent the unit from tipping over.

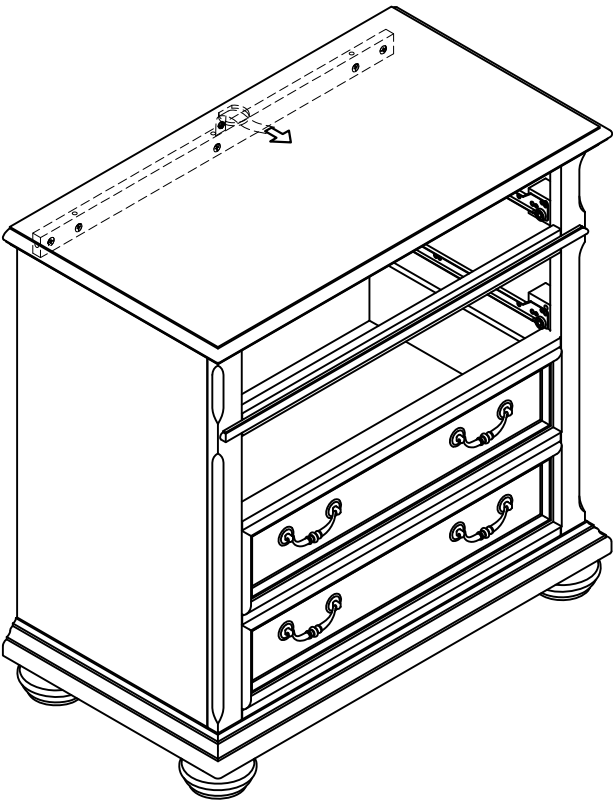


Remove Drawers (N) and (O) from unit.

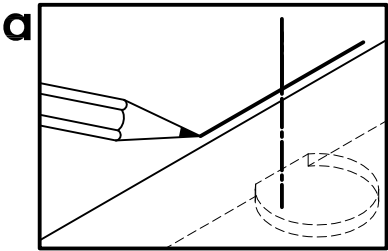


Place the unit on the wall at desired location. Mark with pencil to show the height and position of hole at Top (A).

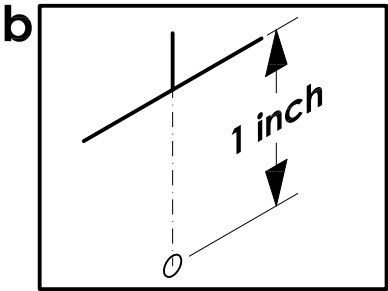


Move unit. Drill a 1/2" hole in the wall, 1 inches down and directly below the mark.

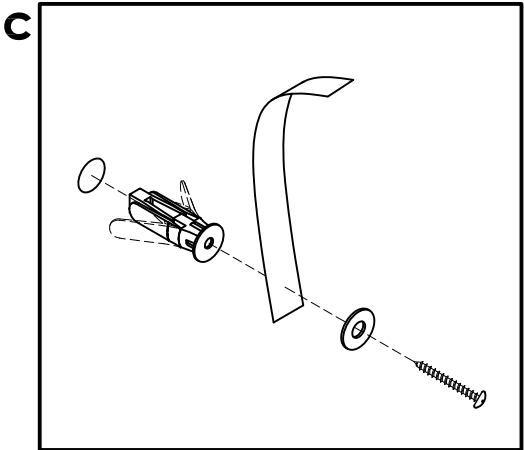


Attach Tipping Restraint to the wall with 1 1/2" Round Head Screw, Flat Washer and Anchor.

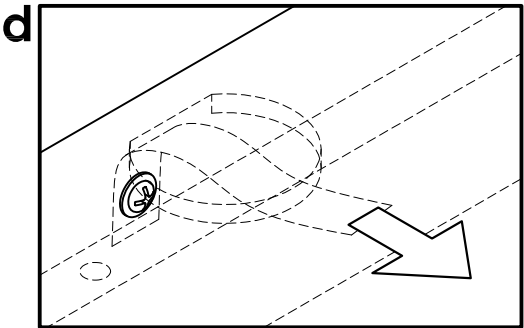

Insert Tipping Restraint to unit through the hole of Top (A).

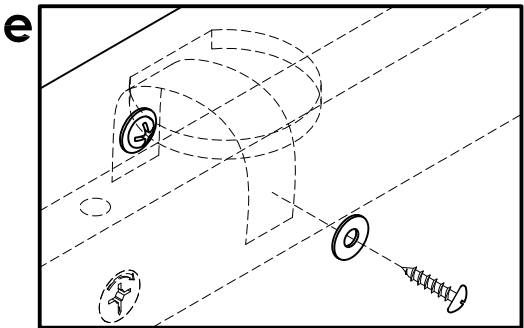


Screw Tipping Restraint to unit with 1/2" Round Head Screw & Flat Washer.

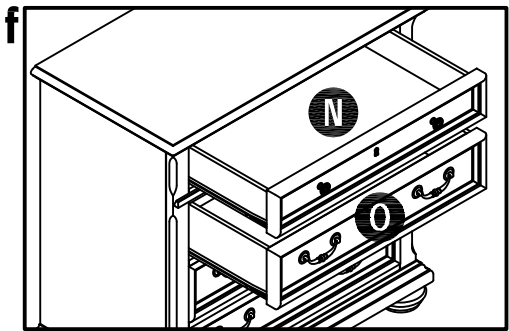

Insert drawers (N) and (O) into unit.


Drawer (N)

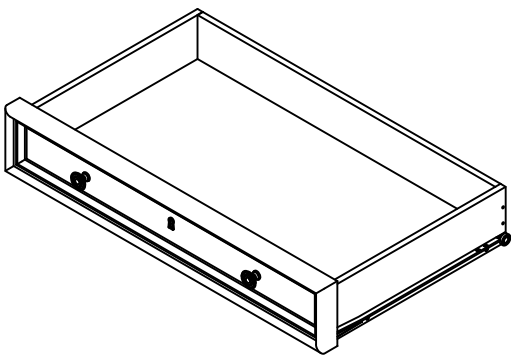

STEP 1

Attach Base Part (N6) to Front Part (N1) and Back Part (N2).



Attach Side Part (N3) to Front Part (N1) and Back Part (N2) with 1 1/4" Flat Head Screws.

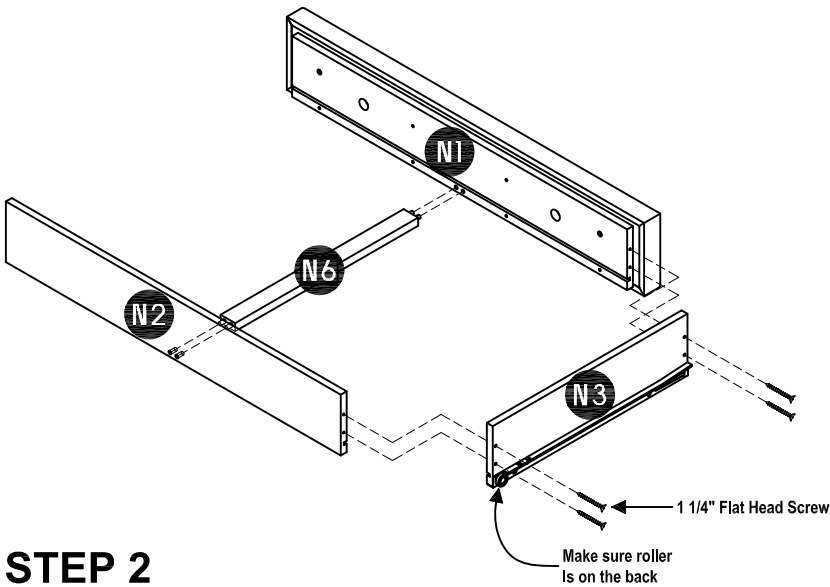

STEP 2

Insert Base Part (N5) into the groove.

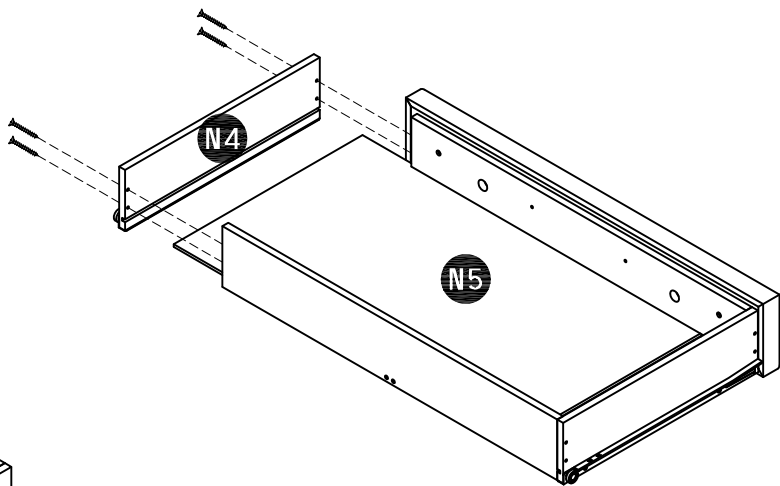
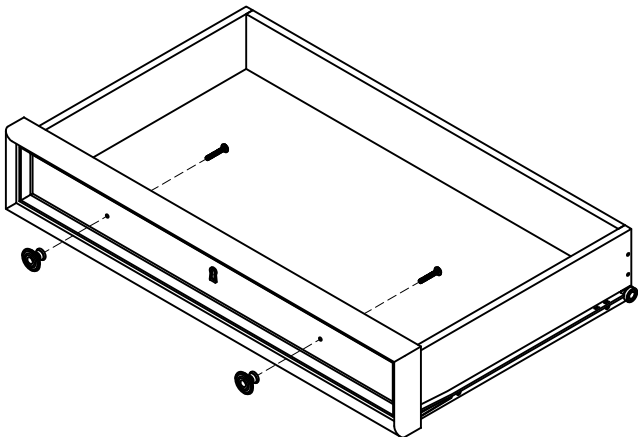




Attach Side Part (N4) to unit with 1 1/4" Flat Head Screws.





STEP 3

Attach Handle with Machine Screws (Long).

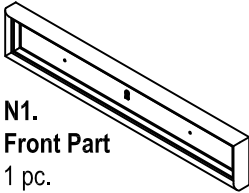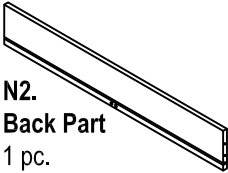Part List

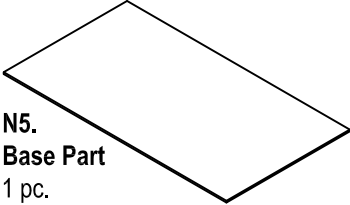					
N1. Front Part 1 pc.	N2. Back Part 1 pc.	N3. Side Part 1 pc.	N4. Side Part 1 pc.	N5. Base Part 1 pc.	N6. Base Part 1 pc.



Drawer (O)

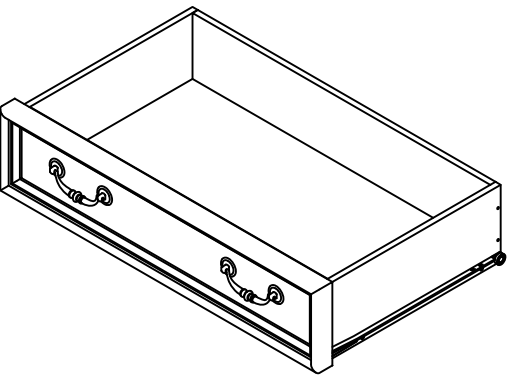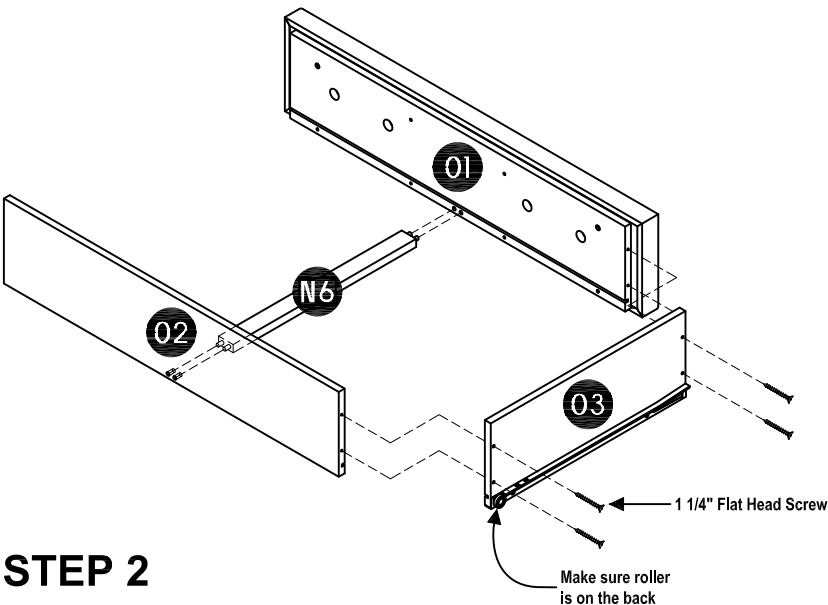

STEP 1

Attach Base Part (N6) to Front Part (O1) and Back Part (O2).


Attach Side Part (O3) to Front Part (O1) and Back Part (O2) with 1 1/4" Flat Head Screws.

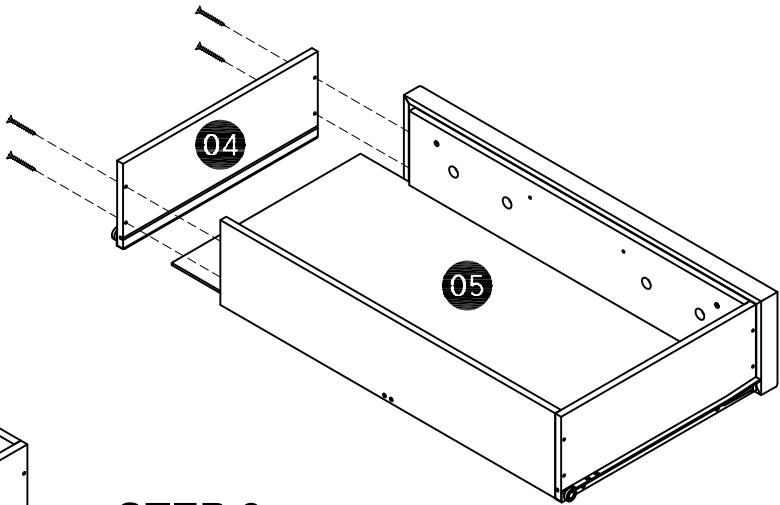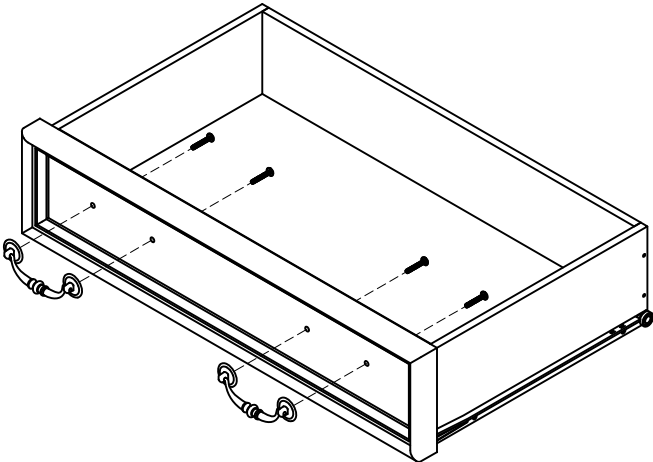

STEP 3



Attach Handle with Machine Screws (Short).

Part List						
O1. Front Part 3 pcs.	O2. Back Part 3 pcs.	O3. Side Part 3 pcs.	O4. Side Part 3 pcs.	O5. Base Part 3 pcs.	N6. Base Part 3 pcs.	

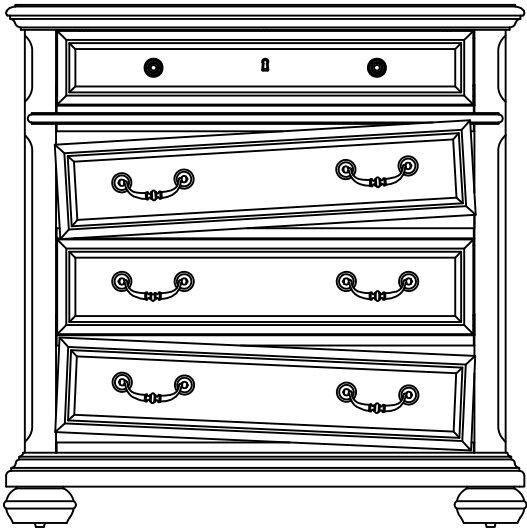

I. IF A DRAWER DOES NOT ALIGN STEP 1


Loosen slightly the upper screws.

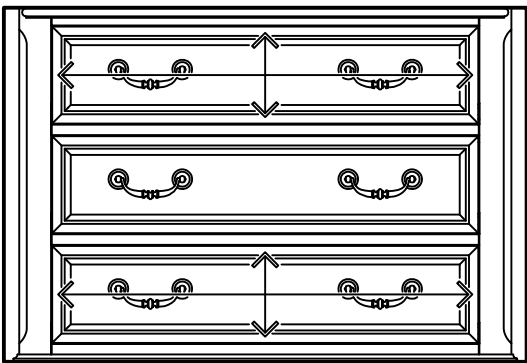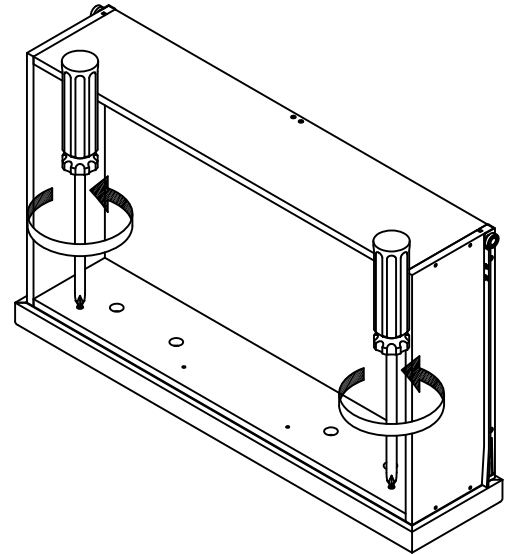


STEP 2

Insert the drawer into the main body, then adjust the drawer front panel left or right and up or down, until the drawer gaps look proportional.

II. IF A DRAWER ALREADY ALIGNS

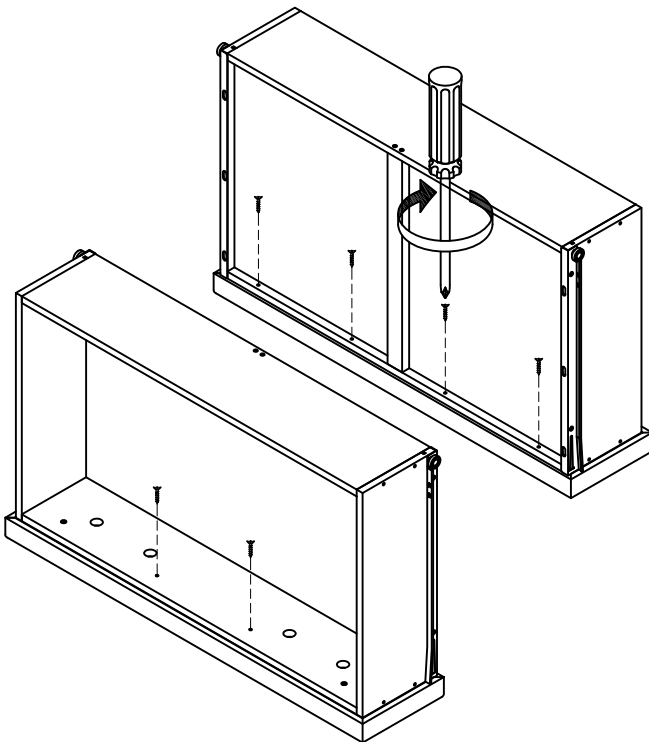

Pull out drawer slowly. Lock the drawer front panel into position with 3/4" Flat Head Screws.

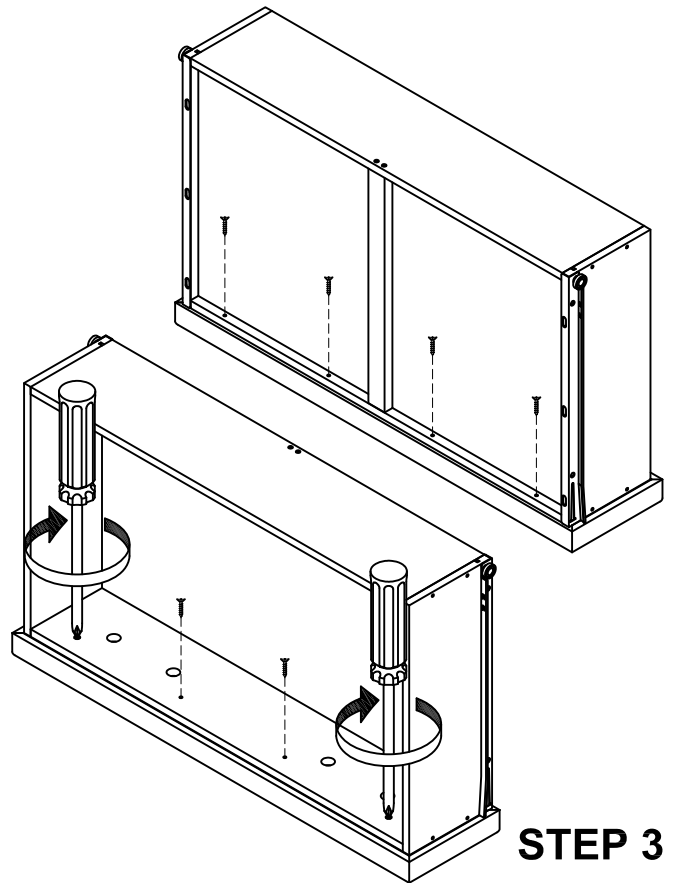

STEP 3

Pull the drawer open slowly and tighten the upper screws. Make sure the front panel does not move and lock the drawer front panel into position with 3/4" Flat Head Screws.

VERY IMPORTANT !!

CARE INSTRUCTIONS

NEVER

USE GLASS CLEANERS ON FINISHED FURNITURE. AMMONIA WILL CHEMICALLY ATTACK THE LACQUER.

NEVER

ALLOW LIQUIDS OF ANY KIND TO REMAIN ON THE FURNITURE. ABSORPTION CAUSES WOOD TO WARP AND SPLIT AND FINISHES TO DELAMINATE.

DO NOT
WRITE
DIRECTLY
ON
SURFACE.



**PREVENT
MARKING**

DO NOT
PLACE IN
DIRECT
SUNLIGHT.



**PREVENT
FADING**

DO NOT USE
COMMERCIAL
WAXES AND
POLISHES.



**PREVENT
YELLOWING**

DO NOT
PLACE HOT
OBJECTS
ON SURFACE.



**PREVENT
FINISH DAMAGE**

DO NOT
USE
RUBBER
BASED
PLACE MATS.



**PREVENT
DISCOLORING**

TO CLEAN

USE A SOFT CLOTH MOISTENED IN LEMON OIL POLISH OR LUKEWARM SOAP AND WATER, THEN BUFF WITH A DRY CLEAN CLOTH.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If this product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

www.homestyles-furniture.com/customer_service

Home Styles Consumer Assistance: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319