

ITEM# 87350

Westwood Cherry 25" H, 50" W TV Cart

**Leick**  
**Home**  
SINCE 1910

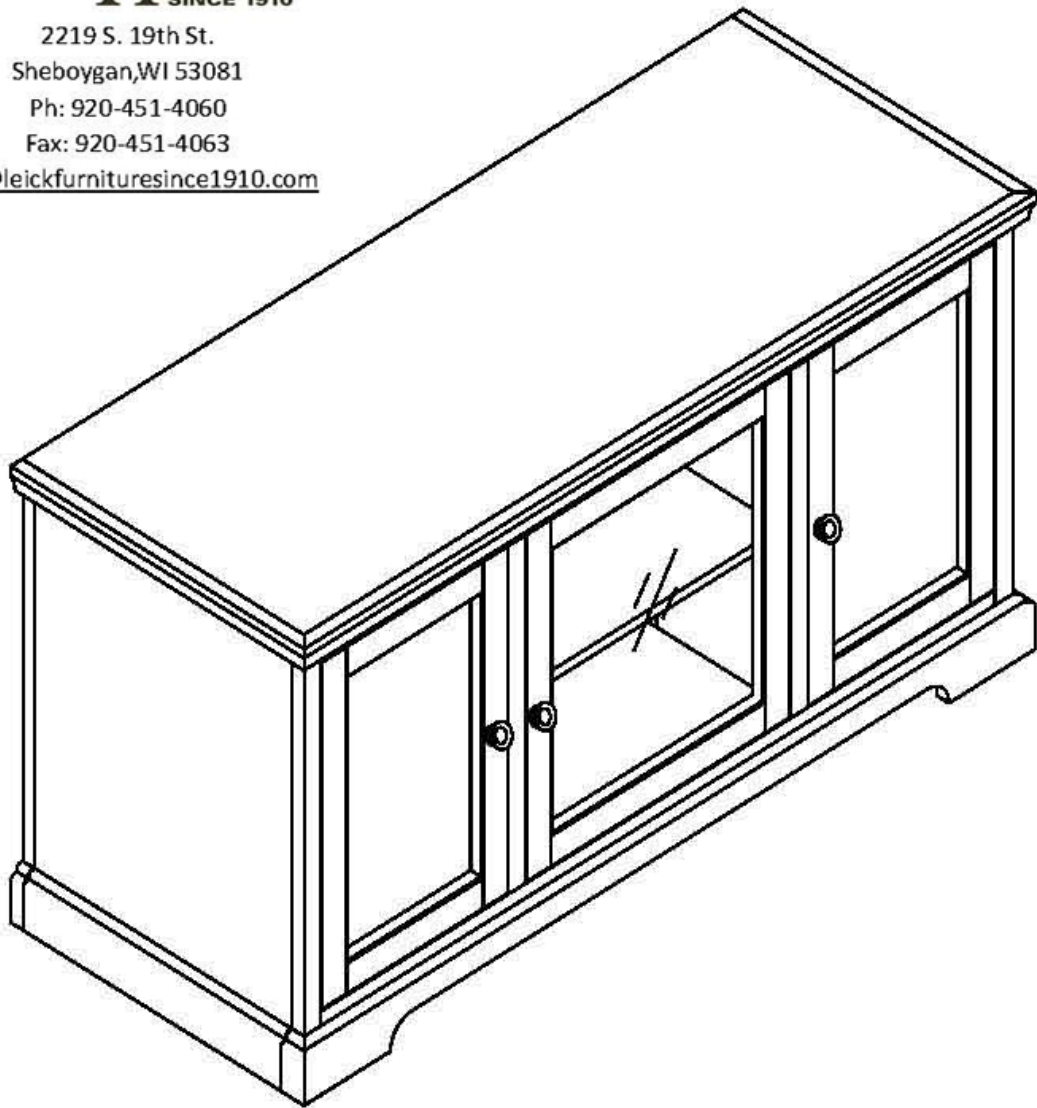 
2219 S. 19th St.

Sheboygan, WI 53081

 

 
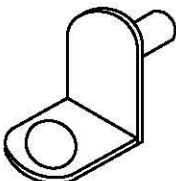 
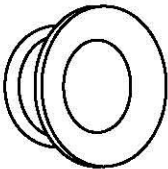 

Ph: 920-451-4060

Fax: 920-451-4063








[info@leickfurnituresince1910.com](mailto:info@leickfurnituresince1910.com)



## Hardware List

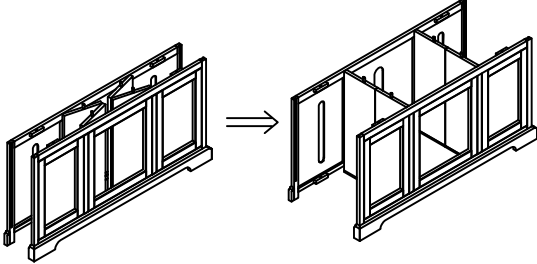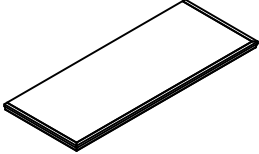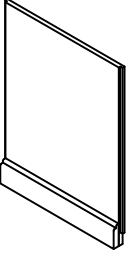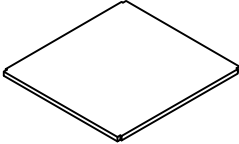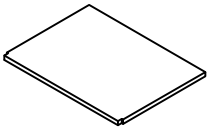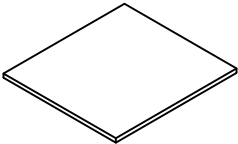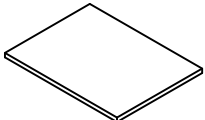       	Item	Description	Qty
a		Bolt 1/4" * 1-1/8"	4PCS
b		Allen wrench	1PC
c		Washer 1/4" * 12mm	4PCS
d		Shelf metal clip	12PCS
e		Door Pull	3PCS
f		Machine screw for Door pull 5/32" * 3/4"	3PCS

# Parts List


Item	Description	Qty
A	 Cabinet	1PC
B	 Top Panel	1PC
C	 Side Panel	2PCS
D	 Middle Bottom Panel	1PC
E	 Side Bottom Panel	2PCS
F	 Middle Adjustable Shelf	1PC
G	 Side Adjustable Shelf	2PCS

# Assembly Instructions

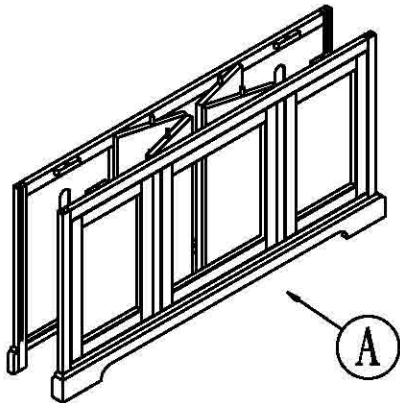 Two person assembly recommended.


## step 1

Unfold Cabinet.




## step 2

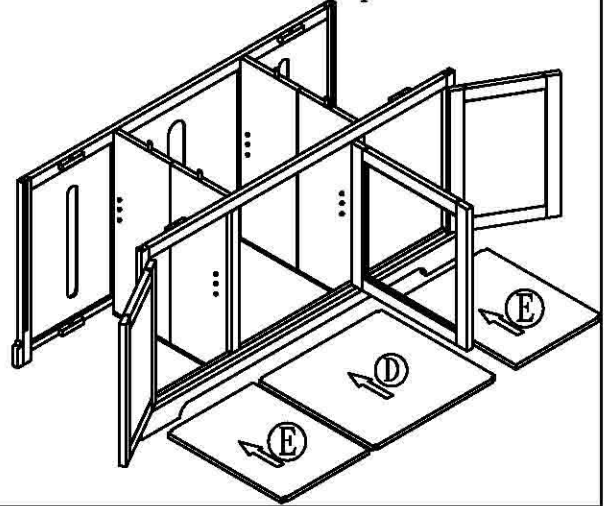 Open 3 doors,  
Insert the center bottom panel first,  
then insert the side bottom panel.




## step 3

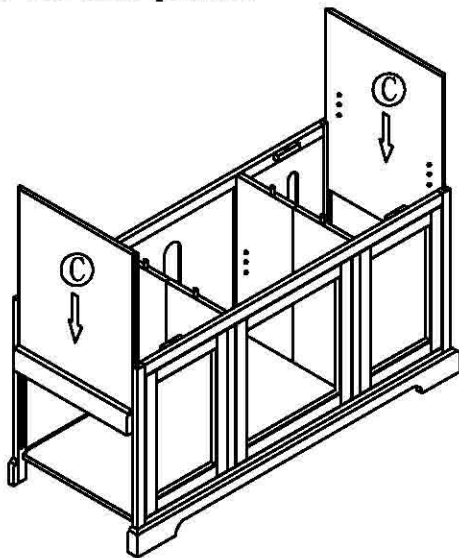 Insert two side panels.




## step 4

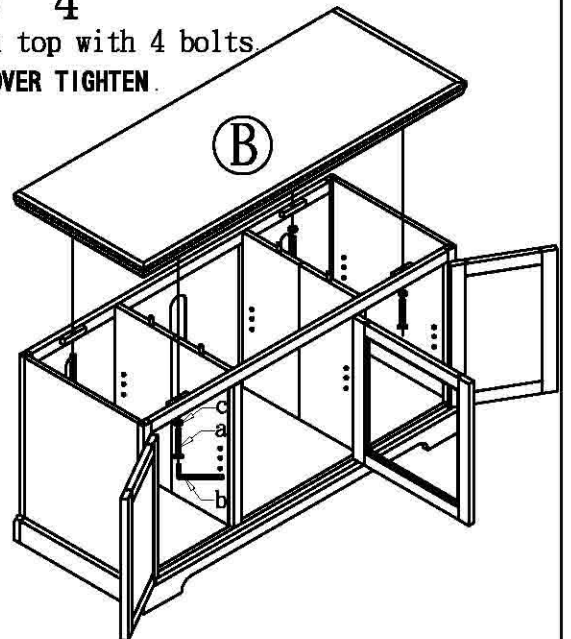 Bolt on top with 4 bolts.  
DO NOT OVER TIGHTEN.



## step 5

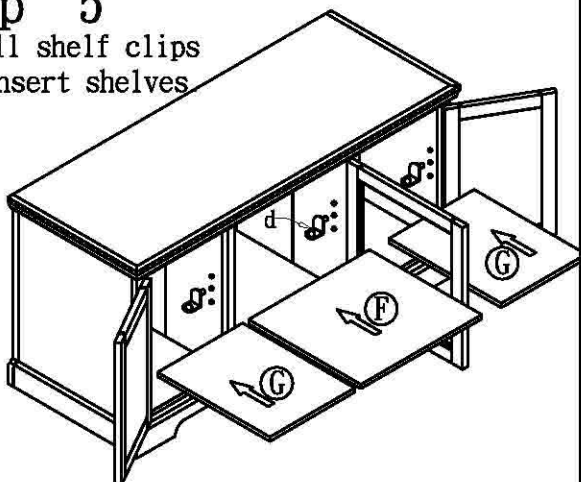 Install shelf clips  
and insert shelves



## step 6

Install door pulls.

