nuit is charging. Charge 4 to 6 hours. The red LED indicator will light indicating the receptacle located at the back of the handle. connector from the charger into the spotlight standard 110-volt receptacle. Plug the 110-volt Charging: Plug the charger into any Recharge every three months even if not used. discharging. Always store in a charged state.

* Recharge the battery immediately after 12-VOLT AND 110-VOLT CHARGING

a 12-volt and 110-volt charger. · Check to be certain that you have received both

the ON position.

unstable support.

or malfunction.

venicies.

neut to clean the spotlight.

small button on side of handle. during shipping. To unlock the trigger, push the locked position to prevent accidental discharge · The spotlight is packaged with the trigger in a :30ITON

no not leave the spotlight unattended while in

pected situations. Do not use on a ladder or

euspie perrer control of the sporiignt in unex-

ance at all times. Proper footing and balance

Do not overreach. Keep proper footing and bal-

a spotlight will increase the risk of electric shock

Do not expose spotlight to rain. Water entering

betroleum-based products, or any strong sol-

cleaning. Never use brake fluids, gasoline,

Keep light dry, clean, and free from oil and

100° F. Do not store in outside sheds or in

temperature is less than 50° F or more than

location. Do not store in locations where the

Do not store your spotlight in a damp or wet

grease. Always use a clean cloth when

Household use only.

away from combustible materials. Risk of burns - do not touch. Risk of fire - keep

locked in the ON position.

Mever leave light unattended with the switch

· Do not operate light while it is being recharged. qızcustde.

not used to ensure that it does not completely Recharge battery every 3 months even if it is

· Recharge within 48 hours after discharge.

· Deep discharge will decrease battery life.

Never completely discharge battery.

than 6 hours. • Do not leave spotlight charging for more

the 110-volt or 12-volt charger. · Before first use, charge the battery using either

:ÐNINAM ▲

SPOTLIGHT USE AND CARE

spneres. Internal sparks may ignite rumes. mable liquids or in gaseous or explosive atmo-Do not operate spotlight or charger near flam-

in fire.

completely worn out. The battery may explode incinerating, even if it is severely damaged or Do not dispose of a worn out battery pack by

explode or leak and cause personal injury. · Do not expose to high heat or fire as it might

rurer to recnarge. · Use only the charger supplied by the manufac-

forming any routine maintenance or cleaning. Hemove battery pack from spotlight before per-

Do not disassemble the spotlight.

sibily explode, cause a rire, or personal injury. canse damage to your spotlight and could pos-Any attempt to use another battery pack will Use only recommended 6V 4Ah battery pack

pe bniled into a tub or sink. not place or store spotlight where it can fall or sporiignt or charger in water or other liquid. Do · To reduce the risk of electrical shock, do not put

SAFETY GUIDELINES

міть апутыпу. never allow the spotlight lens to come in contact when in use. To avoid serious personal injury, Do not cover with cloth, paper or any material

burn injury could result. I uis sporiignt lens can melt some tabrics and a Do not use spotlight in bed or sleeping bags.

waste. Battery must be disposed of in accordance with local, state and federal regulations. DO NOT dispose of battery as household

which if not followed, MAY cause damage to

★NOTICE: Indicates important information,

situation that, if not avoided, MAY result in minor

*CAUTION: Indicates a potentially hazardous

· Spotlight contains a sealed lead acid battery.

• To avoid damage to the battery or contacts, do not submerge in liquid.

ечк саизінд інјигу.

wix with other battery types - may explode or · Do not install battery backwards, put in fire or

· Do not shine light into someone's face. · Do not look directly into the light.

· Keep away from children and pets.

SAFETY GUIDELINES

situation that, if not avoided, COULD result in death **★WARNING:** Indicates a potentially hazardous or serious injury.

situation that, if not avoided, WILL result in death ADANGER: Indicates an imminently hazardous

nsing this product:

or serious injury.

The following signal words are used to emphasize safety warnings that must be followed when ulnık suqyor property damage! oberate or maintain this product. Failure to comply with the instructions may result in serious personal

AWARNING: Read and understand this entire instruction manual before attempting to assemble, install,

nueundinbe

or moderate injury.

The manufacturer reserves the right to make product changes at any time without notice. of this instruction manual are based upon the latest product information available at the time of publication. maintenance and troubleshooting steps described within to ensure your safety and satisfaction. The contents This instruction manual is intended for your benefit. Please read and follow the safety, installation,

SAFETY GUIDELINES / DEFINITIONS

· Charging indicator light

12V, output 6V max 2A with 2A fuse 12V cigarette lighter outlet. Input - 12V DC charger: Plugs into any Hz, output 9V 300mA Charger 110V outlet. Input 110V AC 60 vns otni egul : ragrada OA -AC and DC chargers included

• Durable ABS housing with black

- Convenient hanging ring Tree use
- · Locking trigger switch for hands · Non-skid rubber bezel protector
 - 4-1/4 in. Diameter reflector
- acid battery • 64 4Ah rechargeable sealed lead
- palogen bulb
- High power H3 6V55W quartz · Bright 1 million candlepower beam
 - **FEATURES**

SPOTLIGHT USE AND CARE

· 12-volt Charging: Plug the charger into any 12-volt cigarette lighter style receptacle. Plug the connector from the charger into the spotlight receptacle located at the back of the handle. The red LED indicator will light indicating the unit is charging. Charge 1 hour.

NOTICE:

- · Check the receptacle; make sure it is clean and be certain the plug is fully inserted. If charger does not operate, check the fuse in the 12-volt receptacle.
- · Never use charger to power the light! Never charge battery for more than 6 hours. Do not leave charger plugged in when not in use.
- · Battery performance will be greatly improved if unit is used intermittently. Prolonged or continuous use will diminish battery life and continuous use in excess of 10 minutes will put an excessive drain on the battery and may harm unit.
- Battery disposal: If this unit is either damaged or, after many years of dependable service, the battery in your rechargeable spotlight will no longer accept a charge, PLEASE exercise good judgment in disposal of this sealed lead acid battery. DO NOT dispose of battery as household waste. Battery must be disposed of in accordance with local, state and federal regulations.

1 YEAR WARRANTY

NOTE: Excluding the bulb and fuse

Performance Tool® extends only the following warranties and only to original retail purchasers. These warrantie give specific legal rights. Except where prohibited by local law, the law of the State of Washington governs all warranties and all exclusions and limitations of warranties and remedies. There may be other rights which vary from state to state.

Performance Tool® warrants the product to be free from defects in materials and workmanship under normal use and service. A defective product may be returned for a free replacement within 90 days from the date of purchase, provided that product is returned to place of purchase immediately after discovery of defect. After 90 days and up to one year from date of purchase, Performance Tool® will replace at no charge any parts which our examination shall disclose to be defective and under warranty. These warranties shall be valid only when a sales receipt showing the date of purchase accompanies the defective product or defective part(s) being returned. For part(s) after 90 days, please remit your request, postage prepaid to: Performance Tool, P.O. Box 88259 Tukwila, WA 98138

These warranties exclude batteries, bulbs, blades, bits punches, dies, bulbs, fuses, hoses, and other consumables which must be replaced under normal use and service. These warranties shall not apply to any product or part which is used for a purpose for which it is not designed, or which has been repaired or altered in any way so as to affect adversely its performance or reliability nor shall these warranties apply to any product or part

which has been subject to misuse, neglect, accident or wear and tear incident to normal use and service.

Performance Tool® does not authorize any other person to make any warranty or to assume any liability in connection with its products.

Except for warranties of title and the limited express warranties set forth above, Performance Tool® makes no express or implied warranties of any kind with respect to its products. In particular, Performance Tool® makes no implied warranty of merchantability and no implied warranty of fitness for any particular purpose, except that for goods purchased primarily for personal, family or household use and not for commercial or business use Performance Tool® makes an implied warranty of merchantability (and, if otherwise applicable, an implied warranty of fitness for a particular purpose), but only for the particular qualities or characteristics, and for the duration, expressly warranted above.

The laws on limitation of implied warranties may differ from state to state, so the above limitations may not apply in all cases.

Performance Tool® shall not be liable for consequential. incidental or special damages resulting from or in any manner related to any product, or to the design, use, or any inability to use the product. The sole and exclusive remedy for a defective product or part shall be the repair or replacement thereof as provided above. The laws on limitation of remedies or on consequential, incidental or special damages may vary from state to state, so the above limitations may not apply in all cases.

1 MILLION CANDLEPOWER RECHARGEABLE SPOTLIGHT

Item Number W2409

OWNER'S MANUAL



READ, UNDERSTAND AND FOLLOW ALL INSTRUCTIONS AND WARNINGS BEFORE OPERATING THIS TOOL. FAILURE TO DO SO MAY RESULT IN PERSONAL INJURY AND/OR PROPERTY DAMAGE AND WILL VOID WARRANTY.

