



# Adjustable Voltage “A Battery 3.3v - 4.8v”

## Product Manual

- 2 CLICK PREHEAT MODE**

---

- 20 SECOND AUTO SHUT-OFF**

---

- PRESS POWER BUTTON 5 TIMES TO TURN ON/OFF**

---

- 510 THREAD**

---

- ADJUSTABLE VOLTAGE 3.3V - 4.8V**

**650MAH**

**900MAH**

**1100MAH**

**GREEN**  
100% BATTERY

**WHITE**  
50% BATTERY

**RED**  
0% BATTERY

**VOLTAGE OPTIONS**  
3.3V  
3.8V  
4.3V  
4.8V

**Warranty does not apply to Ooze batteries at fault from use of Non-Ooze charger or if there is any indication of physical damage done to the battery.**

### Charging Instructions

- Charge the battery using Ooze charger.
- Charger indicator light will flash red while battery is being charged.
- Charger indicator light will turn green once the battery is charged.

### How to turn on/off

Press the power button 5 times quickly to turn on. Repeat to turn off. Indicator light will flash green when the battery is turned on or off.

### Preheat mode

- To activate preheat mode, press the power button 2 times quickly.
- To deactivate, press the power button 1 time quickly.

### 20 Seconds Auto Shut Off

Battery will stop heating after 20 seconds of preheat mode. Green Light will flash 10 times.

### Protection / Cleaning

Keep battery away from water, extremely hot or cold temperatures. Always turn off the battery after each session. Must keep clean.

Turn off battery before cleaning. Clean the battery connection with Q-Tip dipped slightly in rubbing alcohol. Do not use excessive amount of alcohol, use alcohol wipes to clean the bottom of the battery. Let the battery dry before turning it on.