homestyles[°]

20 05420 0070


Vanity with Mirror


IMPORTANT


Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.

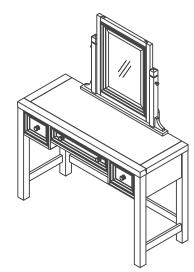

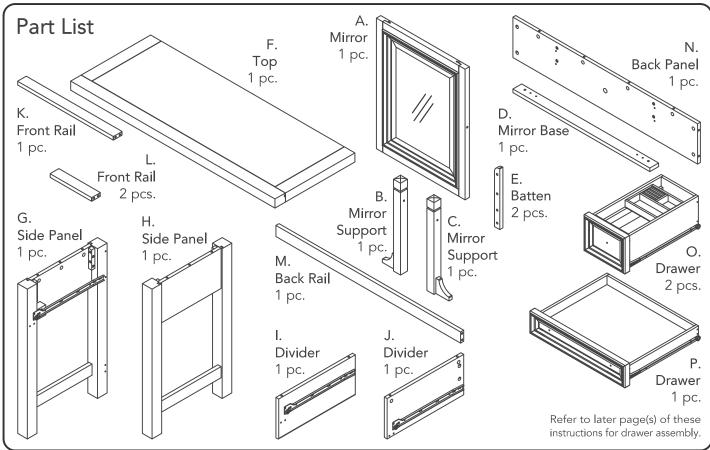

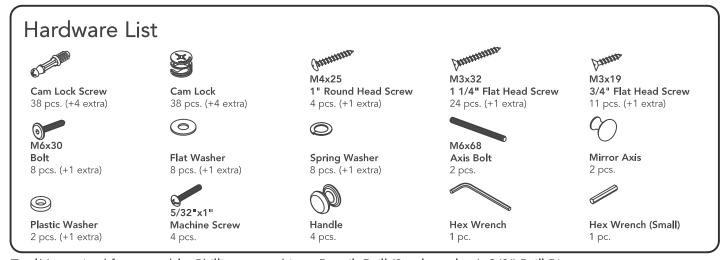


Tool(s) required for assembly: Phillips screwdriver, Pencil, Drill (8 volts or less), 3/8" Drill Bit

Home Styles Customer Service: www.homestyles-furniture.com, servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319


Assembly Instructions 2/11

IMPORTANT


- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the screws until each part is properly assembled.
- The unit must be level to work properly. Use the included adjustable levelers to level.
- Keep Hex Wrench as the Bolts may need to tightened in the future.

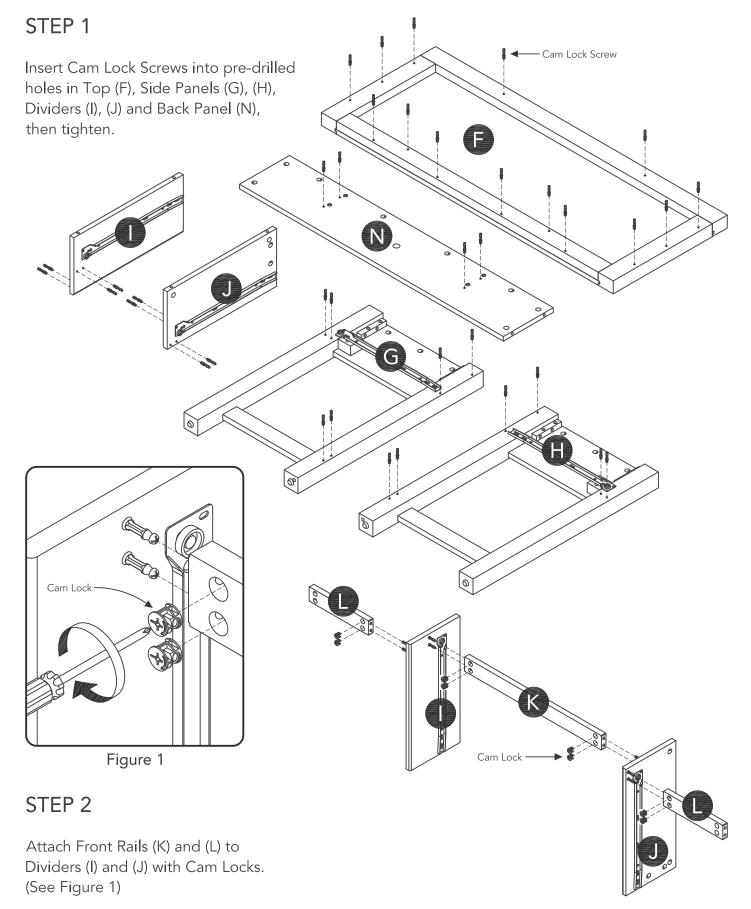

Assembly Instructions 3/11

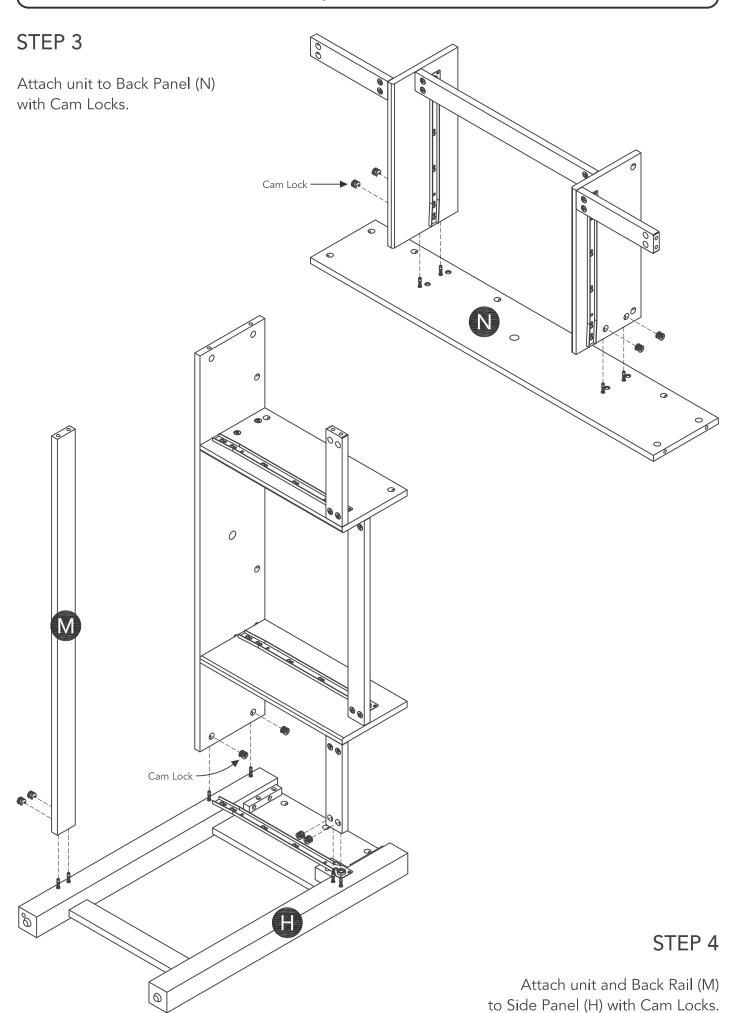


Assembly Instructions 4/11

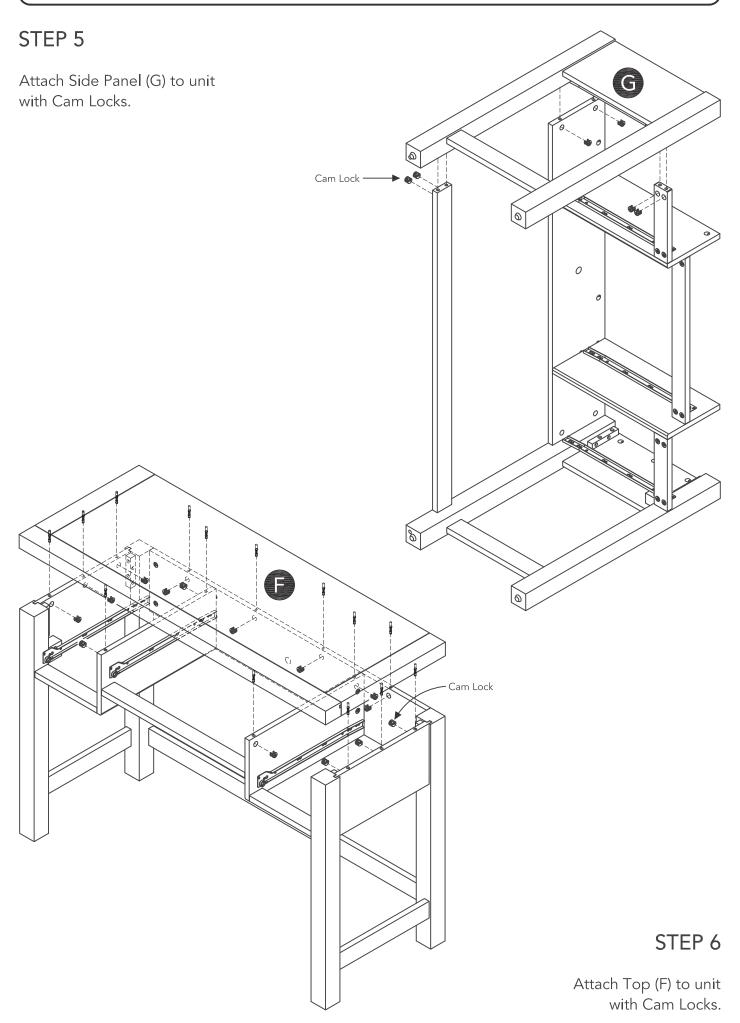


Assembly Instructions 5/11

STEP 7

Attach Mirror Base (D) to Mirror Supports (B) and (C) with 1" Round Head Screws.

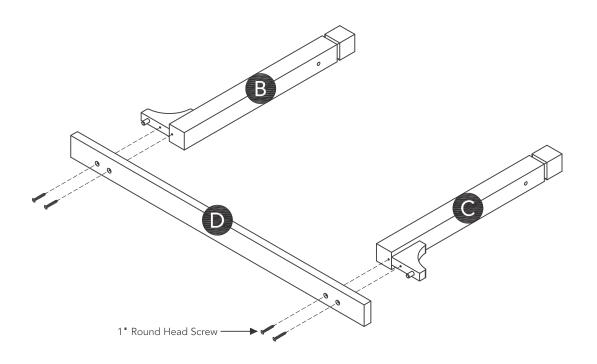

STEP 8

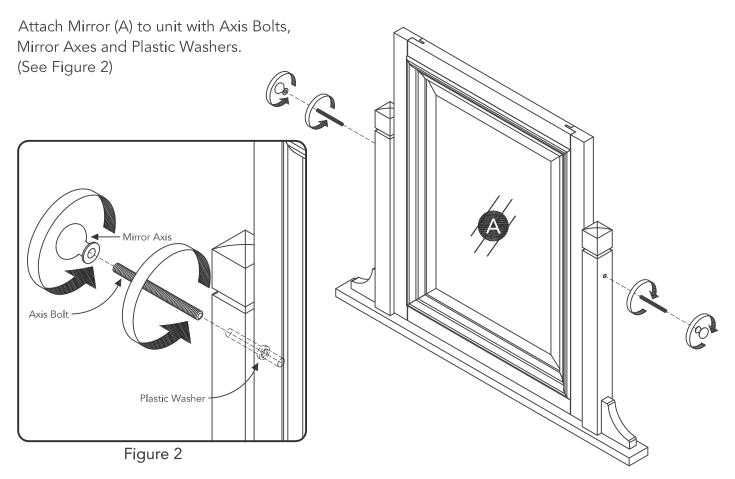


Assembly Instructions 6/11

STEP 9

Attach Battens (E) to unit from Step 6 and unit from Step 8 with Bolts, Spring Washers and Flat Washers.

Tighten Bolts with Hex Wrench. (See Figure 3)

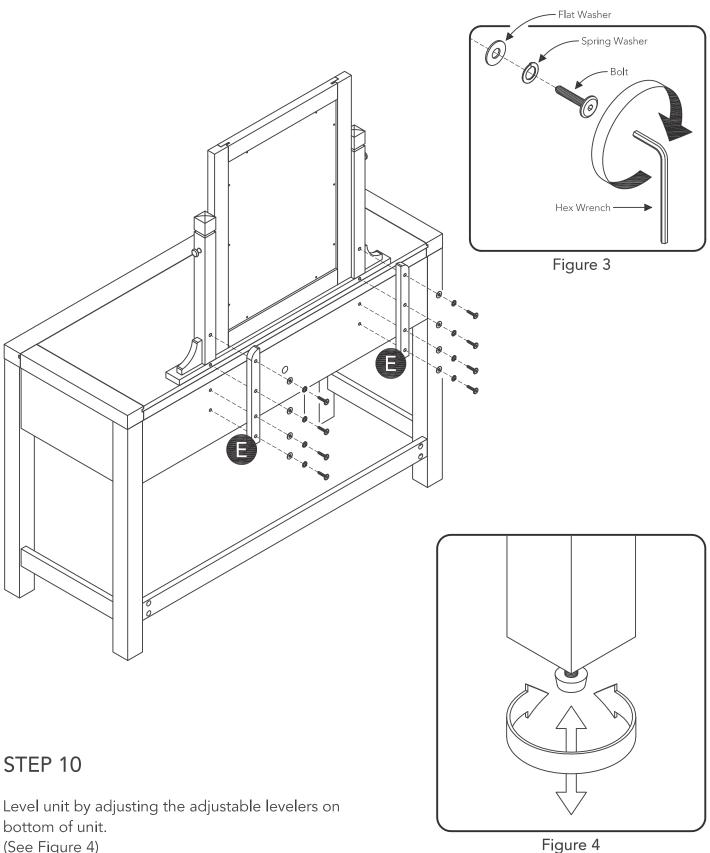

(See Figure 4)

Assembly Instructions 7/11

IMPORTANT

• To help reduce the risk of the unit tipping over, the Tip-over Restraint must be installed following these instructions exactly.

STEP 11

Place the unit at desired location.

Mark wall with pencil to show position of hole in Back Panel (N). (See Figure 5)


Move unit.

Drill a 3/8" hole in wall 1" below mark.

Insert Anchor into the wall hole and attach Tip-over Restraint to Anchor with 1 1/2" Round Head Screw and Flat Washer. (See Figure 6)

Move unit back into place and insert Tip-over Restraint into unit through hole in Back Panel (N). (See Figure 7)

Attach Tip-over Restraint to unit with 1/2" Round Head Screw and Flat Washer. (See Figure 8)

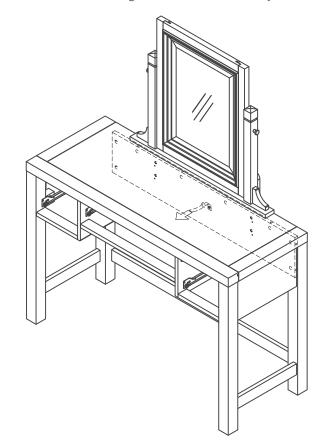





Hardware List

Tip-over Restraint 1 pc.





(M3x38) 1 1/2" Round Head Screw 1 pc. (+1 extra)




(M3x13) 1/2" Round Head Screw 1 pc. (+1 extra)




Flat Washer 2 pcs. (+1 extra)


Assembly Instructions 8/11

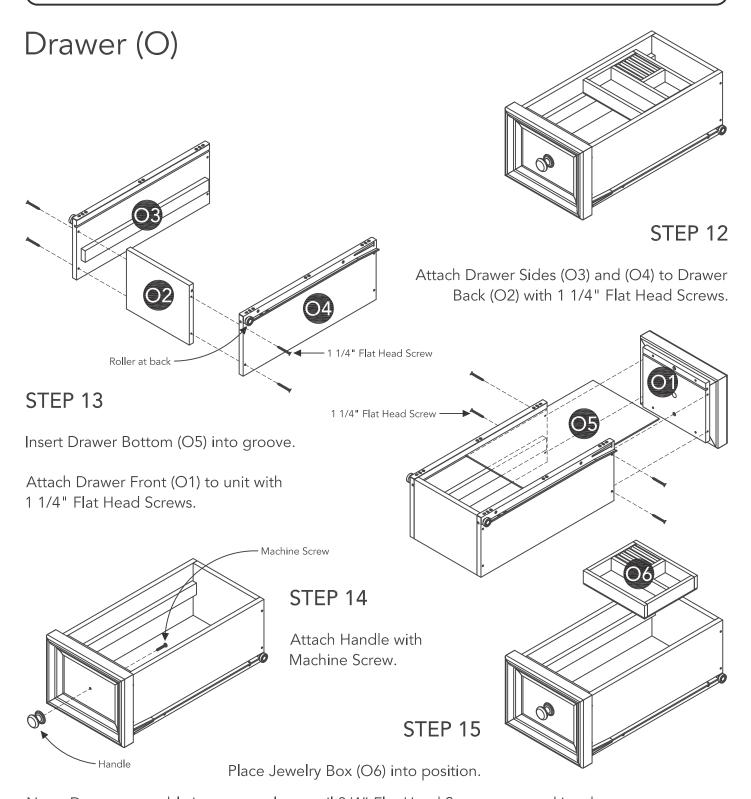


Note: Drawer assembly is not complete until 3/4" Flat Head Screws are used in a later step.

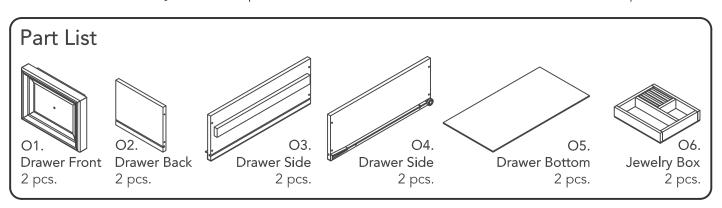

Assembly Instructions 9/11

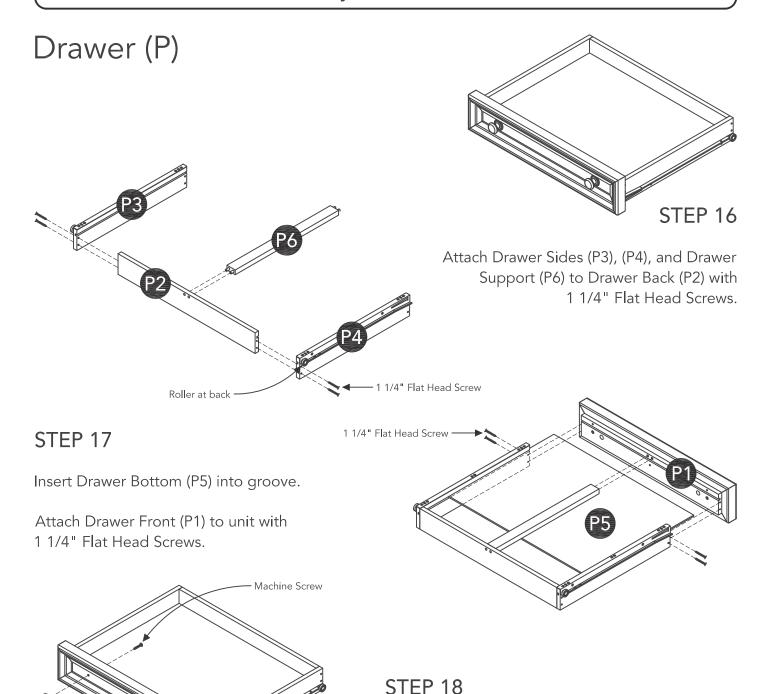

Note: Drawer assembly is not complete until 3/4" Flat Head Screws are used in a later step.

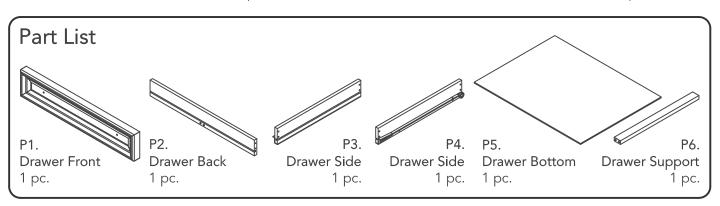


Attach Handles with Machine Screws.


Assembly Instructions 10/11

STEP 19

For Drawer (O) loosen slightly upper center screw and uninstall lower center screw.

For Drawer (P) loosen slightly screws pre-installed on back of drawer fronts.

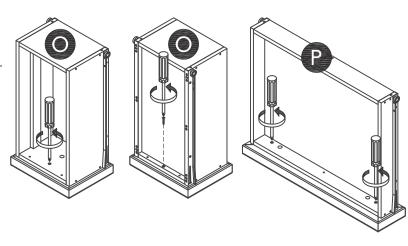

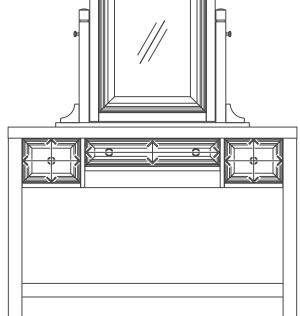

STEP 20


Insert drawers into unit, then adjust drawer front panels left or right and up or down until drawer gaps look proportional.

STEP 21

Pull each drawer open slowly, then retighten screws loosened in Step 19.


Make sure drawer front panels do not move and lock drawer front panels into position with 3/4" Flat Head Screws.

Note: These 3/4" Flat Head Screws must be installed to complete the drawer assembly.

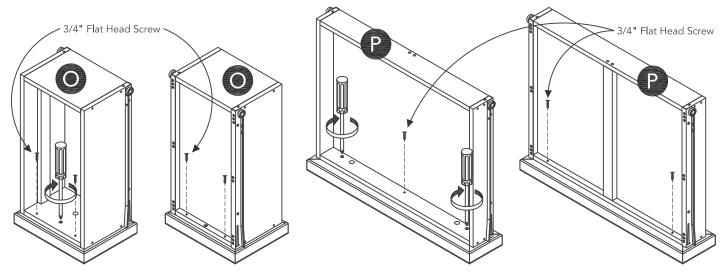

Assembly Instructions 11/11

STEP 22

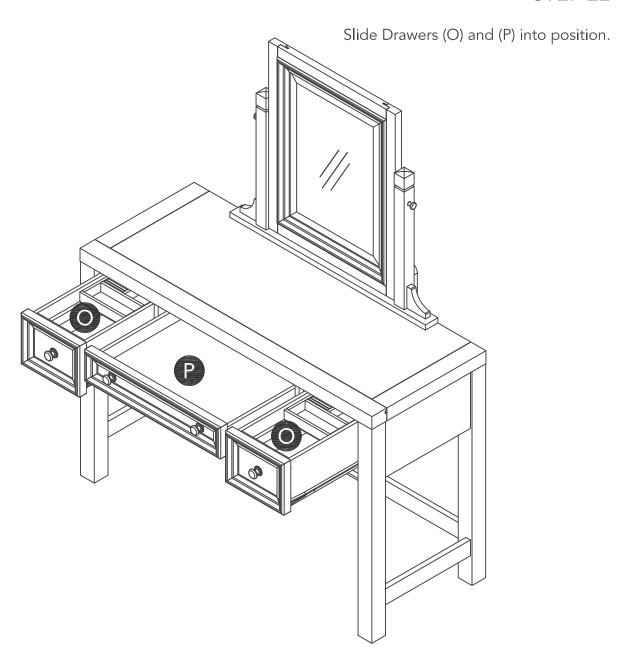

CARE INSTRUCTIONS

NEVER

allow liquids to remain on furniture. Absorption causes parts to warp and split and finishes to delaminate.

NEVER

use glass cleaners on finished furniture. Ammonia chemically attacks the finish.



Do not use power tools above 8 volts to assemble.

PREVENT

CRACKING



Do not place in direct sunlight. PREVENT FADING



Do not write directly on surface. PREVENT MARKING



Do not place hot objects on surface.

PREVENT
FINISH DAMAGE



Do not use rubber based placemats.

PREVENT

DISCOLORING



Do not use commercial waxes and polishes.

PREVENT

YELLOWING

CLEAN

with a soft cloth moistened in lukewarm soap and water. Buff with a dry clean cloth.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

www.homestyles-furniture.com/customer-service/replacement-parts

Home Styles Customer Service: www.homestyles-furniture.com, servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319