



Purchase Date: ___ / ___ / ___ Order/Customer Reference #: _____

Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products will be sent at our discretion within the 1-year warranty period. Proof of purchase, with the date of purchase as well as photos of the merchandise defect, must be provided. Photos are used to determine the cause of defects and for future quality control. Register your warranty at <https://tiny.cc/SunnydazeWarranty> If you have any questions, comments or concerns, feel free to contact us by phone at 833-982-1977, by email: customerservice@sunnydazedecor.com, or via our contact us page at <https://tiny.cc/SunnydazeContact>

COLOR-CHANGING LED ROPE LIGHT

KWR-172

! IMPORTANT SAFETY STATEMENTS & WARNINGS !

WHEN USING ELECTRICAL PRODUCTS, BASIC PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:

1. READ AND FOLLOW ALL SAFETY INSTRUCTIONS

2. Only connect this product to a power source that is equipped with a USB port.
3. To reduce the risk of fire or electric shock, do not attempt to modify any part of this product.
4. If the product malfunctions, do not try to repair it.
5. Do not attempt to replace the USB plug. Discard the product if the USB plug is damaged.
6. Always make sure all parts have been properly connected to avoid a short circuit.
7. This product is not intended for permanent installation or use.
8. Do not mount or place near gas or electric heaters, fireplaces, candles, or any other heat source.
9. Do not secure product wiring with staples or nails or place on sharp hooks or nails.
10. Do not let the rope light rest on the supply cord.
11. Unplug the product when leaving the house, when retiring for the night, or any time the product will be left unattended.
12. This is an electrical product - not a toy! To avoid risk of fire, burns, personal injury, and electric shock, it should not be played with or installed where small children can reach it.
13. Do not use this product for any reason other than its intended purpose.
14. Do not hang ornaments or other objects from rope light or power cord.
15. Do not kink any part of the rope light or power cord, as this may damage the wire and/or wire insulation.
16. Do not close doors or windows on the product, as this may damage the wire insulation.
17. Do not cover the product with a cloth, paper, or any material not part of the product when in use.
18. Do not place the product against carpeting, furniture, or any other fabric when in use.
19. Read and follow all instructions that are provided with this product or are on the product.

SAVE THESE INSTRUCTIONS

USE & CARE

1. Do not plug the USB into the power source until installation is complete.
2. Ensuring the power connection pins align with the power source, gently insert the USB shield into the USB port of a computer, soundbar, power strip (not all power strips are equipped with USB port), or the included wall adapter. If using the wall adapter, plug the adapter into a properly grounded GFCI outlet. If one is not available, contact a qualified electrician for proper installation.
3. If the product is placed on a tree, the tree should be well-secured and stable. The tree should be well maintained and fresh. Do not place on live trees if needles are brown or break off easily. Keep the tree holder filled with water.
4. Inspect the product carefully before each use. Discard any lighting product that has exposed wire, loose connections, damaged or frayed wire insulation or cords.
5. When storing the product, carefully coil the rope light and power cord; avoid any undue strain or stress on the product conductors, connections, and wires.
6. When not in use, store neatly in a cool, dry location protected from sunlight.

FOR INDOOR USE ONLY



WIRELESS REMOTE CONTROL



ON/OFF: Press 'ON' to turn the rope light on. Press 'OFF' to turn the rope light off.

TIME: Press 'TIME' — if white color flashes one time, the timer mode is ON, two flashes mean the timer mode is OFF.

When the timer function is on, the lights will illuminate for 6 hours then turn off automatically for 18 hours. The cycle will repeat until the lights are powered off.

SPEED: This function only works with the four dynamic modes; it cannot be used with the 16 static colors.

Press 'SPEED' to adjust how quickly colors change using one of the dynamic modes. 4 speed levels to choose from slow to fast (default speed level is 3).

COLOR BUTTONS: Press one of the color buttons to activate the single-color static light mode.

Dynamic Modes

These functions operate using color-changing lights only, they cannot be used with the 16 static colors.


FADE: Slow, single-color flashing

ASYN FADE: 7 mixed colors flash slowly in random

JUMP: Fast, single-color flashing

ASYN JUMP: 7 mixed colors flash quickly in random

CHANGING THE BATTERY

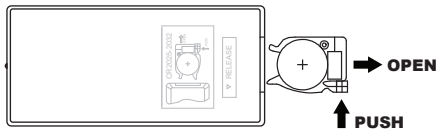

Push the release tab toward the center and slide the battery housing open.

Install a CR-2025 battery in the holder, ensuring the positive (+) side of the battery is facing upward.

Close the battery cover.



This product uses a battery. When the battery can no longer be used, it should be removed from the unit and recycled. The battery must not be incinerated or composted. Recycle the battery in accordance with local laws and regulations.

TROUBLESHOOTING

Always make sure all parts have been properly connected.

Remote does not work: (1) Check that the battery is properly installed. (2) Ensure the remote receiver is not covered or blocked, and there are no obstructions between the remote and the USB plug. (3) The distance between the remote and USB plug may be too great; move closer to the unit.

Lights will not turn on: (1) Check to make sure the power source (USB) is 5-Volt. (2.) Ensure the USB port/power source has a proper electrical connection; when in doubt, contact a certified electrician. (3) Inspect all parts of the unit for damage; if any part is cut or broken, discard the unit.

SPECIFICATIONS

Input: DC 4.5V

LED String: 100 LED Lights

Usage: 20,000 Hour Maximum

Color: 16 colors, 4 Dynamic Modes

By nature, an LED will have some color variances within the same color family. Over time, variances in the color may change.

FOR INDOOR USE ONLY

⚠️ WARNING: Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.