

homestyles

20 05600 0034

Bistro Table



IMPORTANT

Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.


Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.


Part List



A.
Top
1 pc.

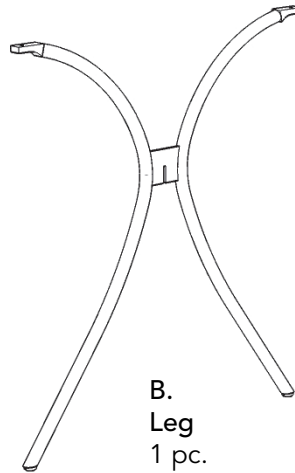

B.
Leg
1 pc.

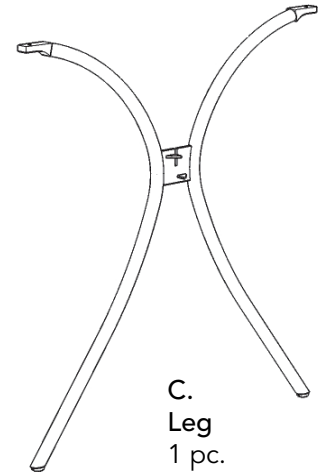

C.
Leg
1 pc.

Hardware List



Wing Nut
4 pcs. (+1 extra)



Flat Washer
4 pcs. (+1 extra)

Care Instructions

The tile top contains natural stone materials with naturally occurring fissures and cavities. A sealer has been applied to reduce the absorption of liquids. Even with sealer applied, liquids can still absorb into the surface causing permanent stains and can damage the top by cracking the tiles if the absorbed liquid freezes.

- Never allow liquids to remain on the top.
- Apply a stone sealer to the top annually.
- Store inside in freezing weather.


Tool(s) required for assembly: Level

Home Styles Customer Service: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

Assembly Instructions 2/3

IMPORTANT

- Use a soft cloth between these parts and the floor.
- The unit must be level to work properly. Use the included adjustable levelers to level.

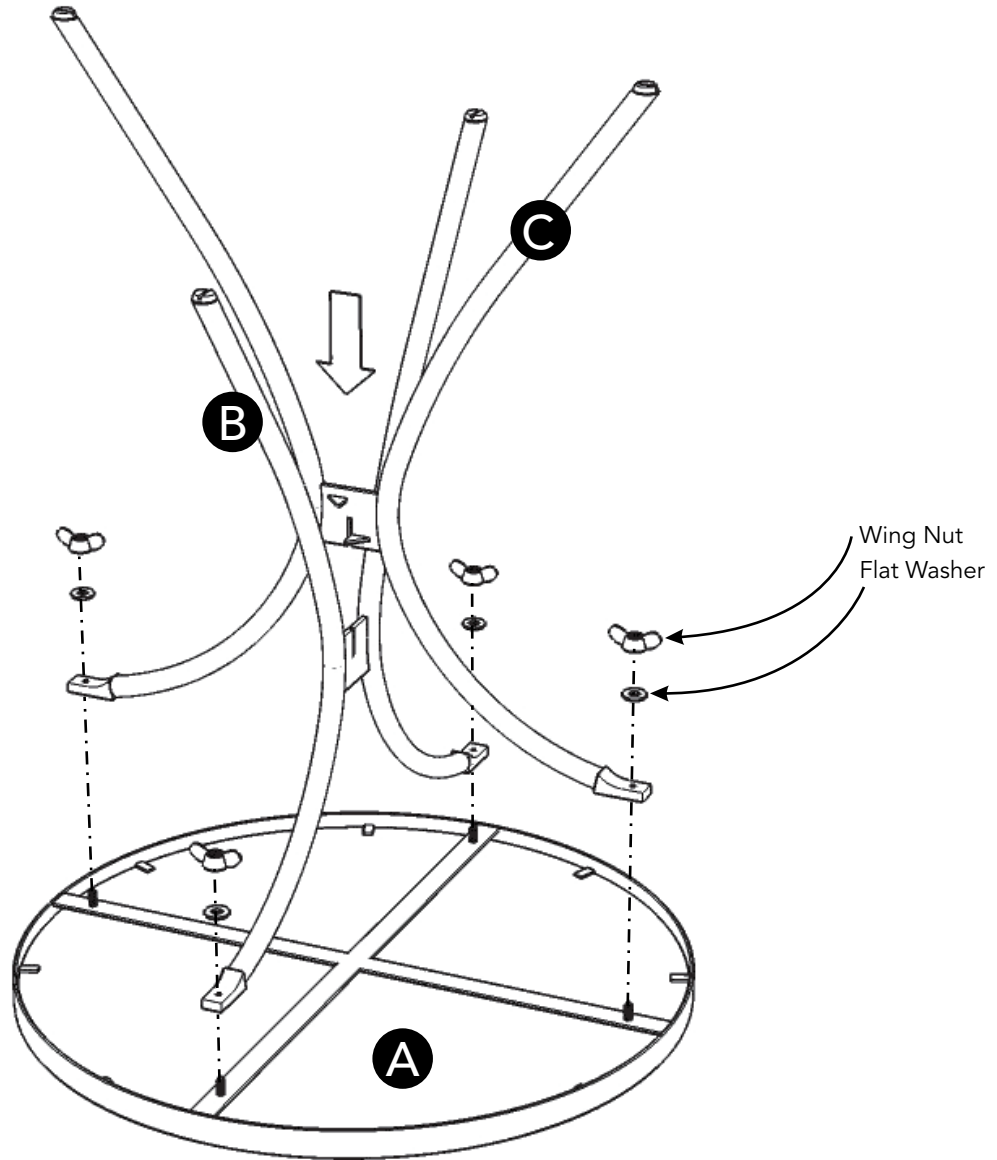

STEP 1

Place Top (A) upside down on a soft cloth.

Attach Leg (B) to Top (A) with Flat Washers and Wing Nuts, tightening Wing Nuts only halfway. (See Figure 1)

Attach Leg (C) to Top (A) and Leg (B) with Flat Washers and Wing Nuts, tightening Wing Nuts only halfway.

Tighten all Wing Nuts.


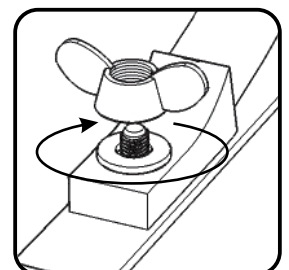


Figure 1

Assembly Instructions 3/3

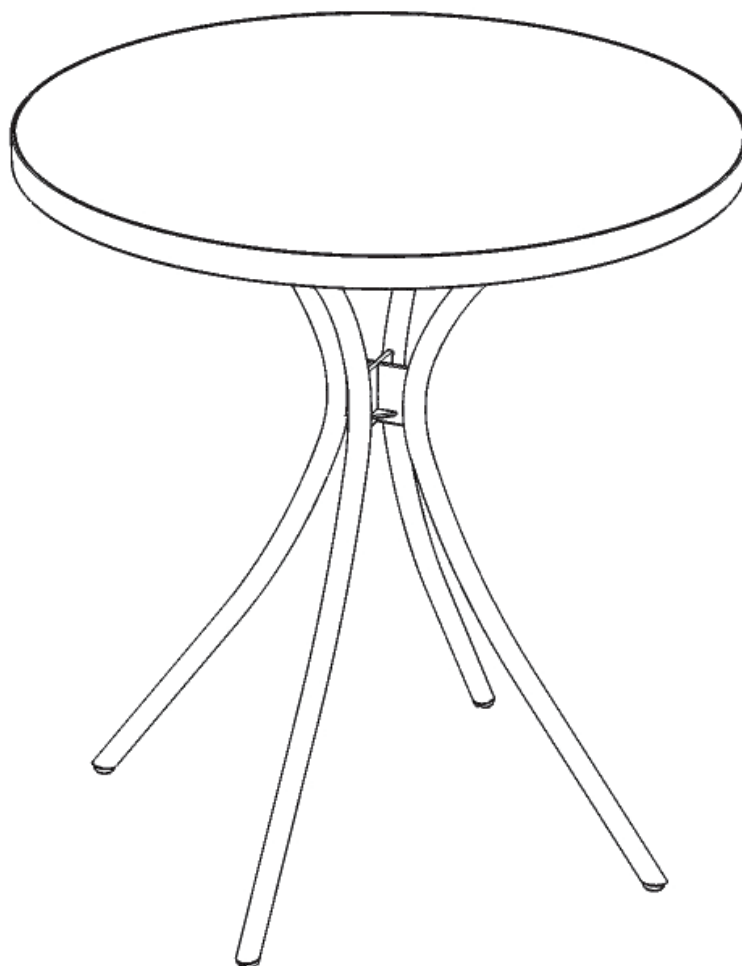

STEP 2

Turn table over to its upright position.

Level table by adjusting the adjustable levelers on bottom of legs.
(See Figure 2)

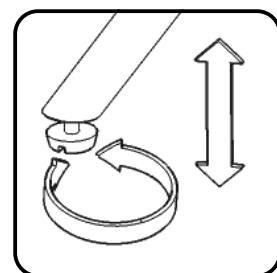


Figure 2

CARE INSTRUCTIONS

NEVER

allow liquids to remain on furniture.
Absorption causes parts to warp
and split and finishes to delaminate.

NEVER

use glass cleaners on
finished furniture. Ammonia
chemically attacks the finish.



Do not use power tools
above 8 volts to assemble.
**PREVENT
CRACKING**




Do not place
in direct sunlight.
**PREVENT
FADING**



Do not write
directly on surface.
**PREVENT
MARKING**



Do not place hot
objects on surface.
**PREVENT
FINISH DAMAGE**

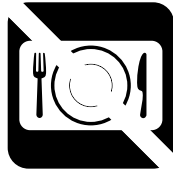

Do not use rubber
based placemats.
**PREVENT
DISCOLORING**



Do not use commercial
waxes and polishes.
**PREVENT
YELLOWING**

CLEAN

with a soft cloth moistened
in lukewarm soap and water.
Buff with a dry clean cloth.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

www.homestyles-furniture.com/customer-service/replacement-parts

Home Styles Customer Service: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319