


120 V~ 60 Hz 1.5 A Models: AYFSQ-F DVFSQ-F LGFSQ-F CTFSQ-F DVSCFSQ-F LXFSQ-F DLFSQ-F DVWFSQ-F TGFSQ-F	120 V~ 60 Hz 2 A Models: DVFSQ-F-HO DVSCFSQ-F-HO LXFSQ-F-HO
---	--

Important Notes: Please read before installing.

1. **CAUTION:** To avoid overheating and possible damage to other equipment, do not use to control receptacles, lighting, fluorescent lighting fixtures, or transformer-supplied appliances.
2. Do not use control with a fan and light that operate with the same switch.
3. When no "grounding means" exists within the wallbox for an existing control, the 2011 National Electrical Code® (NEC®) allows a control to be installed as a replacement as long as 1) a nonmetallic, noncombustible faceplate is used with nonmetallic attachment screws or 2) the circuit is protected by a ground fault circuit interrupter. The 2008 NEC® has the same allowances but does not contain the requirement for nonmetallic attachment screws. When installing a control according to any of these methods, cap or remove the green wire before screwing the control into the wallbox.
4. Wiring controls in a circuit which contains a ground fault circuit interrupter (GFCI) or an arc fault circuit interrupter (AFCI) may cause nuisance tripping and is not recommended.
5. Use control with a ceiling paddle fan only. Use only one ceiling paddle fan per control.
6. For new installations, wire a test switch before installing the control.
7. Set multi-speed fans to their highest setting before installing controls.
8. Use only one control in a 3-way circuit.
9. Install in accordance with all national and local electrical codes.
10. Clean control with a **soft damp cloth only**. Do not use any chemical cleaners.

Multi-Unit Installations

When combining controls in one wallbox, remove all inner side sections before wiring (see at right). Use pliers to bend each side section up and down until it breaks off. Reduction of control capacity is not required.

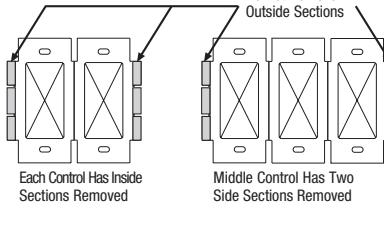

Technical Assistance

If you have questions concerning the installation or operation of this product, call the **Lutron Technical Support Center**. Please provide exact model number when calling.

U.S.A. and Canada (24 hrs/7days)

1.800.523.9466

Mexico

+1.888.235.2910

Other countries 8am – 8pm ET

+1.610.282.3800

Fax +1.610.282.6311

www.lutron.com

Limited Warranty (Valid only in U.S.A., Canada, Puerto Rico, and the Caribbean.)

Lutron will, at its option, repair or replace any unit that is defective in materials or manufacture within one year after purchase. For warranty service, return unit to place of purchase or mail to Lutron at 7200 Suter Rd., Coopersburg, PA 18036-1299, postage pre-paid.

THIS WARRANTY IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES, AND THE IMPLIED WARRANTY OF MERCHANTABILITY IS LIMITED TO ONE YEAR FROM PURCHASE. THIS WARRANTY DOES NOT COVER THE COST OF INSTALLATION, REMOVAL, OR REINSTALLATION, OR DAMAGE RESULTING FROM MISUSE, ABUSE, OR DAMAGE FROM IMPROPER WIRING OR INSTALLATION. THIS WARRANTY DOES NOT COVER INCIDENTAL OR CONSEQUENTIAL DAMAGES. LUTRON'S LIABILITY ON ANY CLAIM FOR DAMAGES ARISING OUT OF OR IN CONNECTION WITH THE MANUFACTURE, SALE, INSTALLATION, DELIVERY, OR USE OF THE UNIT SHALL NEVER EXCEED THE PURCHASE PRICE OF THE UNIT.

This warranty gives you specific legal rights, and you may have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty may last, so the above limitations may not apply to you.

Lutron Claro and Fassada are registered trademarks of Lutron Electronics Co., Inc.

NEC is a registered trademark of National Fire Protection Association, Quincy, Massachusetts.

© 2013 Lutron Electronics Co., Inc.


Lutron Electronics Co., Inc.
7200 Suter Road
Coopersburg, PA 18036-1299, U.S.A.
P/N 0301683 Rev. A 05/2013

LUTRON®

Installation For installations involving more than one control in wallbox, refer to **Multi-Unit Installations** before beginning.

1 Turn OFF Power.


- Turn power OFF at circuit breaker or remove fuse.

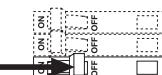


WARNING: Shock Hazard. May result in serious injury or death. **Turn off power at circuit breaker before installing the unit.**

2 Removing Wallplate and Switch.

- Remove wallplate and switch mounting screws.
- Carefully remove switch from wall (**do not remove wires**).

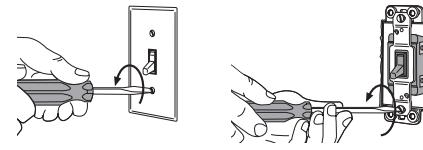

3 Identifying the Type of Circuit.

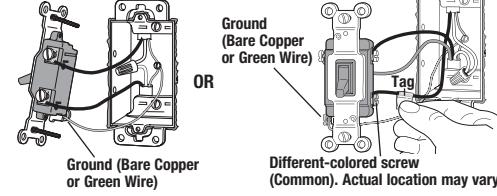


Single-Pole:
Insulated wires connected to two screws of the same color. See Step 5a when wiring.

OR

3-Way:
Insulated wires connected to three screws. One of these wires is connected to a screw of a different color (not green) or labeled COMMON. MARK or TAG this wire to identify it when wiring. See Step 5b when wiring.

4 Disconnecting Switch Wires.

Important Note: Your wall switch may have two wires attached to the same screw (see illustrations below for examples). Tape these two wires together before disconnecting. Connect both wires to the control wire in Step 5.

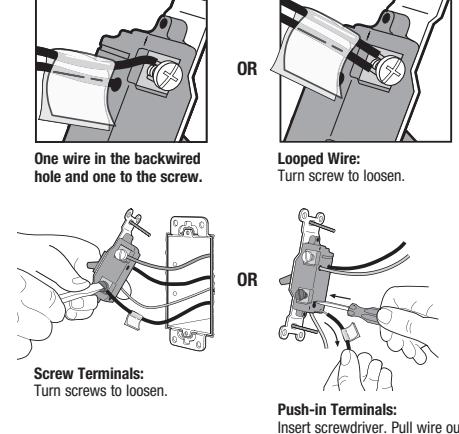

5 Wiring the Control.


5 Wiring the Control.

- For installations involving more than one control in a wallbox, refer to the section on **Multi-Unit Installations** before beginning.

Note: Depending on model number, the control may include a Lutron® Claro® or Fassada® wallplate.

A Lutron® wallplate consists of 2 parts, a faceplate (front) that snaps into an adapter plate (back).

Please detach faceplate from adapter plate before installing. This will expose control mounting holes and prevent faceplate damage during installation.

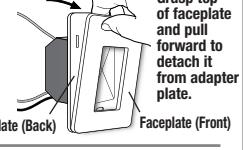

Grap top of faceplate and pull forward to detach it from adapter plate.


Adapter plate (Back)

Faceplate (Front)

Twist wire connector tight. Ensure that no bare wire is exposed.

Note: Follow recommended strip lengths and combinations for supplied wire connectors. Wire connectors are suitable for copper wire only. For aluminum wire, consult an electrician.


5a - Single-Pole Wiring

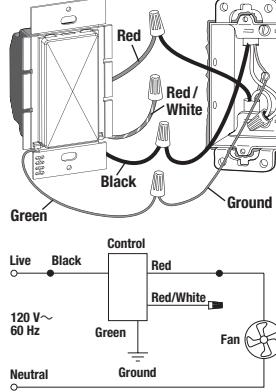

- Connect the **green** ground wire on the control to the bare copper or green ground wire in the wallbox. (See Important Note 3.)
- Connect the **black** control wire to one of the wires removed from the switch. If you had taped together two wires (see step 4), connect both wires to the **black** control wire and remove the tape.
- Connect the **red** wire on the control to the other wire removed from the switch.
- Cap off the **red/white** wire on the control. Do **NOT** connect to any other wire or ground.

OR

5b - 3-Way Wiring

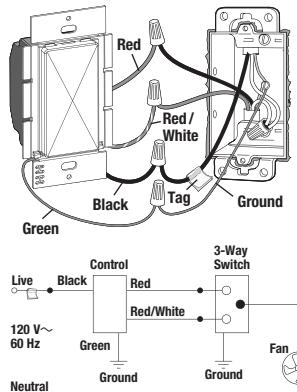

- **Note:** Only one control can be used in a 3-way circuit. Control can be used in either location.
- Connect the **green** ground wire on the control to the bare copper or green ground wire in the wallbox. (See Important Note 3.)
- Connect **black** control wire to the tagged wire removed from the switch. If you had taped together two wires (see step 4), connect both wires to the **black** control wire screw and remove the tape.
- Connect the **red** wire on the control to one of the remaining wires removed from the switch.
- Connect the **red/white** wire on the control to the remaining wire removed from the switch.
- **Note:** Control can be installed in either location.

6 Mounting Control to Wallbox.



- Form wires carefully into the wallbox, mount and align control.
- Install faceplate.

Attach standard wallplate.



Note: Do not over tighten mounting screws. Permanent damage may occur.

OR

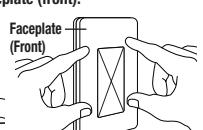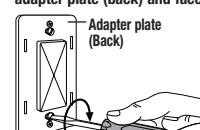

7 Turn ON Power.

Turn ON power at circuit breaker or replace fuse.

- Easy-to-follow instructions
- Instructions faciles de suivre
- Instructions fáciles de seguir
- Instructions faciles à suivre



0301683

Easy-to-follow instructions

Instructions faciles de suivre

Instructions fáciles de seguir

Instructions faciles à suivre

0301683

LUTRON®

- Easy-to-follow instructions
- Instructions faciles de suivre
- Instructions fáciles de seguir
- Instructions faciles à suivre



0301683

LUTRON®

