

# Cuisinart®

## Freeze Ease™ 1.5-Quart Pro Ice Cream Maker

ICE-150 SERIES



### Instruction Booklet

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

---

# IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:

1. **READ ALL INSTRUCTIONS BEFORE USING.**
2. **Always unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.**
3. To protect against risk of electric shock, do not place cord, plug, or base of appliance in water or any other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Avoid contact with moving parts. Keep hands, hair, and clothing as well as spatulas and other utensils away from unit during operation to reduce the risk of injury and/or damage to the appliance.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. Return the appliance to the nearest Cuisinart Repair Center for examination, repair, electrical, or mechanical adjustment.
7. The use of attachments not recommended by Cuisinart may cause fire, electric shock, or risk of injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Keep hands and utensils out of mixing bowl while in use to reduce the risk of injury to persons or to the appliance itself. **DO NOT USE SHARP OBJECTS OR UTENSILS INSIDE THE MIXING BOWL!** Sharp objects will scratch and damage the inside of the bowl. A rubber spatula or wooden spoon may be used when the appliance is in the off position.
11. This appliance is for household use. Any servicing other than cleaning and user maintenance should be done only by authorized Cuisinart® repair personnel.
12. Do not use appliance for other than intended use.
13. Do not operate your appliance in an appliance garage or under a wall cabinet. **When storing in an appliance garage, always unplug the unit from the electrical outlet.** Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.

14. Keep the appliance 4 inches from other objects to ensure motor ventilation.
15. Do not upend this product or incline it over a 45° angle.
16. Do not use the appliance near an open flame, hot plate, or stove.
17. Do not remove the paddle when the appliance is mixing.

## SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

### SPECIAL CORD SET INSTRUCTIONS

A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord. Longer extension cords may be used if care is exercised in their use.

If a long, grounded 3-prong extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and the longer cord should be arranged so that it will not drape over the countertop or tabletop, where it can be pulled on by children or animals, or tripped over.

### CAUTION

This appliance is for household use. Any servicing other than cleaning and user maintenance should be performed by an authorized service representative.

- Do not immerse base in water or other liquids.
- To reduce the risk of fire or electric shock, do not disassemble the base. **Note:** The base does not contain any user-serviceable parts.
- Repairs should be made only by authorized personnel.
- Check voltage to be sure that the voltage indicated on the nameplate agrees with your voltage.
- Never clean with scouring powders or hard implements.
- Unit should remain upright at all times. If unit is turned on its side or upside down, you will need to put it in upright position and wait 24 hours before using.

## CONTENTS

Important Safeguards . . . . .	2
Parts and Features . . . . .	3
Before First Use . . . . .	3
Operating Instructions . . . . .	4
Safety Feature . . . . .	5
Cleaning, Storage, and Maintenance . . . . .	5
Troubleshooting . . . . .	5
Recipe Tips . . . . .	6
Warranty . . . . .	7


## PARTS AND FEATURES

- 1. Transparent lid with ingredient funnel** Effortlessly add mix-ins to the bowl and check the progress of your frozen treats. 
- 2. Mixing paddle** Mix and aerate ingredients in mixing bowl to create frozen treats.  Horizontal rib
- 3. Mixing bowl** with lift-out handle. Anodized aluminum mixing bowl. No need to pre-chill or freeze bowl 
- 4. Touchpad control panel with LCD readout**
- 5. Compressor base**
- 6. Cord storage** 

## BEFORE FIRST USE

DO NOT immerse the compressor base in water. Wipe it with a moist cloth. Wash the lid, mixing bowl, and mixing paddle in warm, soapy water to remove any dust or residue from the manufacturing and shipping process. Only the mixing paddle and lid are top-shelf dishwasher safe. **DO NOT** place mixing bowl in dishwasher. **DO NOT** clean any of the parts with abrasive cleaners or hard implements. Place the base in location to be used in upright position and let it rest for 24 hours before use.

## CONTROL PANEL

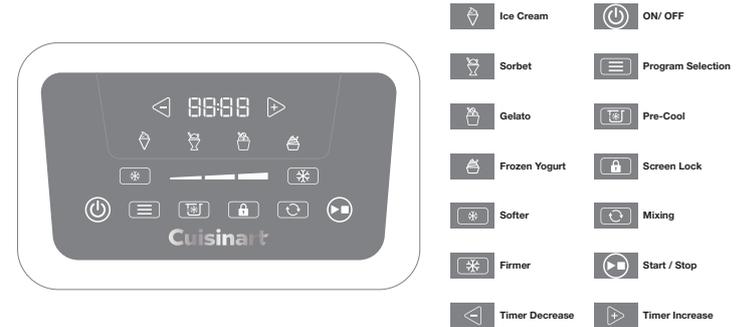

---

## OPERATING INSTRUCTIONS

**IMPORTANT:** Prior to initial use, let the unit rest upright for 24 hours before plugging it in.

1. After 24-hour rest period, plug the unit into the power outlet. The power button will illuminate, and the unit beeps to indicate it is ready to use.
2. Prepare ingredients (see page 6 for recipe tips)
3. Place mixing bowl into the base. Be sure the mixing bowl is properly aligned in base. Mixing bowl handle should line up with gaps in rim of compressor base.
4. Place the mixing paddle onto stainless steel shaft in the center of the mixing bowl.
5. Pour frozen treat base into the mixing bowl.

**Note:** If using your own recipe, be sure bases do not go over horizontal rib of the mixing paddle (See part #2 on page 3).

6. Position mixing bowl lid by lining up arrow on lid with the unlock icon on base. Turn counterclockwise to lock the lid. The mix-in ingredient funnel should be centered in the front.
7. Press the Power button  to turn the unit on. The LCD display will illuminate.
8. Select the desired preset from the screen by using the program selection button .

a. Ice Cream 

When Ice Cream is selected, the display will show "35:00" (35 minutes).

b. Sorbet 

When Sorbet is selected, the display will show "40:00" (40 minutes).

c. Gelato 

When Gelato is selected, the display will show "40:00" (40 minutes).

d. Frozen Yogurt 

When Frozen Yogurt is selected, the display will show "30:00" (30 minutes).

9. If you want to adjust the preset time, press up/down arrows  . Press and hold to scroll through quickly.
10. If you want to adjust the firmness of frozen treats, press snow buttons .

**Note:** First, select the desired preset. Then, choose the firmness level. When you press the firmness button, the display will show 'Auto.' Choose the firmness level you prefer from 1 bar being the softest to 3 bars being the firmest. Time adjustment is not necessary. With Smart Firmness Sensing technology, the ice cream machine will automatically detect the required run time and stop once the frozen treats reach the desired firmness.

Tip: For personalized recipes, start with the suggested options in the instruction book and experiment with different settings until you achieve the perfect result.

11. Once ready, press Start/Stop button  to begin the cooling/mixing cycle.
  - a. Mix-in ingredients such as chips and nuts can be added towards the end of mixing time. Once the frozen treats have begun to thicken (usually 5 minutes from end time), add the ingredients through the mix-in ingredient funnel. Mix-ins should be no larger than chocolate chips. Do not add more than ¼ cup.
  - b. **Note:** To turn the unit off at any time, press the Power  button.
    - c. 5 minutes after Start/Stop button  is pressed, the screen will be locked.
12. To turn on the screen lock feature, press and hold screen lock  for 3 seconds and the screen lock button will illuminate.
13. To turn off the screen lock feature, press and hold screen lock  for 3 seconds.
14. When one of presets is selected, the timer will count down to "00:00". When firmness is selected, the display will show 'Auto,' and the firmness bar will indicate progress. Once the selected cycle is over, the unit will beep to indicate the frozen treat is ready.
15. When the selected cycle is over, the unit will go to automatic Keep Cool feature for 10 minutes.
16. Turn the unit off by pressing the Power button and unplug. Remove the lid by turning it clockwise to unlock. Lift the lid from mixing bowl. Remove the compressor base from the base by lifting it with the handle. Remove mixing paddle from mixing bowl.
17. When finished, turn the unit off by pressing the Power button.

### To pause time and mixing:

Press the Start/Stop  button at any point in the cooling/mixing cycle to pause the time and mixing. To continue, press the Start/Stop  button again.

### To add time:

---

If frozen treat is not done or you would like to add time at any point during the selected program, press the -/+ arrow repeatedly to increase or decrease time in 5-minute increments. .

**Note:** when making consecutive batches of frozen treats, be sure to allow extra time for the compressor to adjust to cooling.

**Tip:** Unplug unit and let it rest for 10 minutes to allow the motor to cool before making a second batch.

### Keep Cool

At the end of the cooling/mixing cycle, “COOL/count-up timer” will be displayed will blink and the unit will automatically enter the Keep Cool cycle, where it will remain for 10 minutes.

**Note:** The compressor will be on, but the paddle will not rotate during the Keep Cool cycle. The display will indicate the unit is in Keep Cool mode by showing a count-up timer and COOL. At the end of Keep Cool cycle, the unit will beep and return to standby mode and the compressor will be off.

**Note:** You can turn the unit off at any time during the Keep Cool cycle.

If the frozen treat is not as firm as you desire, press + arrow to add 5 minute increments of further processing time. The unit will automatically begin a 5-minute processing cycle with the compressor and motor running. After 5 minutes, it will transition into a Keep Cool cycle for an additional 10 minutes.

### Pre-cool:

This cycle cools the mixing bowl to the optimal temperature for creating frozen treats. Do not place the mixing paddle or frozen treat base inside the mixing bowl during the Precool cycle. The default Pre-cool time is 10 minutes, and it can be adjusted by pressing -/+ buttons. Once the Pre-cool cycle is complete, insert the mixing paddle, add the frozen treat base to the mixing bowl, put the lid, and press Start to begin.

### Mixing:

This feature allows users to blend mix-ins into the base before starting the process of making frozen treats. It ensures a better mixture. The default time for Mixing is 30 minutes, but time can be adjusted by pressing -/+ arrow.

### Firmness selection:

This unit offers a frozen treat firmness selection feature, allowing you to adjust the texture of frozen treats. Simply press the snow buttons to make them softer or firmer, depending on your preference.

## SAFETY FEATURE

The Cuisinart® ICE-150 Freeze Ease™ 1.5-Quart Pro Ice Cream Maker is equipped with a safety feature that automatically stops the unit if the motor overheats. This safety system may activate under heavy loads, if the unit has been running for an excessively long period of time, or if mix-ins (nuts, etc.) are in extremely large pieces. To reset the unit, press the Power button and unplug the unit. Let the unit rest. After 10 minutes, you may turn the unit on again and continue making the frozen treat.

## CLEANING, STORAGE, AND MAINTENANCE

### Cleaning

Clean the mixing bowl, mixing paddle, and lid in warm soapy water. Mixing paddle and lid are top-shelf dishwasher safe. **DO NOT PUT MIXING BOWL IN THE DISHWASHER. DO NOT CLEAN WITH ABRASIVE CLEANSERS OR IMPLEMENTS.** Wipe the unit base clean with damp cloth. Dry all parts thoroughly.

### Storage

Be sure to store your unit in an upright position. Do not store frozen desserts in the mixing bowl in the freezer for more than 30 minutes at a time. Transfer frozen treats to a freezer-safe, airtight container for longer storage in the freezer.

### Maintenance

Any other servicing should be performed by an authorized service representative.

## TROUBLESHOOTING

PROBLEM	SOLUTION
Screen displays "EEEE," continuous beeping, and the unit is stopped.	Power off and unplug the unit.
	Contact Consumer Service.
Unit turns off sooner than the time set	The overload safety feature has been activated. Let unit rest for a few minutes before continuing making the frozen dessert.
	If not the reason above, unplug the unit and let it rest for 2 hours. Power unit on and begin making your frozen dessert.
At any time during the cooling/mixing cycle, the unit beeps continuously for 30 seconds.	Power off and unplug the unit. Let it rest for 2 hours. Power unit on and begin making your frozen dessert. If this happens again, let the unit rest for 24 hours. If unit continues to beep after you have tried the above procedure, contact Consumer Service.
Mixing bowl is difficult to lift.	Wait 2 minutes and lift the mixing bowl.
	Make sure mixing bowl and base are dry before making frozen dessert.
Paddle slippage after several batches of ice cream.	Watch for condensation on the outside of mixing bowl. Clear off water or ice from mixing bowl and base.
	Make sure mixing bowl and base are dry and clean before making next batch.

## RECIPE TIPS

The recipes that follow offer you a variety of options for delicious frozen desserts. You may create or use recipes of your own, as long as bases do not go over the top dasher on mixing paddle.

### Recipe Tips

- Gelato and sorbet bases should be no more than 1 quart (should not go above the highest dasher on the paddle).
- Ice cream bases should be no more than 5 cups (should not go above the highest dasher on the paddle).
- For optimum consistency, chill all mixtures for a minimum of 2 hours, or up to 3 days. Always rewhisk the mixture after chilling to be sure all ingredients are well combined.

While chilling the mixture is not required, this step will prevent any large "ice" or "fat" crystals from forming during the freezing process as resting it in a chilled environment helps bind the ingredients together.

- Frozen desserts from the Cuisinart® Freeze Ease™ 1.5-Quart Pro Ice Cream Maker use pure, fresh ingredients. Because of this, the desserts do not have the same characteristics as commercially prepared frozen desserts. If you desire a firmer consistency, transfer the dessert to an airtight container and store in the freezer until desired consistency is reached, usually two or more hours. Remove from freezer about 15 minutes before serving.
- Some recipes use cooked ingredients. For best results, the mixture should be chilled overnight before using. Or chill the recipe over an ice bath, until it is completely cooled, before using. To make an ice bath, fill a large container with ice and water. Place saucepan or other container into the ice bath. Cool the cooked ingredients completely.
- You may substitute lower-fat creams (e.g., half-and-half) and/or milk (reduced fat or low fat) for heavy cream and whole milk used in many recipes. However, keep in mind that the higher the fat content, the richer and creamier the result. Using lower-fat substitutes may change the taste, consistency, and texture of the dessert. When substituting, be sure to use the same volume of the substitute as you would have used of the original item. For example, if the recipe calls for 2 cups of cream, use a total of 2 cups of the substitute (such as 1 cup cream, 1 cup whole milk). See our recipes starting on page 8 for more tips.
- You may substitute other sweeteners for sugar. Stir the mixture thoroughly to dissolve the sweetener. See our Sugar-Free Vanilla Ice Cream recipe on page 14 as a guide.
- When making sorbet, be sure to test the ripeness and sweetness of the fruit before you use it. The freezing process reduces the sweetness of the fruit so that it will taste less sweet than the recipe mixture. If the fruit tastes tart, add additional sugar to the recipe. If the fruit is very ripe or sweet, reduce the amount of sugar in the recipe. Use our sorbet recipes on page 22 as a guide.
- Make sure the mixing paddle and lid are in place before turning on machine.

## ADDING INGREDIENTS

- Ingredients such as chips and nuts should be added about 5 minutes before the freezing process is complete. You want it to still be soft enough to be able to fully incorporate into the frozen mixture.
- To add a chocolate swirl to ice cream, gelato, or frozen yogurt, drizzle in hot fudge or melted chocolate. The melted chocolate will harden once it makes contact with the freezing base so add it in a slow drizzle to ensure that it does not clump.

---

# Limited Warranty

Subject to the exclusions and limitations contained herein, Conair LLC dba Cuisinart ("Cuisinart") warrants that the Cuisinart® Freeze Ease™ 1.5-Quart Pro Ice Cream Maker ("Product") will be free from material defects in materials and workmanship under normal home use conditions for a period of three (3) years beginning on the date the Product was purchased in its original, sealed packaging, unless otherwise specified in this Limited Warranty. This Limited Warranty is only for U.S. consumers (defined herein as purchasers at retail for personal, family, or household use) who originally purchase the Product from Cuisinart or an authorized Cuisinart® reseller (if you are unsure whether a retailer or other point of sale is an authorized or unauthorized Cuisinart reseller, contact Cuisinart).

## This Limited Warranty does NOT cover:

- Normal wear and tear;
- Any Product purchased by commercial purchasers or for commercial or nonhousehold uses;
- Accessories, parts, or software added to the Product after the system is shipped from Cuisinart;
- Any costs associated with the replacement or repair of the Product, including labor, installation, or other costs incurred by you without prior Cuisinart approval;
- Damage to the Product, defective conditions, or nonconformities due to: (1) external causes, including shipping, accidents, problems with electrical power (Product designed only for use with 120-volt outlets), abnormal conditions (such as mechanical or environmental); (2) usage not in accordance with Product instructions; (3) misuse, neglect, unauthorized alteration, unauthorized repair; and (4) acts of god or other events beyond Cuisinart's control;
- Though necessary repairs and maintenance might be performed by any company, damage caused by you or any nonauthorized third party, may void, this Limited Warranty;
- Damage caused by accessories or replacement parts not specifically authorized by Cuisinart, may void, this Limited Warranty; and

- Any Product where the original Product identification markings (trademark or serial number) have been removed, altered, or obliterated from the Product.

It is recommended that you visit the website, <https://www.cuisinart.com/register-your-product.html>, for a fast, efficient way to complete your product registration. However, product registration does not eliminate the need for the consumer to maintain the original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this Limited Warranty will be the date of manufacture.

## Hassle-free warranty

If the Product that is the subject of this Limited Warranty fails during the warranty period for reasons covered by this Limited Warranty, Cuisinart will, at its option, repair the Product, replace the Product with another identical or reasonably equivalent product, or if Cuisinart is unable to repair or replace the Product, refund the purchase price, less the amount directly attributable to the consumer's prior usage of the Product. To obtain a return shipping label, email us at <https://www.cuisinart.com/customer-care/product-assistance/product-inquiry>, or call our Consumer Service Center toll-free at **1-800-726-0190** to speak with a representative.

Upon receipt of the Product, Cuisinart will inspect the Product and, if required under this Limited Warranty, attempt to repair, replace, or refund the Product within thirty (30) days. However, there may be delays beyond Cuisinart's control, in which case that time period may be extended as reasonably necessary.

**IMPORTANT:** If the nonconforming Product is to be serviced by someone other than Cuisinart's Authorized Service Center, please remind the servicer to call our Consumer Service Center at 1-800-726-0190 to ensure that the problem is properly diagnosed, the Product is serviced with the correct parts, and the product is still under warranty.

## California Residents Only

The three (3) year Limited Warranty period begins on the date the Product was delivered, which may be different than the date the Product was purchased. California residents also have the option of obtaining the benefits of this Limited Warranty by bringing the Product to (A) the store where it was purchased or (B) another retail store that sells Cuisinart products of the same type. The retail store shall then, according to its preference, either repair the

---

Product, refer the consumer to an independent repair facility, replace the Product with another identical or reasonably equivalent product, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the Product. California residents may also, according to their preference, return nonconforming products directly to Cuisinart for repair or, if necessary, replacement with another identical or reasonably equivalent product by calling our Consumer Service Center toll-free at **1-800-726-0190**. Cuisinart will be responsible for the cost of such repair, replacement, and/or shipping and handling for such nonconforming products under warranty.

**THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE OR BY JURISDICTION. IN THE EVENT THIS LIMITED WARRANTY IS BREACHED, YOU MAY HAVE CLAIMS FOR REPLACEMENT, DAMAGES, OR OTHER PENALTIES**

**LIMITATIONS OF LIABILITY/ADDITIONAL LIMITATIONS AND EXCLUSIONS**

ALL EXPRESS AND IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE LIMITED WARRANTY PERIOD. NO WARRANTIES APPLY AFTER THAT PERIOD. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THIS LIMITATION MAY NOT APPLY TO YOU. CUISINART'S RESPONSIBILITY UNDER THIS OR ANY OTHER WARRANTY, IMPLIED OR EXPRESS, IS LIMITED TO REPAIR, REPLACEMENT, OR REFUND, AS SET FORTH ABOVE. THESE REMEDIES ARE THE SOLE AND EXCLUSIVE REMEDIES FOR ANY BREACH OF WARRANTY. TO THE MAXIMUM EXTENT PERMITTED BY LAW, CUISINART IS NOT RESPONSIBLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR UNDER ANY OTHER LEGAL THEORY (INCLUDING, BUT NOT LIMITED TO, LOST PROFITS, DOWNTIME, GOODWILL, DAMAGE TO OR REPLACEMENT OF EQUIPMENT AND PROPERTY, AND ANY COSTS OF RECOVERING, REPROGRAMMING, OR REPRODUCING ANY PROGRAM OR DATA STORED IN OR USED WITH A SYSTEM CONTAINING THE PRODUCT), EVEN IF CUISINART HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. ALL EXPRESS AND IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE LIMITED WARRANTY PERIOD. NO WARRANTIES APPLY AFTER THAT PERIOD. SOME STATES (OR JURISDICTIONS) DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THIS LIMITATION MAY NOT APPLY TO YOU.

**This Limited Warranty is issued by:**

**Conair LLC  
1 Cummings Point Road  
Stamford, CT 06902  
1-800-726-0190**

©2025 Cuisinart  
Glendale, AZ 85307

Printed in China

25CE200417

18816